


Navigation System


Forced Starting of Display

1. Pull back the front corner of the right trunk side trim..
2. Connect the SCS service connector (A) to the navigation service check connector (B).

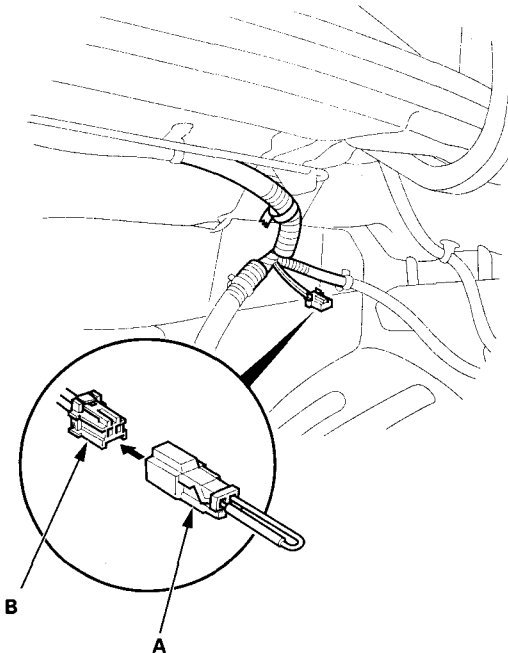

3. Check that the diagnosis menu for the picture diagnosis starts up and then changes to the system link menu.
4. If the display does not turn on, turn the ignition switch OFF, press and hold the A/C-INFO button (A), push and hold the joystick (B) up, then turn the ignition switch to ACC (I).


NOTE: If the display fails to light, or the system link screen is not displayed, refer to No picture is shown on the display.

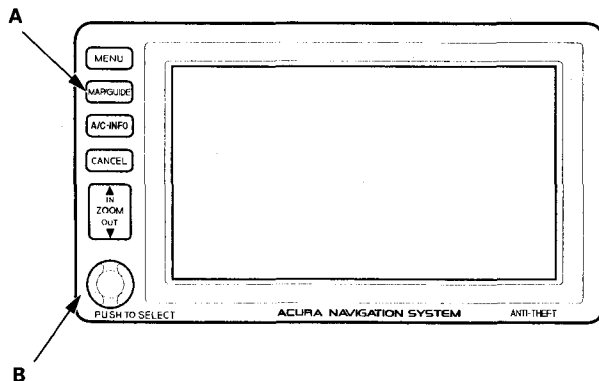

DVD-ROM Replacement

NOTE: When the DVD-ROM is re-inserted or replaced, a map match must be done (see page 23-5).

1. Turn the ignition switch ON (II).
2. Open the front cover (A) of the navigation unit.

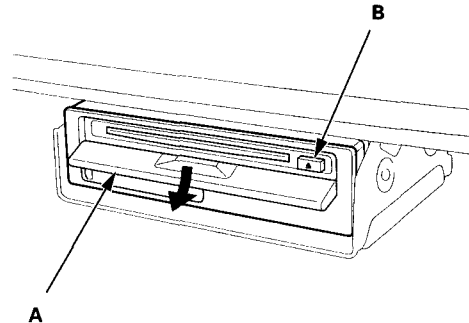

3. Press the EJECT button (B).
4. Remove the DVD-ROM.
5. Insert the new DVD-ROM.
6. Close the front cover. Do not turn the ignition switch OFF, until data is down loaded to navigation unit.

NOTE: After servicing, the front cover must be closed. If you start up the navigation system with the front cover open, the display will indicate.

"Navigation unit door is open or No DVD Disk installed. Please check system".