

Timing Belt and Balancer Belt

Illustrated Index

NOTE:

- Refer to page 6-10 for how to position the crankshaft and pulley before installing the belt.
- Mark the direction of rotation on the belt before removing it.
- Do not use the upper covers and lower cover to store removed items.
- Clean the upper covers and lower cover before installing them.
- Replace the camshaft seals and crankshaft seals if there is oil leakage.
- Refer to page 6-3 before installing the timing belt.

