





Rocker Arm Assembly


Disassembly/Reassembly

NOTE:

- Refer to page 6-26 for rocker arm assembly removal.
- Identify parts as they are removed to ensure reinstallation in original locations.
- Inspect rocker shafts and rocker arms (see page 6-28).
- Rocker arms must be installed in the same position if reused.
- When removing or installing the rocker arm assembly, do not remove the camshaft holder bolts. The bolts will keep the holders, springs and rocker arms on the shaft.

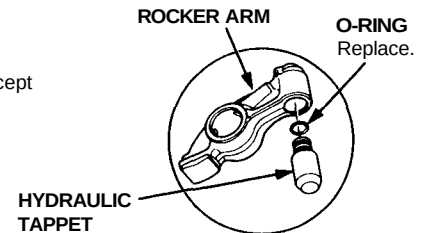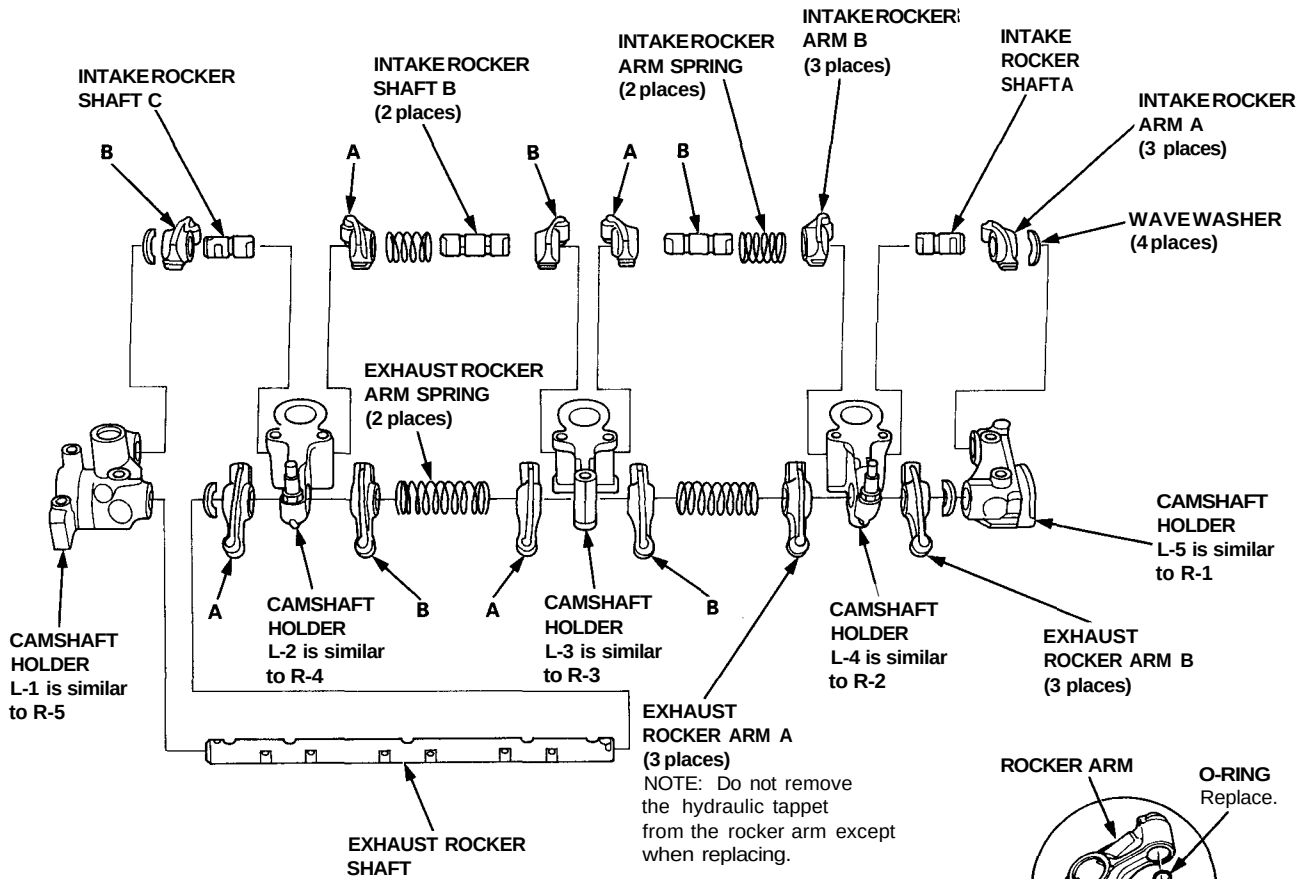


INTAKE ROCKER ARM A

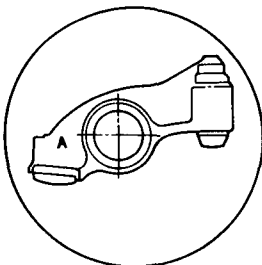


Letter "A" is stamped on rocker arm.

INTAKE ROCKER ARM B

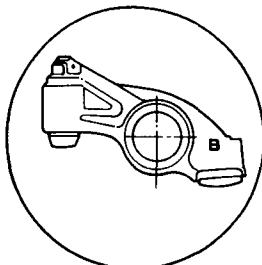


Letter "B" is stamped on rocker arm.

EXHAUST ROCKER ARM A

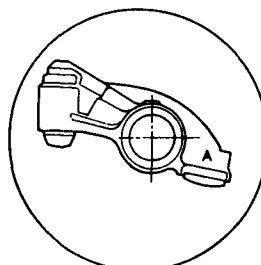

Letter "A" is stamped on rocker arm.

EXHAUST ROCKER ARM B

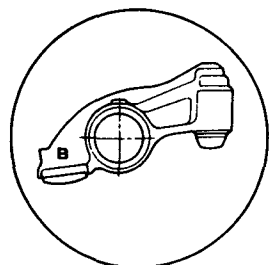

Letter "B" is stamped on rocker arm.

L: Left
R: Right