



Illustrated Index

NOTE:

- Use new O-rings when reassembling.
- Apply oil to O-rings before installation.
- Use liquid gasket, Part No. 08718 - 0001 or 08718 - 0003.
- Clean the oil control orifice before installing.
- Remove the balancer shaft (see page 7-3).

