

Radiator

Illustrated Index



WARNING System is under high pressure when the engine is hot. To avoid danger of releasing scalding coolant, remove the cap only when the engine is cool.

Total Cooling System Capacity (Including heater and reservoir)


8.6 l (9.1 US qt, 7.6 Imp qt)

Reservoir capacity: 0.65 l (0.69 US qt, 0.57 Imp qt)

CAUTION: When pouring engine coolant, be sure to shut the relay box lid and not to spill coolant on the electrical parts or the painted portion. If any coolant spills, rinse it off immediately.

NOTE:

- Check all cooling system hoses for damage, leaks or deterioration and replace if necessary.
- Check all hose clamps and retighten if necessary.
- Use new O-rings when reassembling.

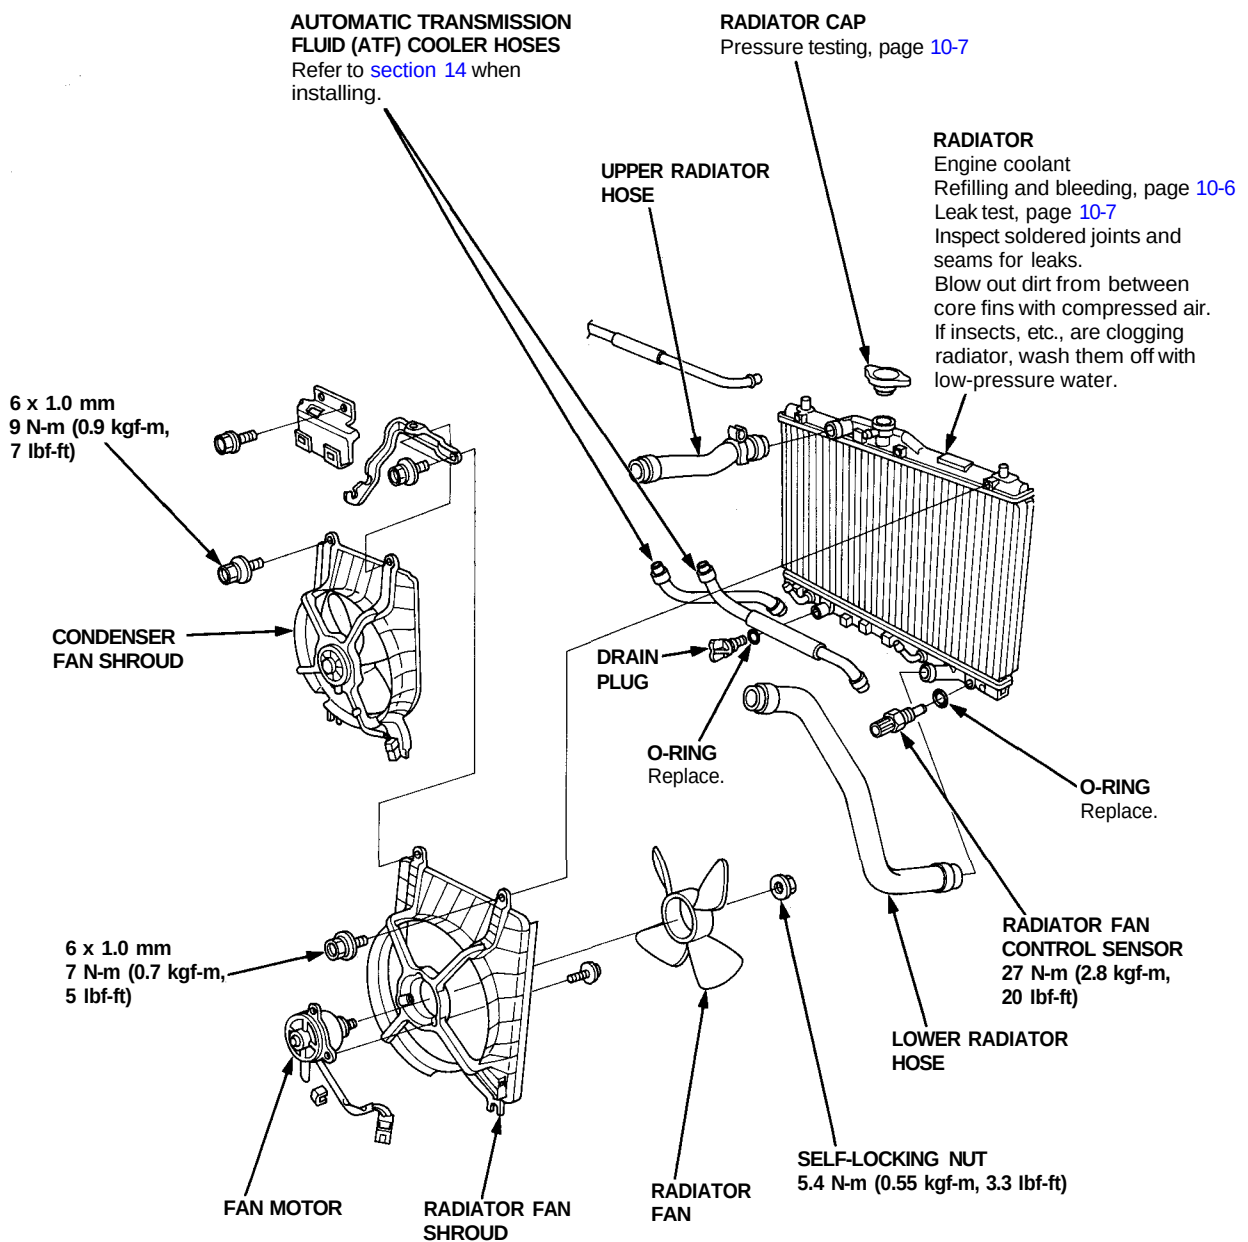

**Engine Hose Connections:**