




Component Locations

Index

For Troubleshooting of DTC related components, see chart on page [11-53](#).

'96 - 99 models:

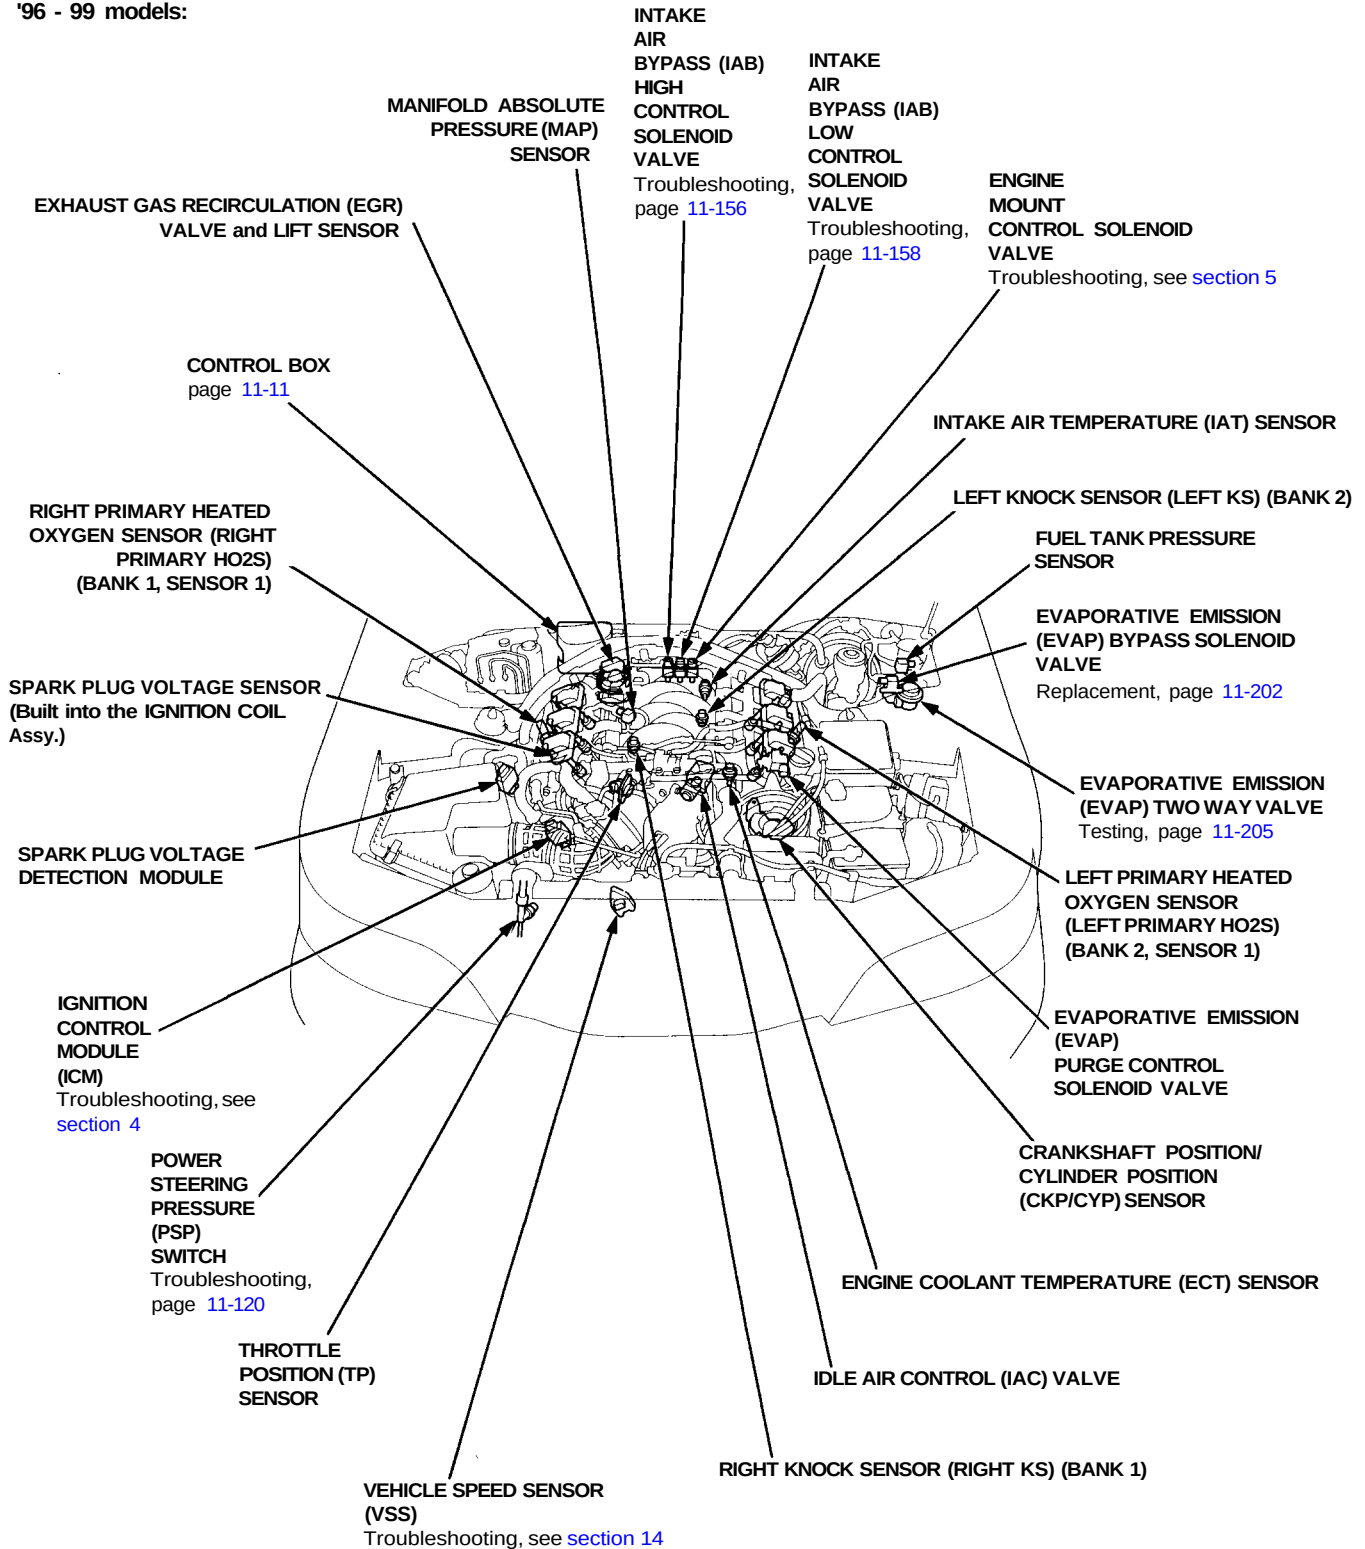


(cont'd)

Component Locations

Index(cont'd)

For Troubleshooting of DTC related components, see chart on page [11-53](#) ('00-'03 models) [11-41](#) ('04 model).


'00 - 04 models:

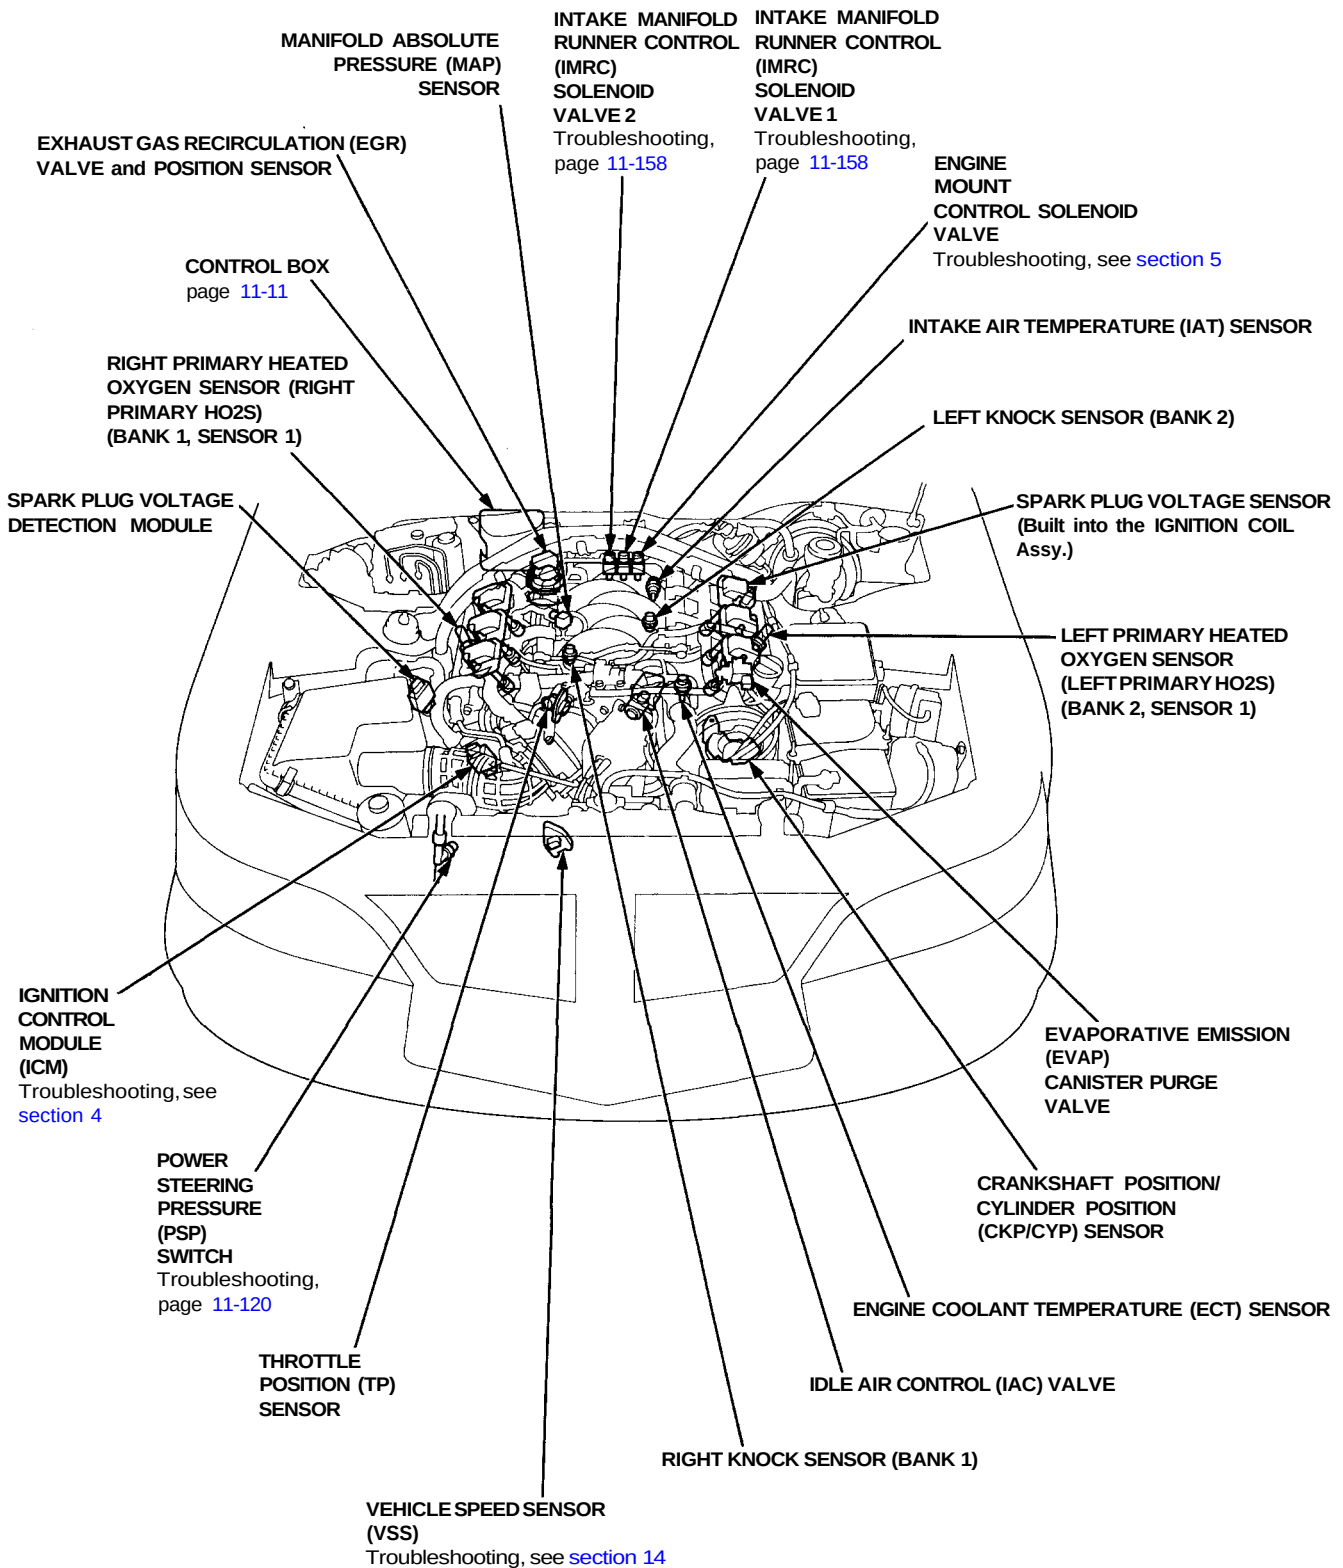



For Troubleshooting of DTC related components, see chart on page [11-53](#) ('00-'03 models) [11-41](#) ('04 model).

SECONDARY HEATED OXYGEN SENSOR (SECONDARY HO2S) (SENSOR 2)

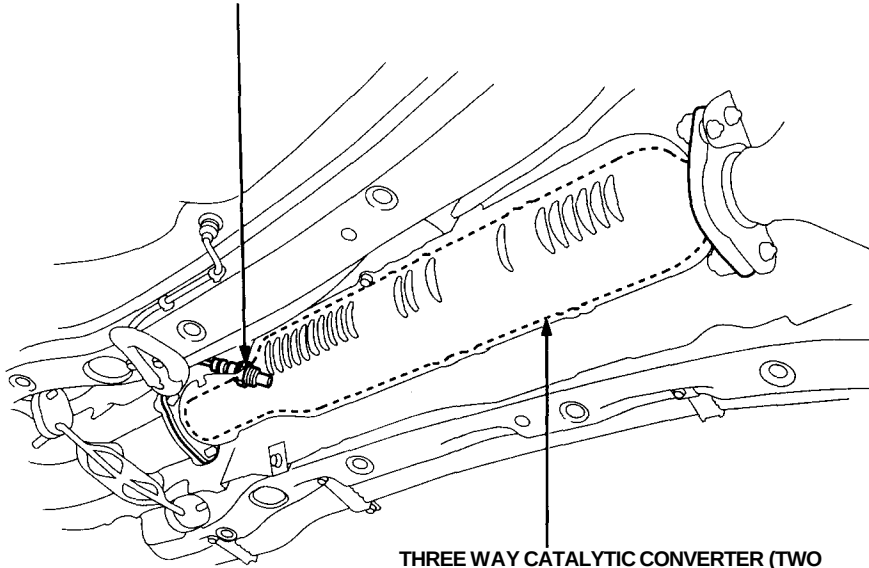


THREE WAY CATALYTIC CONVERTER (TWO)

**PGM-FI
MAIN RELAY**

Relay Testing, page [11-146](#)
Troubleshooting, page [11-147](#)

SERVICE CHECK CONNECTOR

Troubleshooting procedures, page [11-40](#)

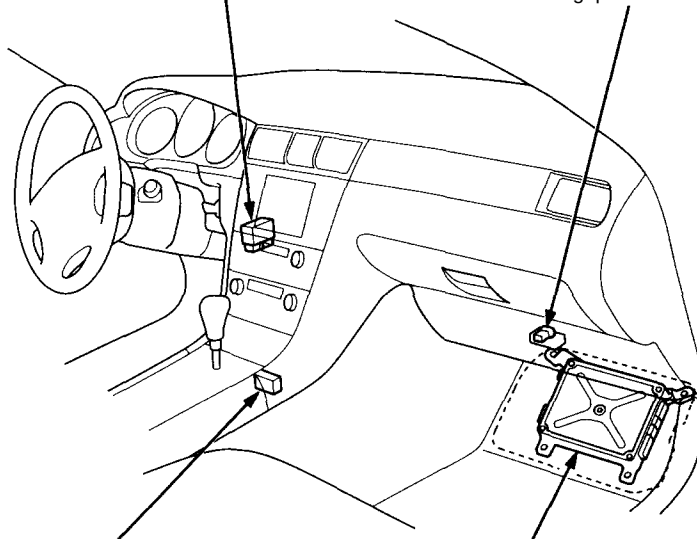

DATA LINK CONNECTOR (DLC)
Troubleshooting
procedures, page [11-40](#)


**POWERTRAIN CONTROL MODULE
(PCM)**
Troubleshooting, page [11-63](#)

(cont'd)


Component Locations

Index(cont'd)

For Troubleshooting of DTC related components, see chart on page [11-53](#) ('00-'03 models) [11-41](#) ('04 model).

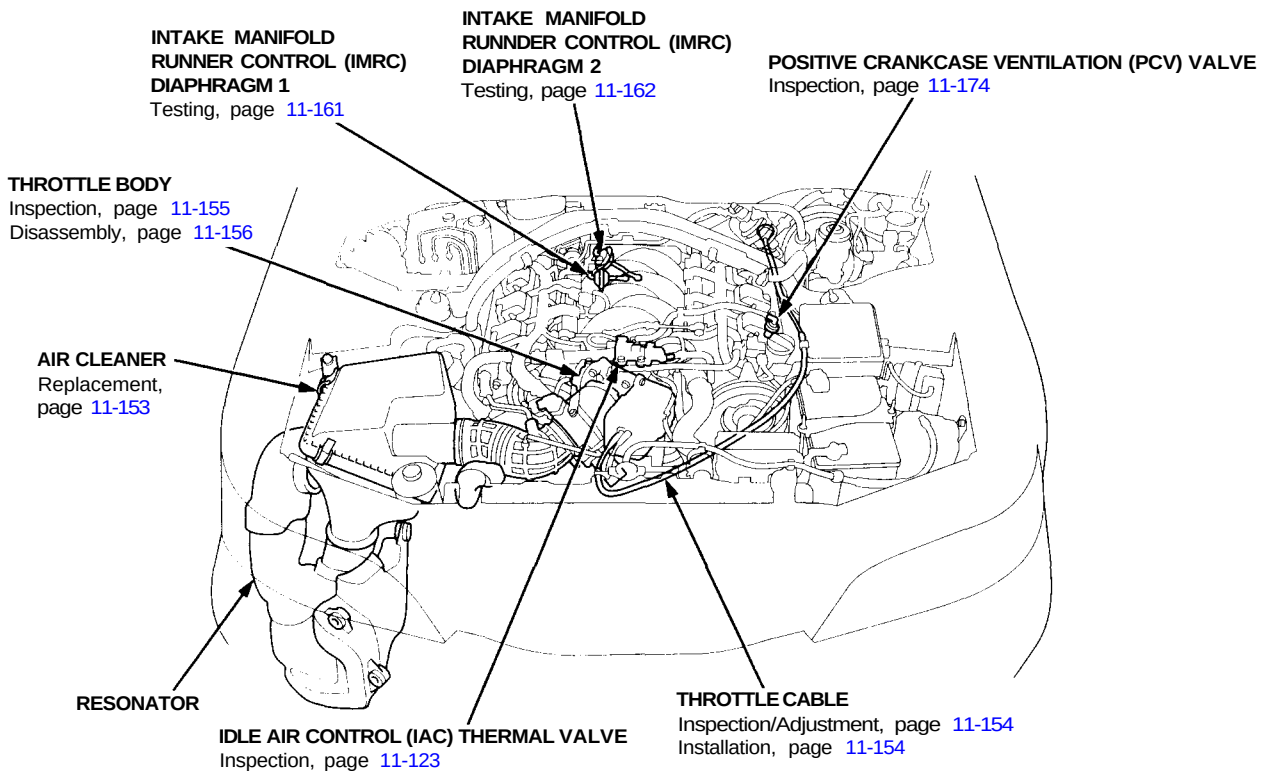

FUEL PUMP RESISTOR
Troubleshooting, page [11-141](#)

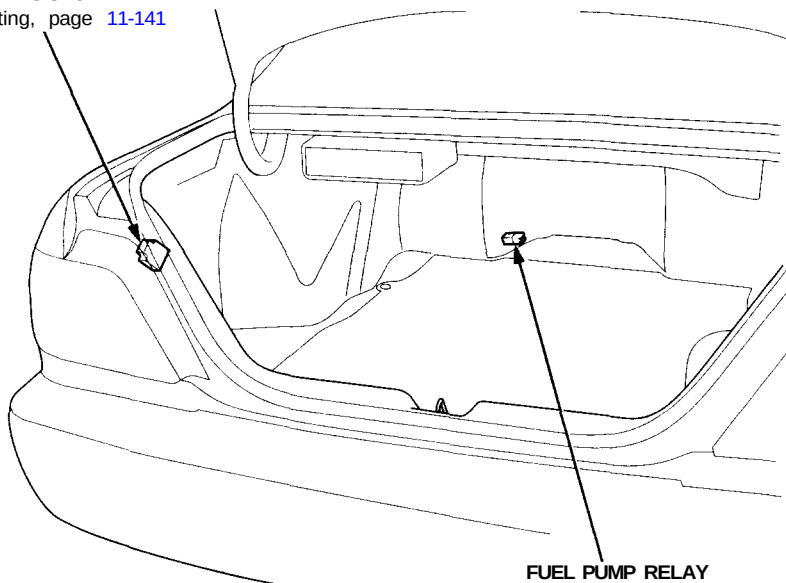


FUEL PUMP RELAY
Troubleshooting, page [11-139](#)



For Troubleshooting of DTC related components, see chart on page [11-53](#).

'96-99 models:

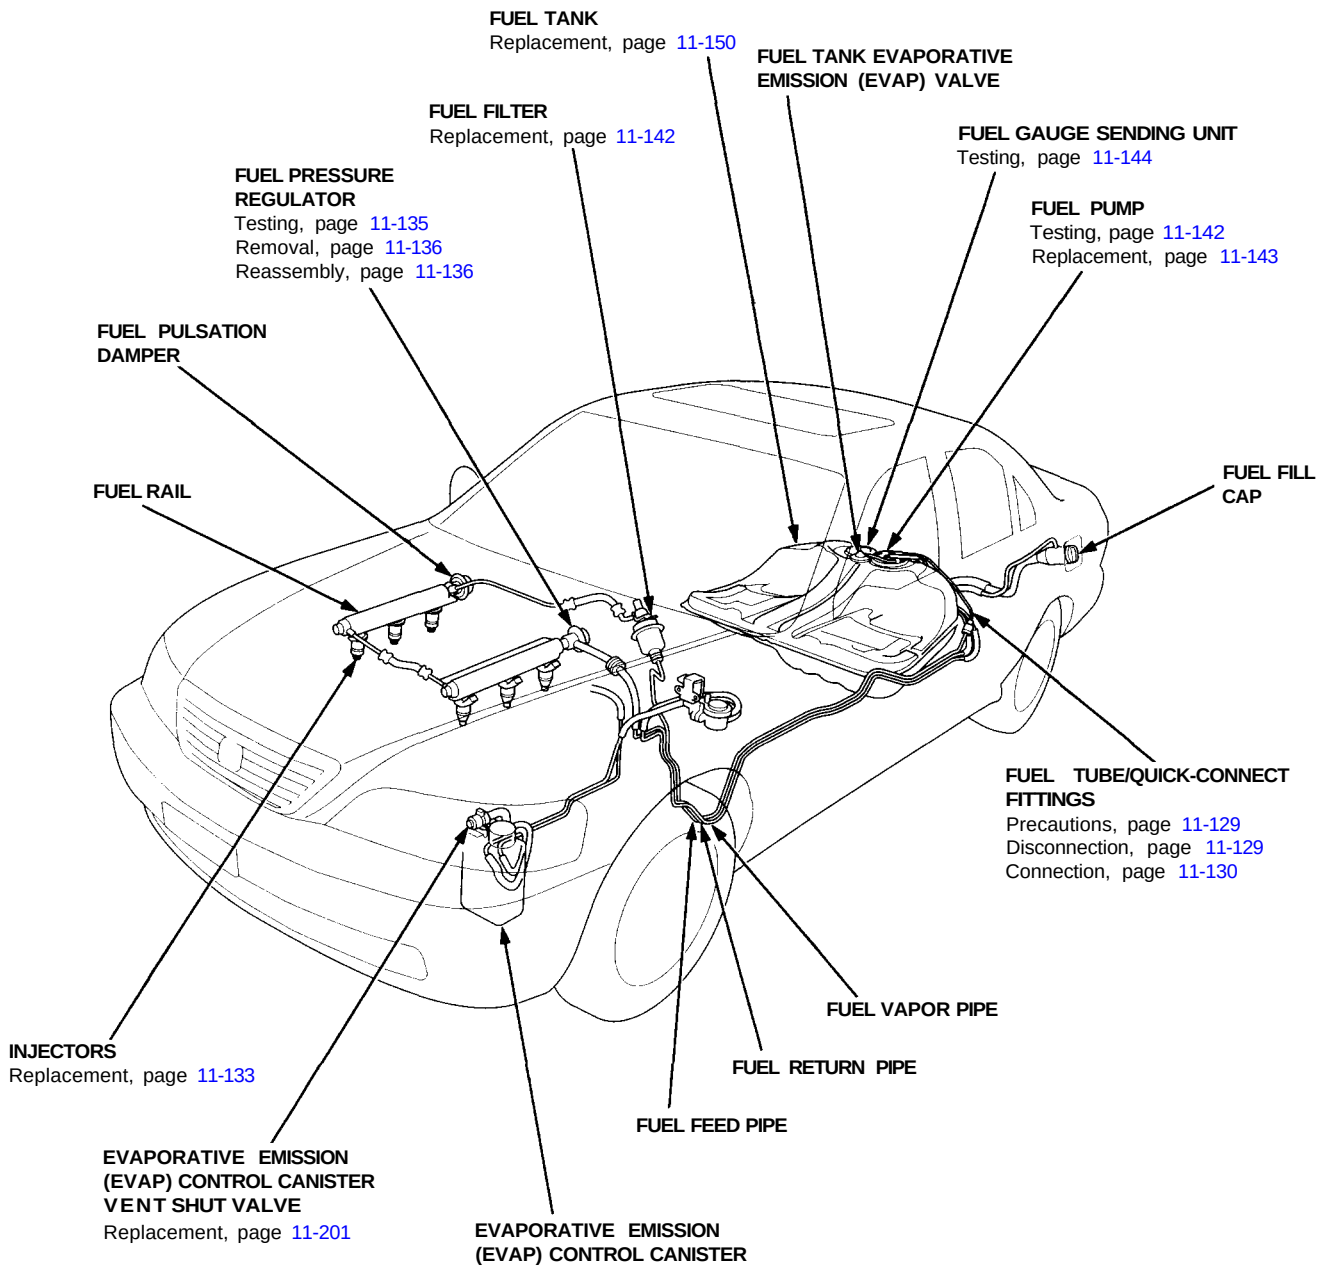

(cont'd)

Component Locations

Index (cont'd)

For Troubleshooting of DTC related components, see chart on page [11-53](#) ('00-'03 models) [11-41](#) ('04 model).

'00 - '04 models:

