


System Description

Electrical Connections

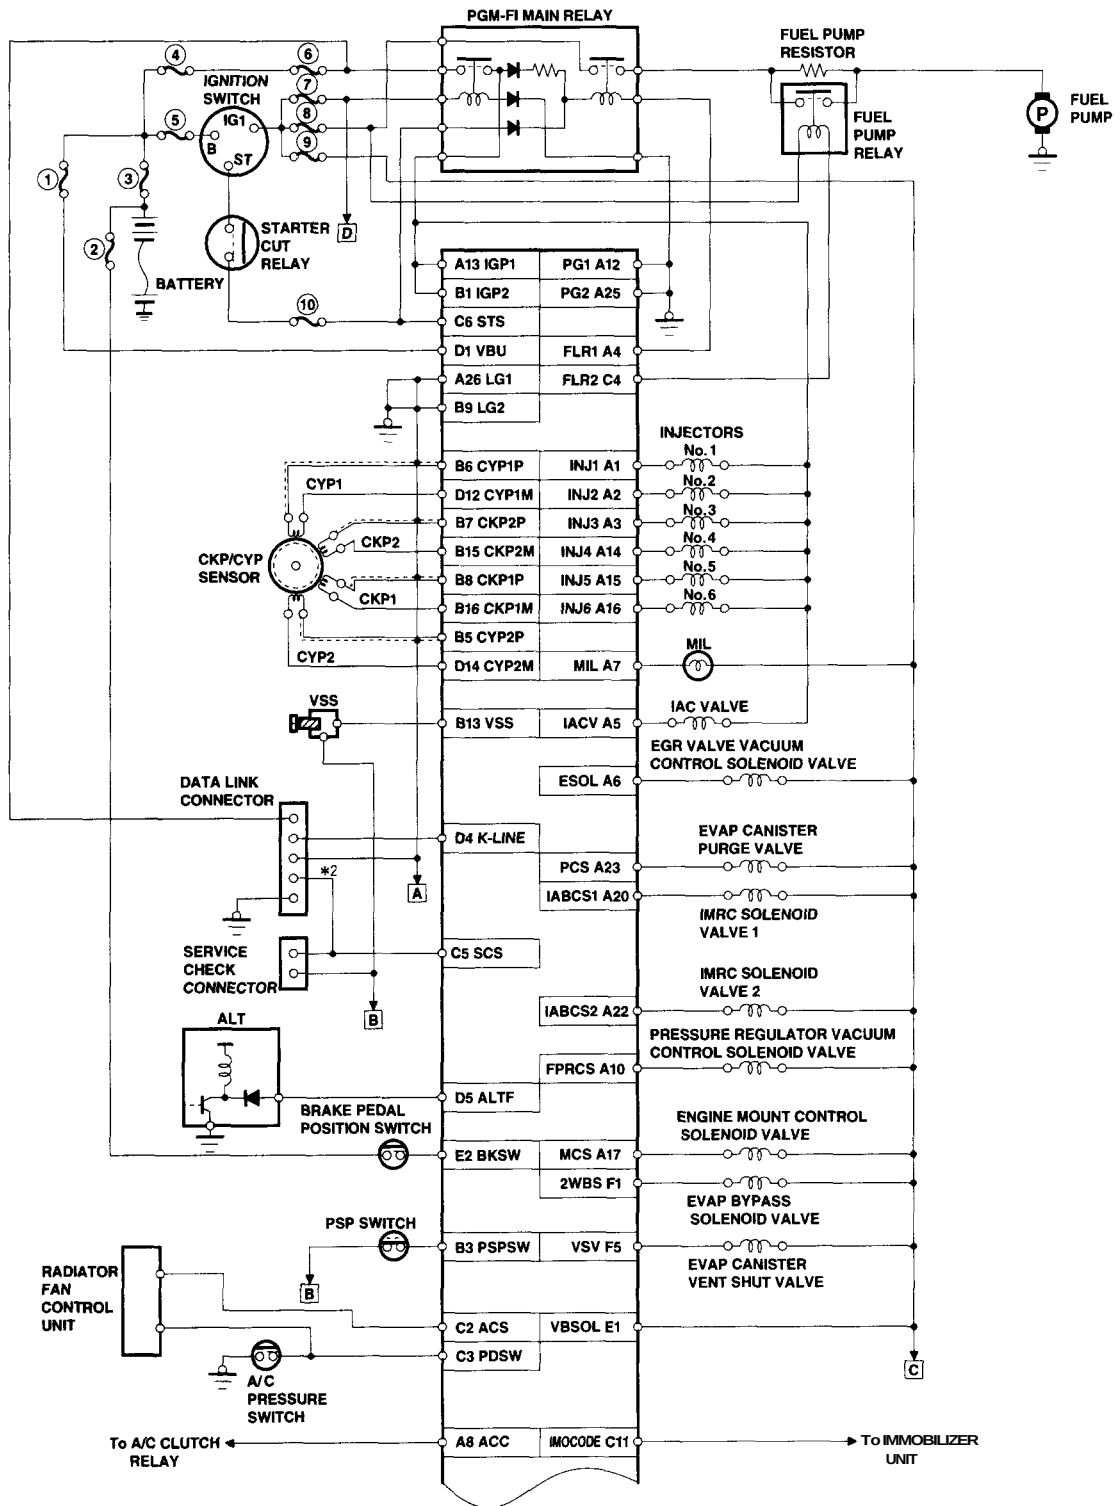


FUSES

- | | |
|---------------------------|-------------------------------|
| ① BACK UP (RADIO) (7.5A)* | ⑥ No. 6 ECU(PCM) (20A) |
| ② STOP HORN (15A)* | ⑦ No. 25 IG COIL (30A) |
| ③ BATTERY (120A)* | ⑧ No. 22 FUEL PUMP (20A) |
| ④ FUSE BOX (50A)* | ⑨ No. 20 ECU(PCM) (20A) |
| ⑤ IG. SW(50A)* | ⑩ No.14 STARTER SIGNAL (7.5A) |

* : in the under-hood fuse/relay box



*2: '00-01 models

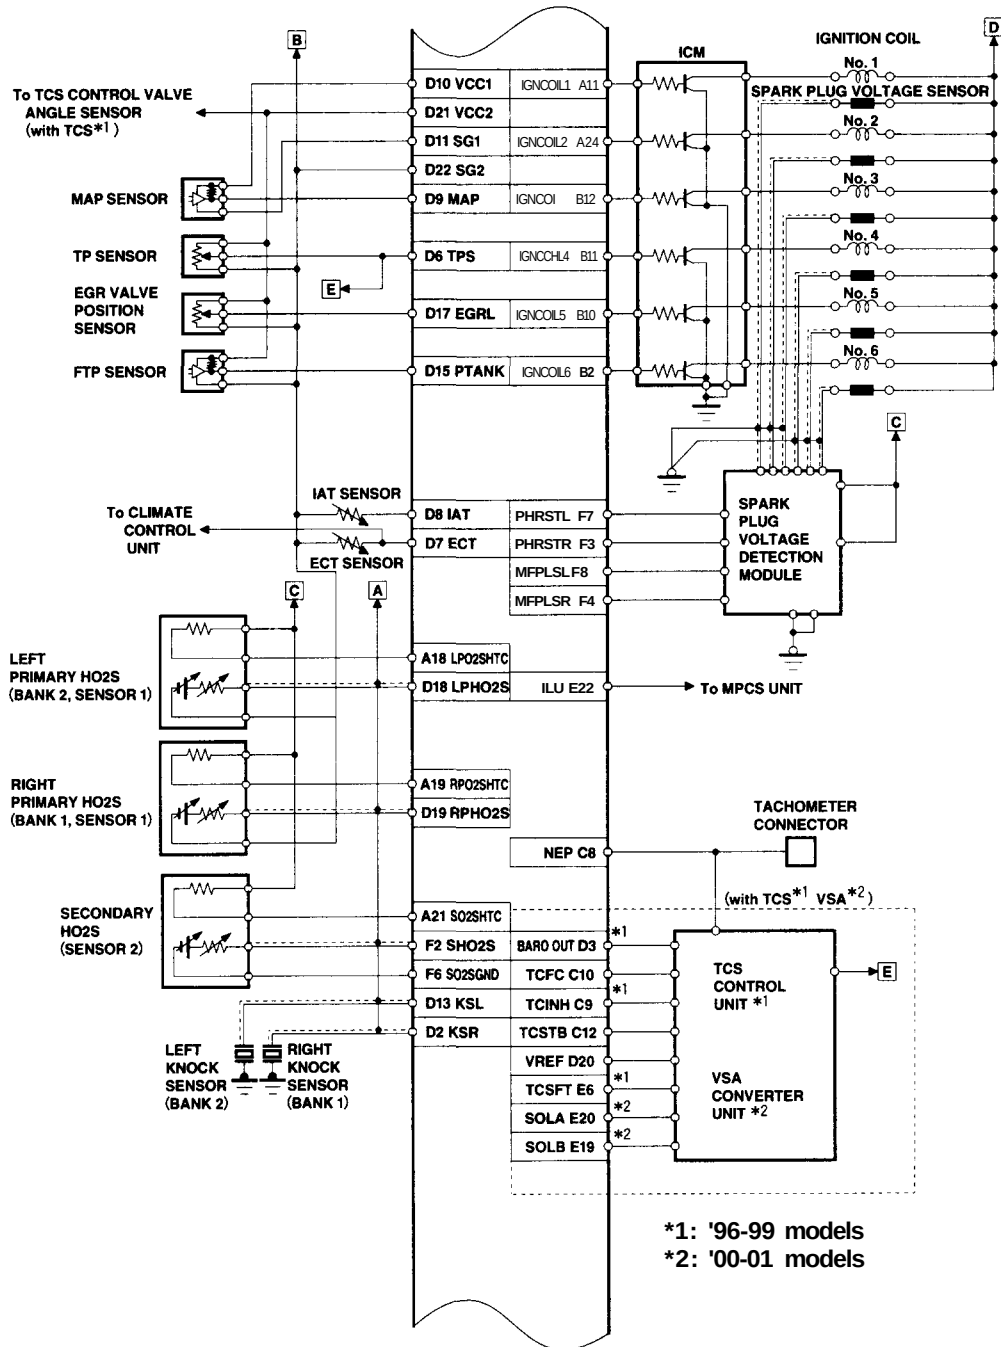


(cont'd)

System Description

Electrical Connections (cont'd)

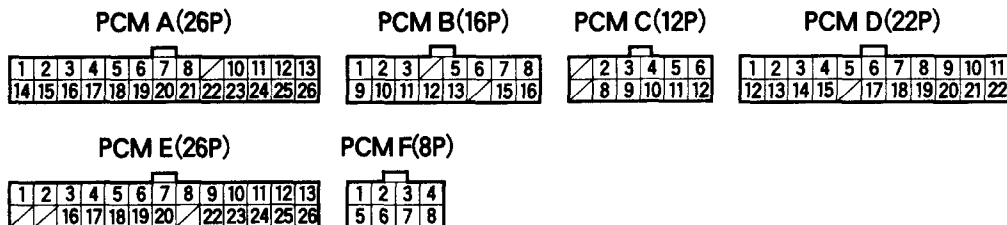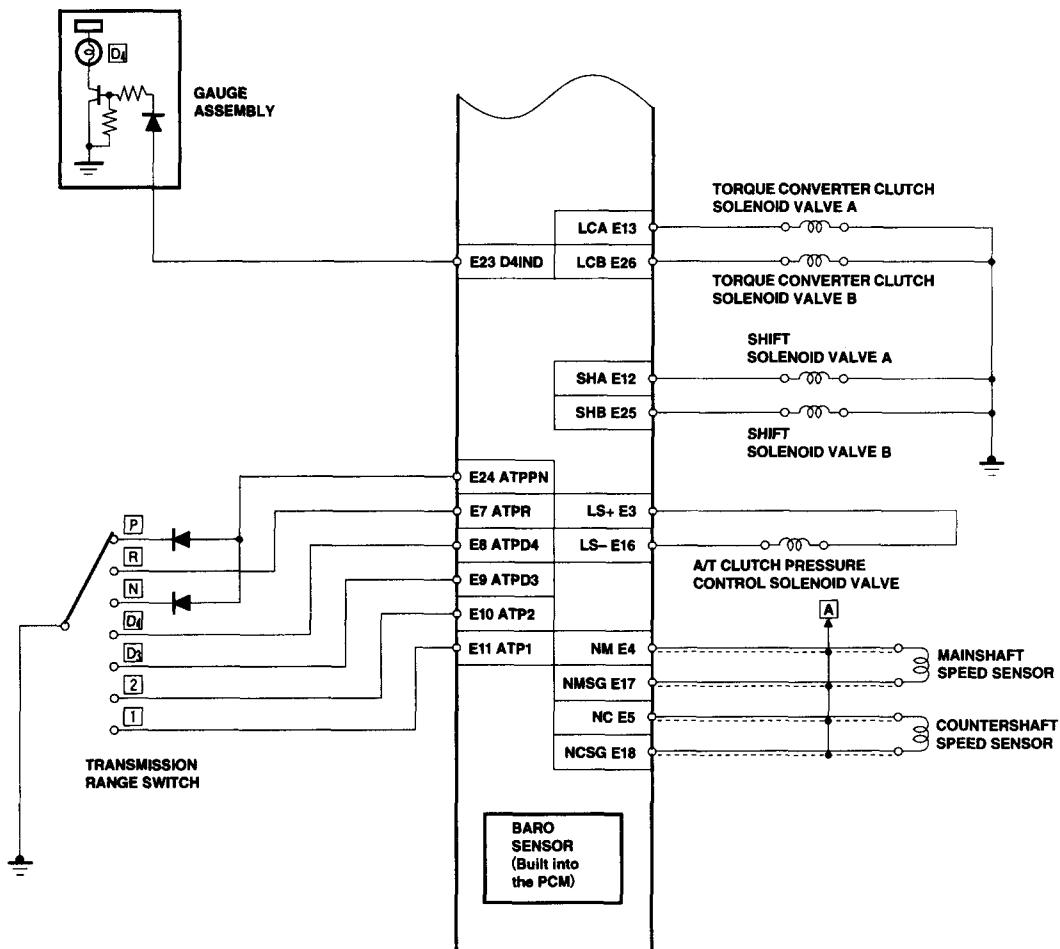


TERMINAL LOCATIONS

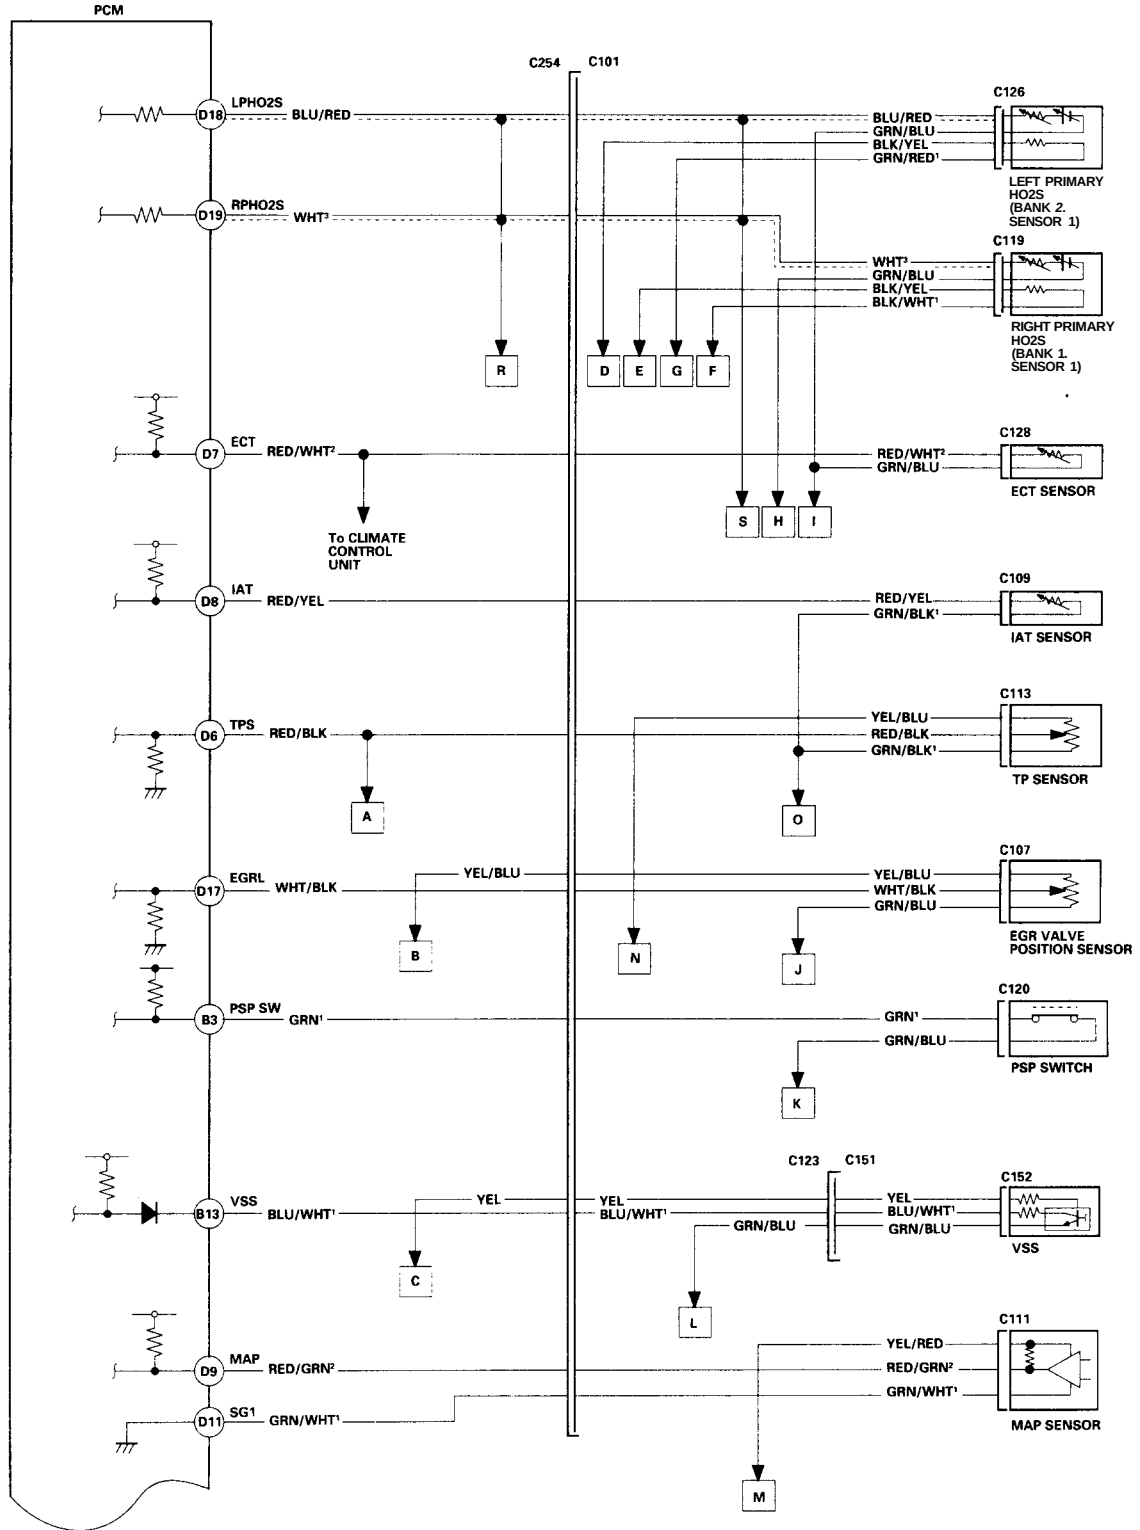


(cont'd)

System Description

Electrical Connections (cont'd)

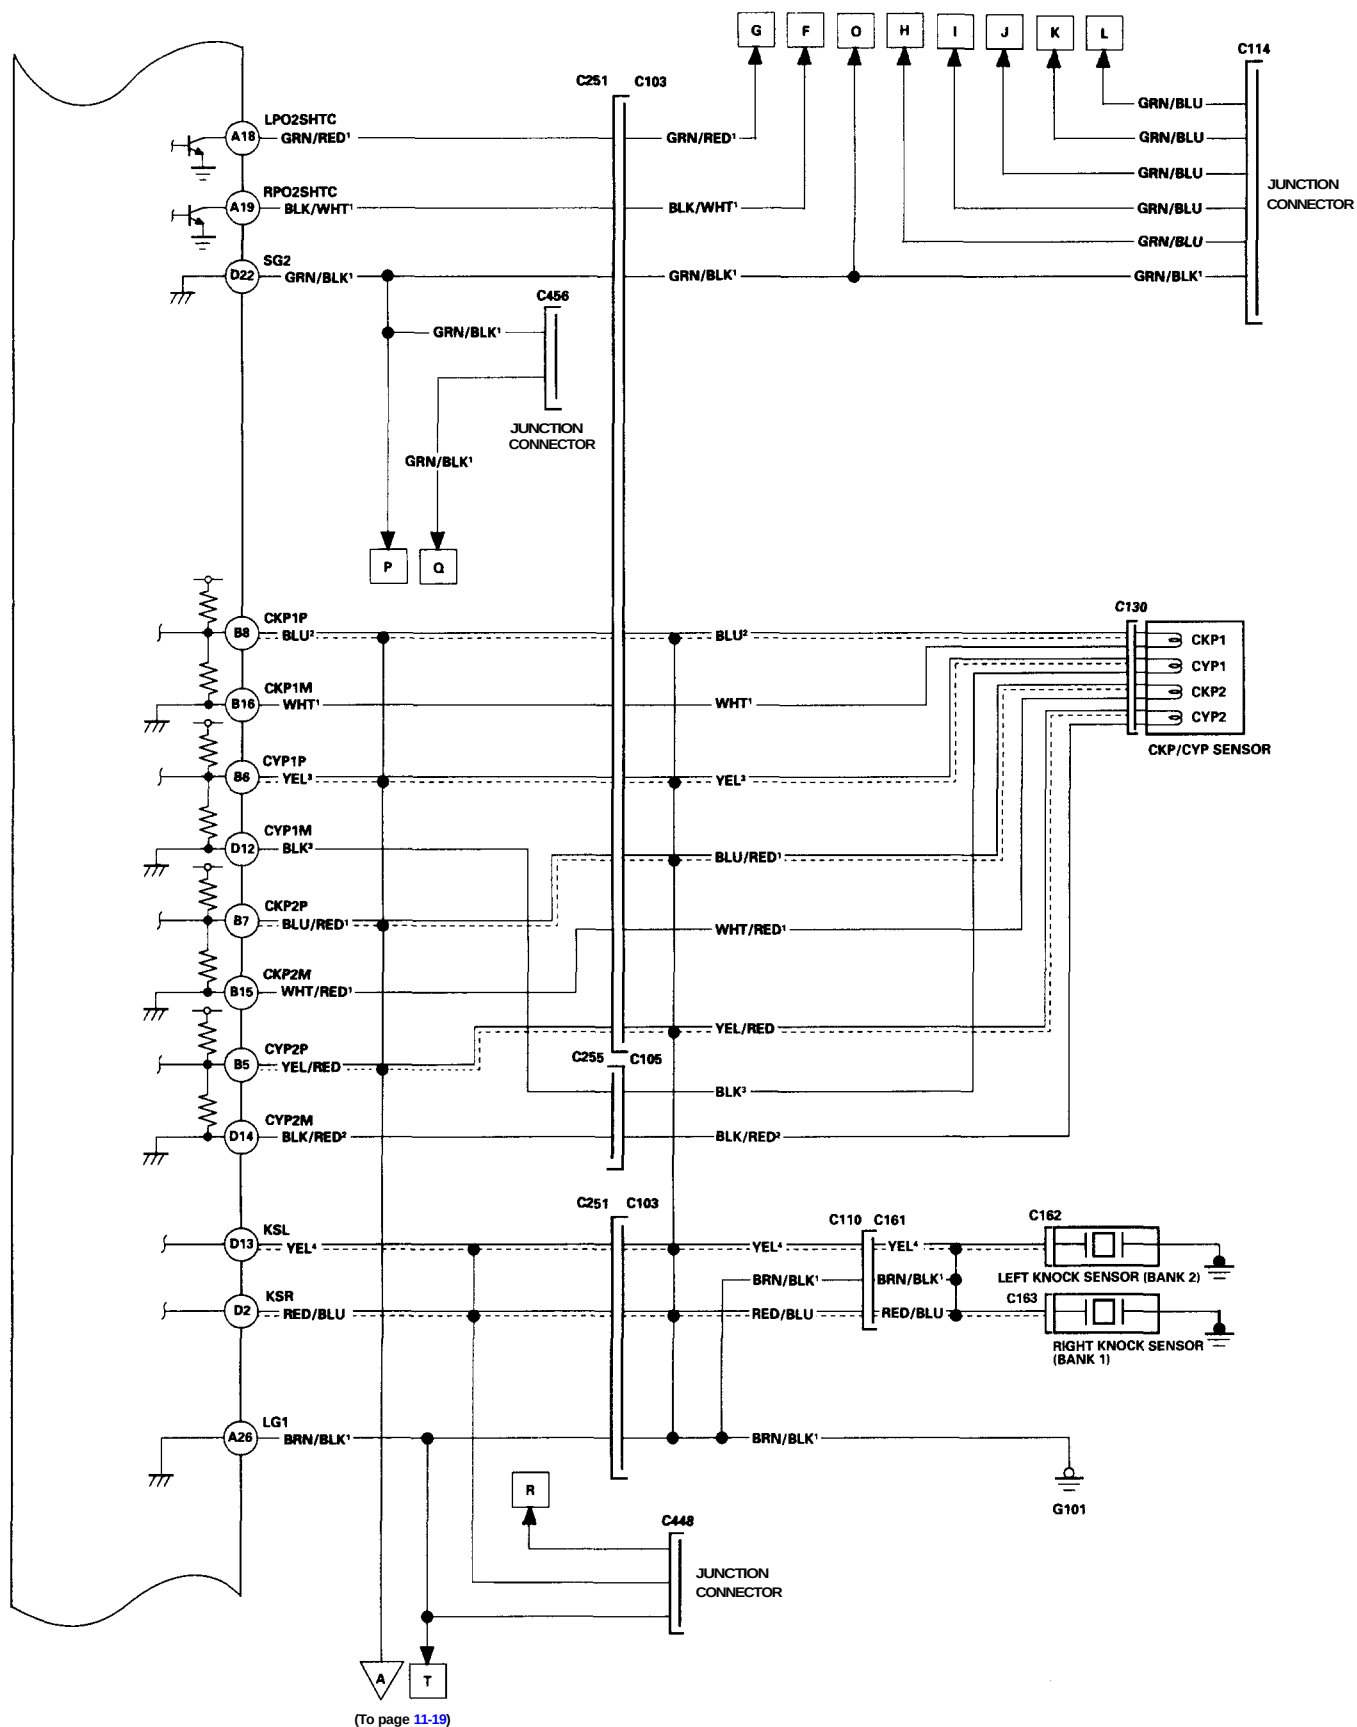


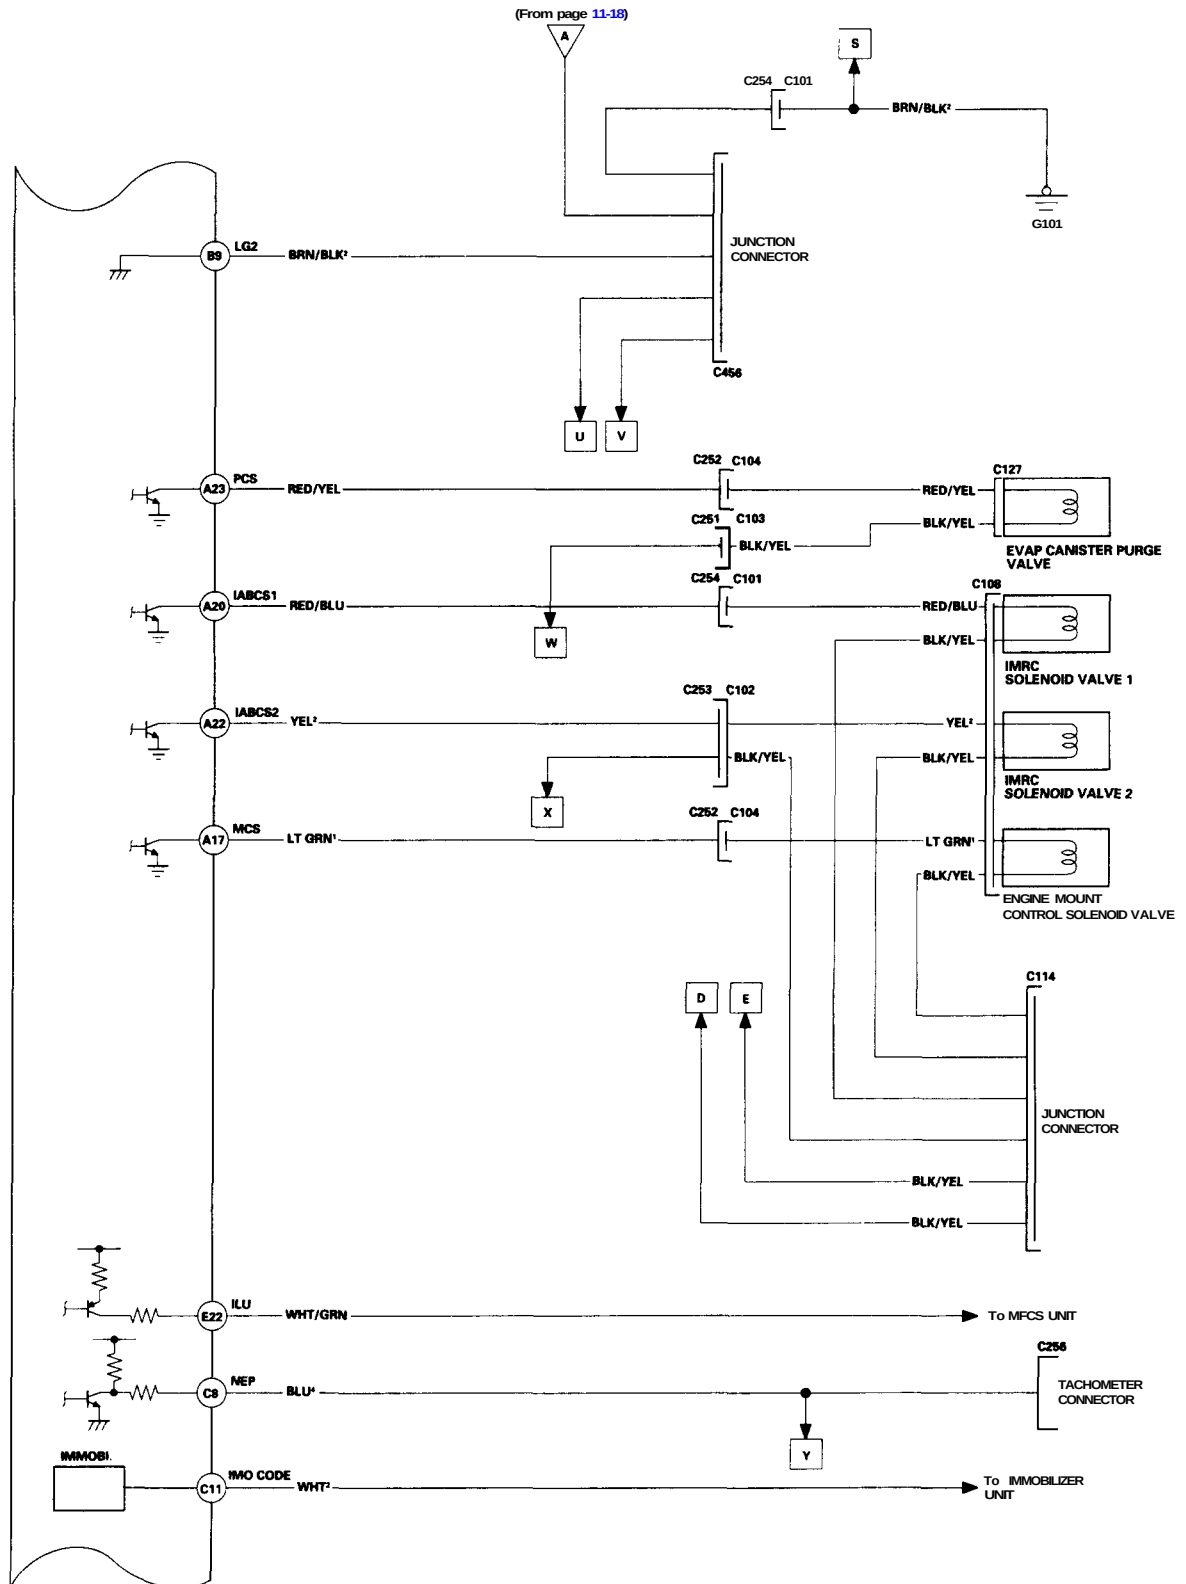


(cont'd)

System Description

Electrical Connections (cont'd)

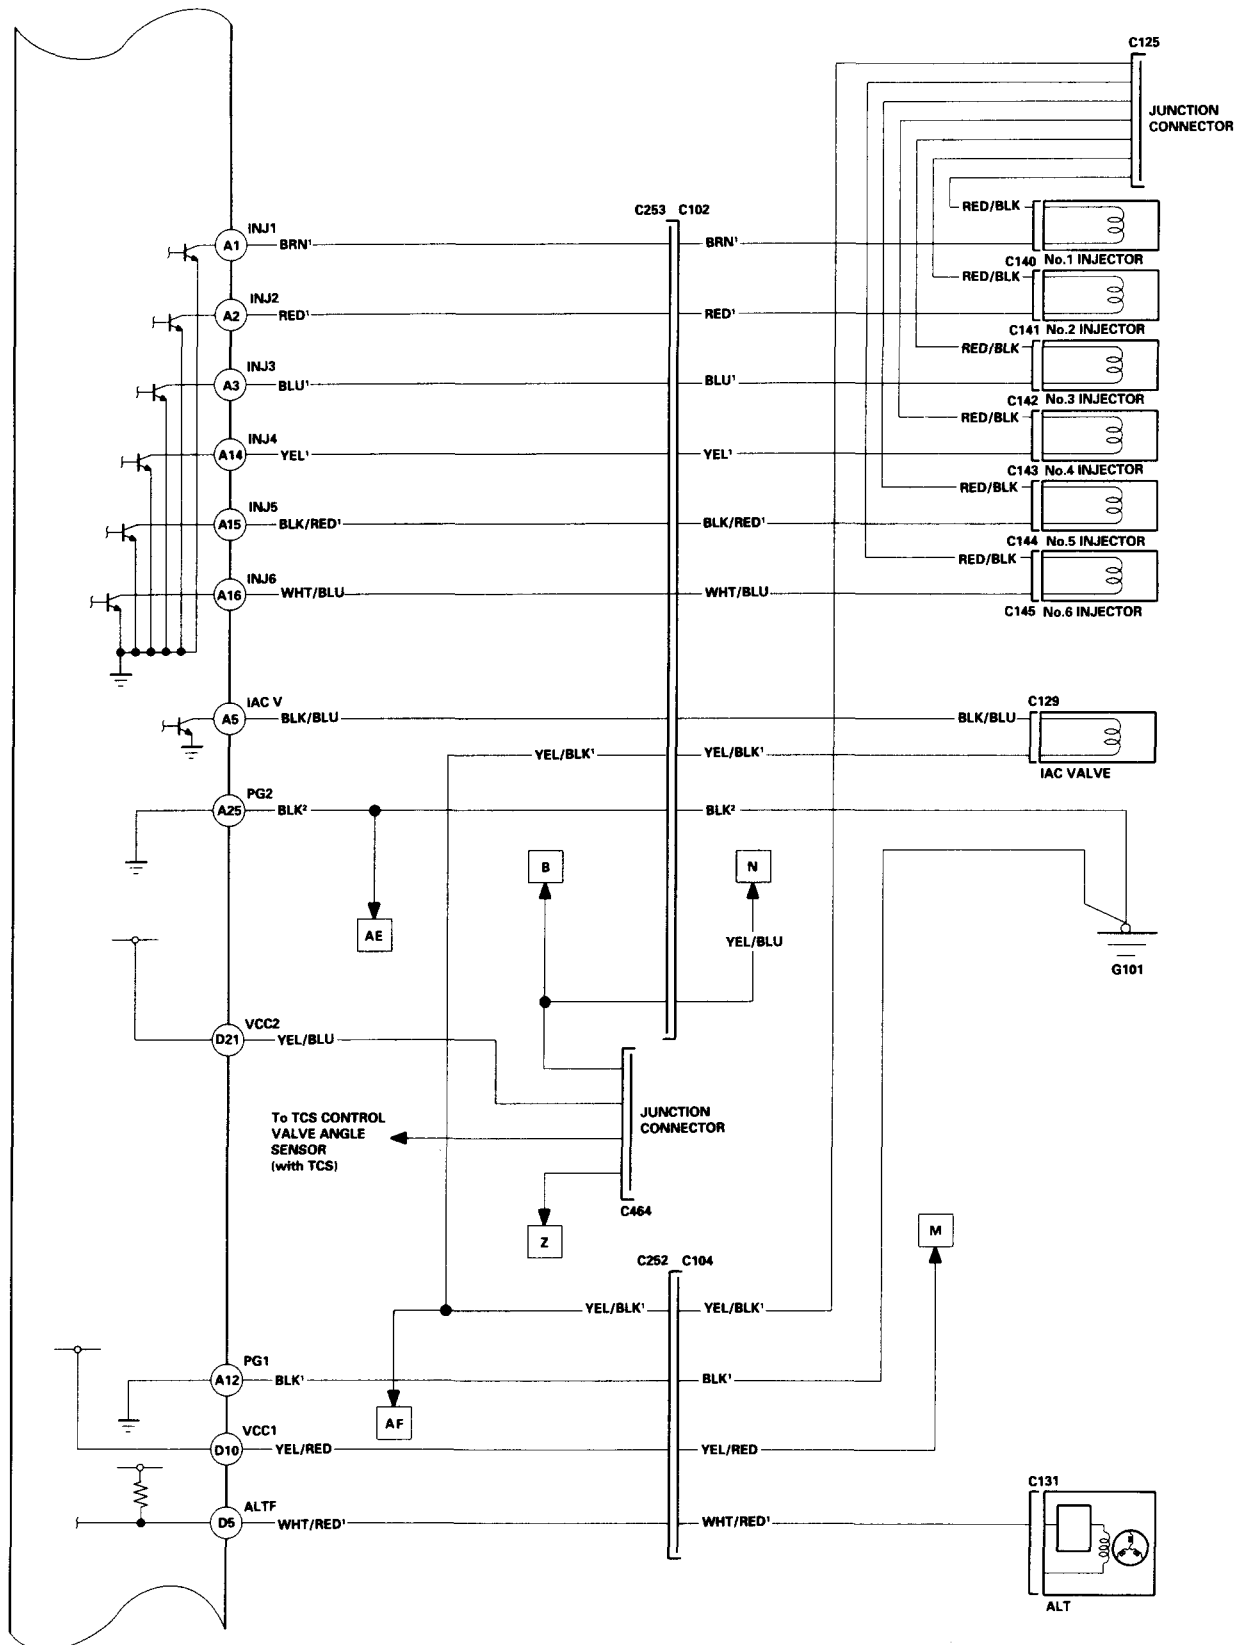


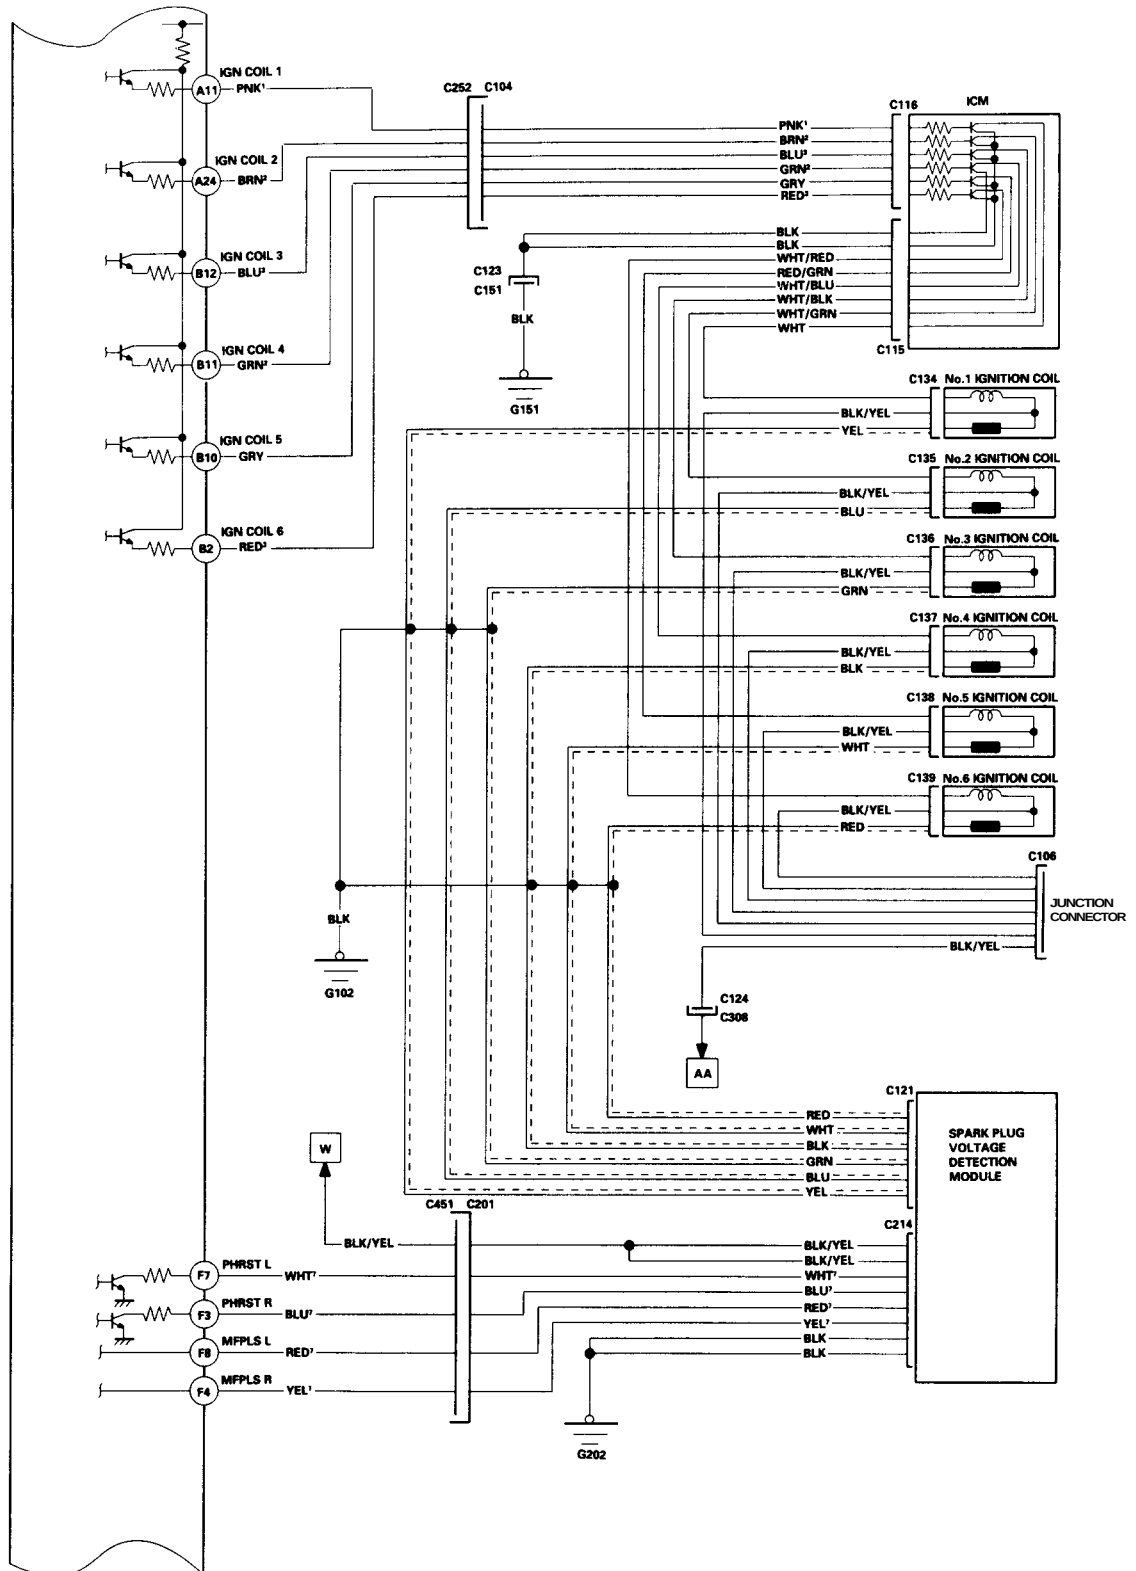


(cont'd)

System Description

Electrical Connections (cont'd)

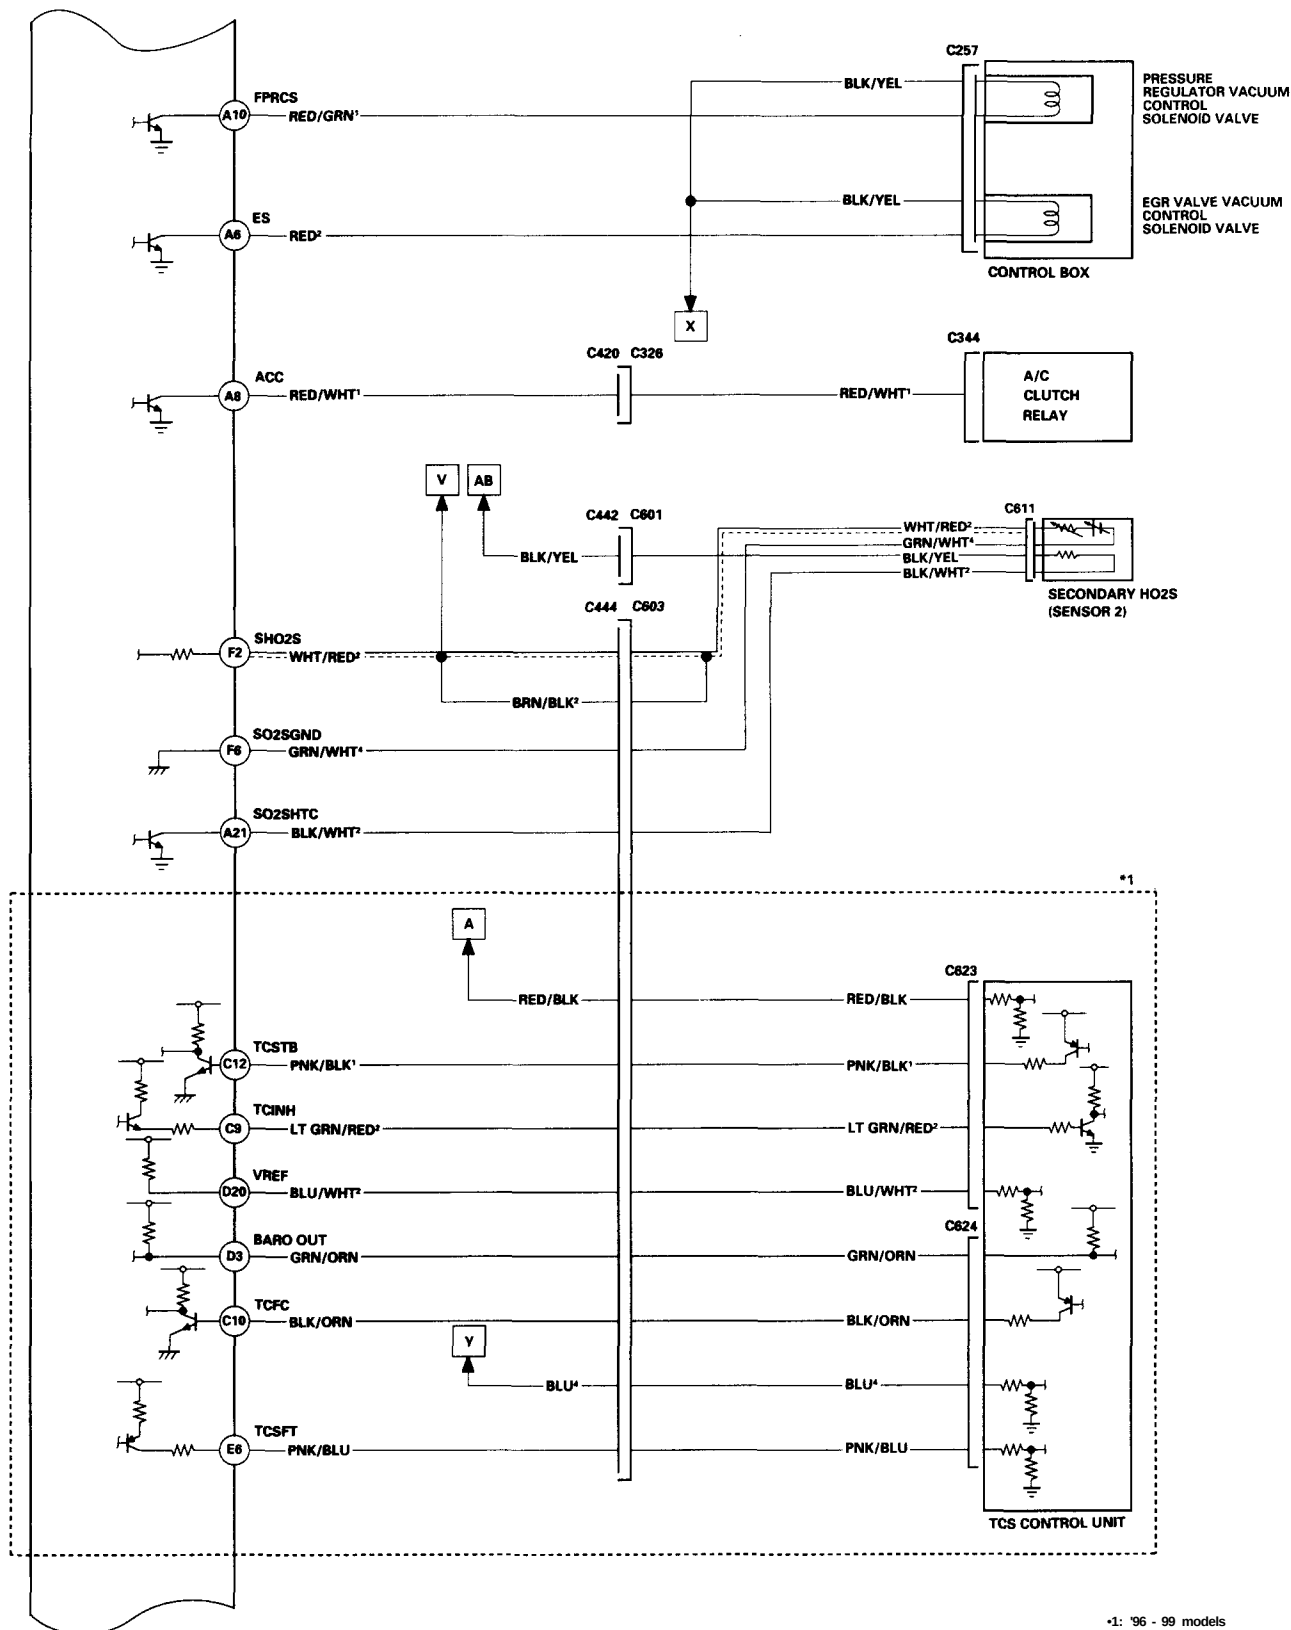


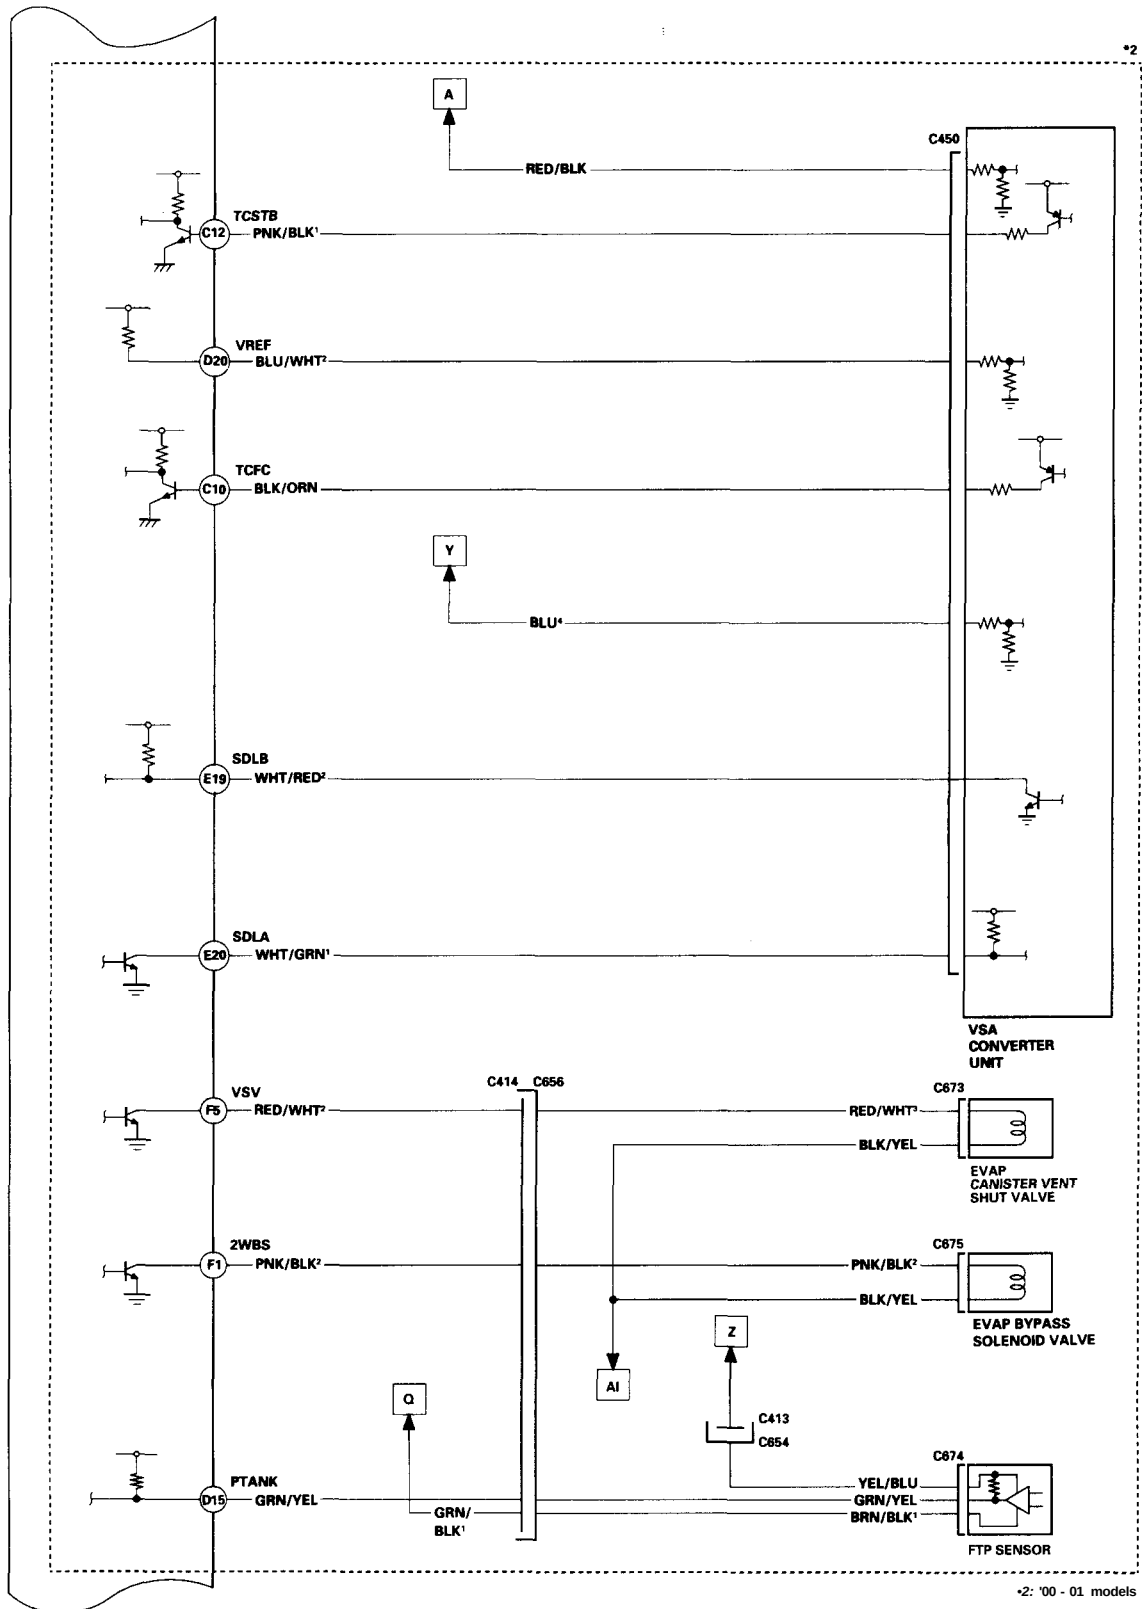


(cont'd)

System Description

Electrical Connections (cont'd)

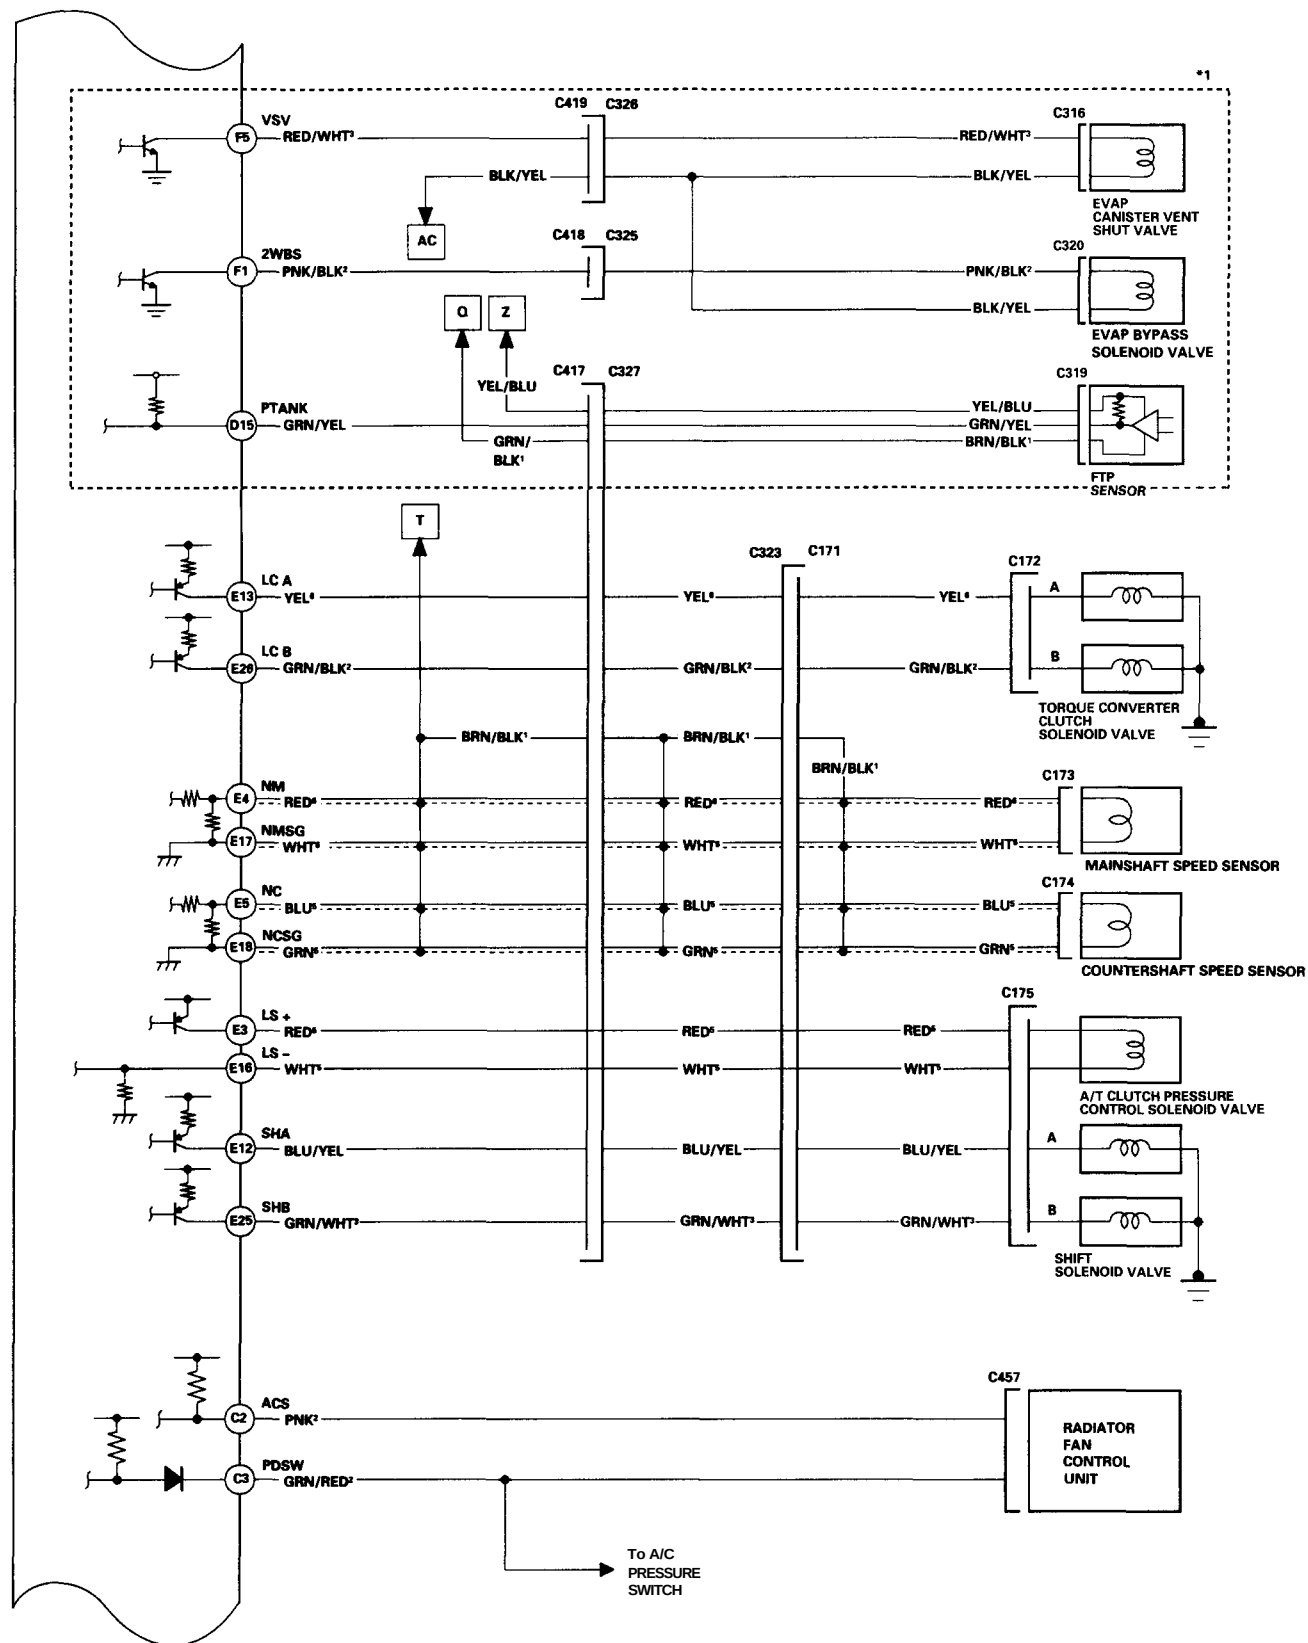

*1: '96 - 99 models

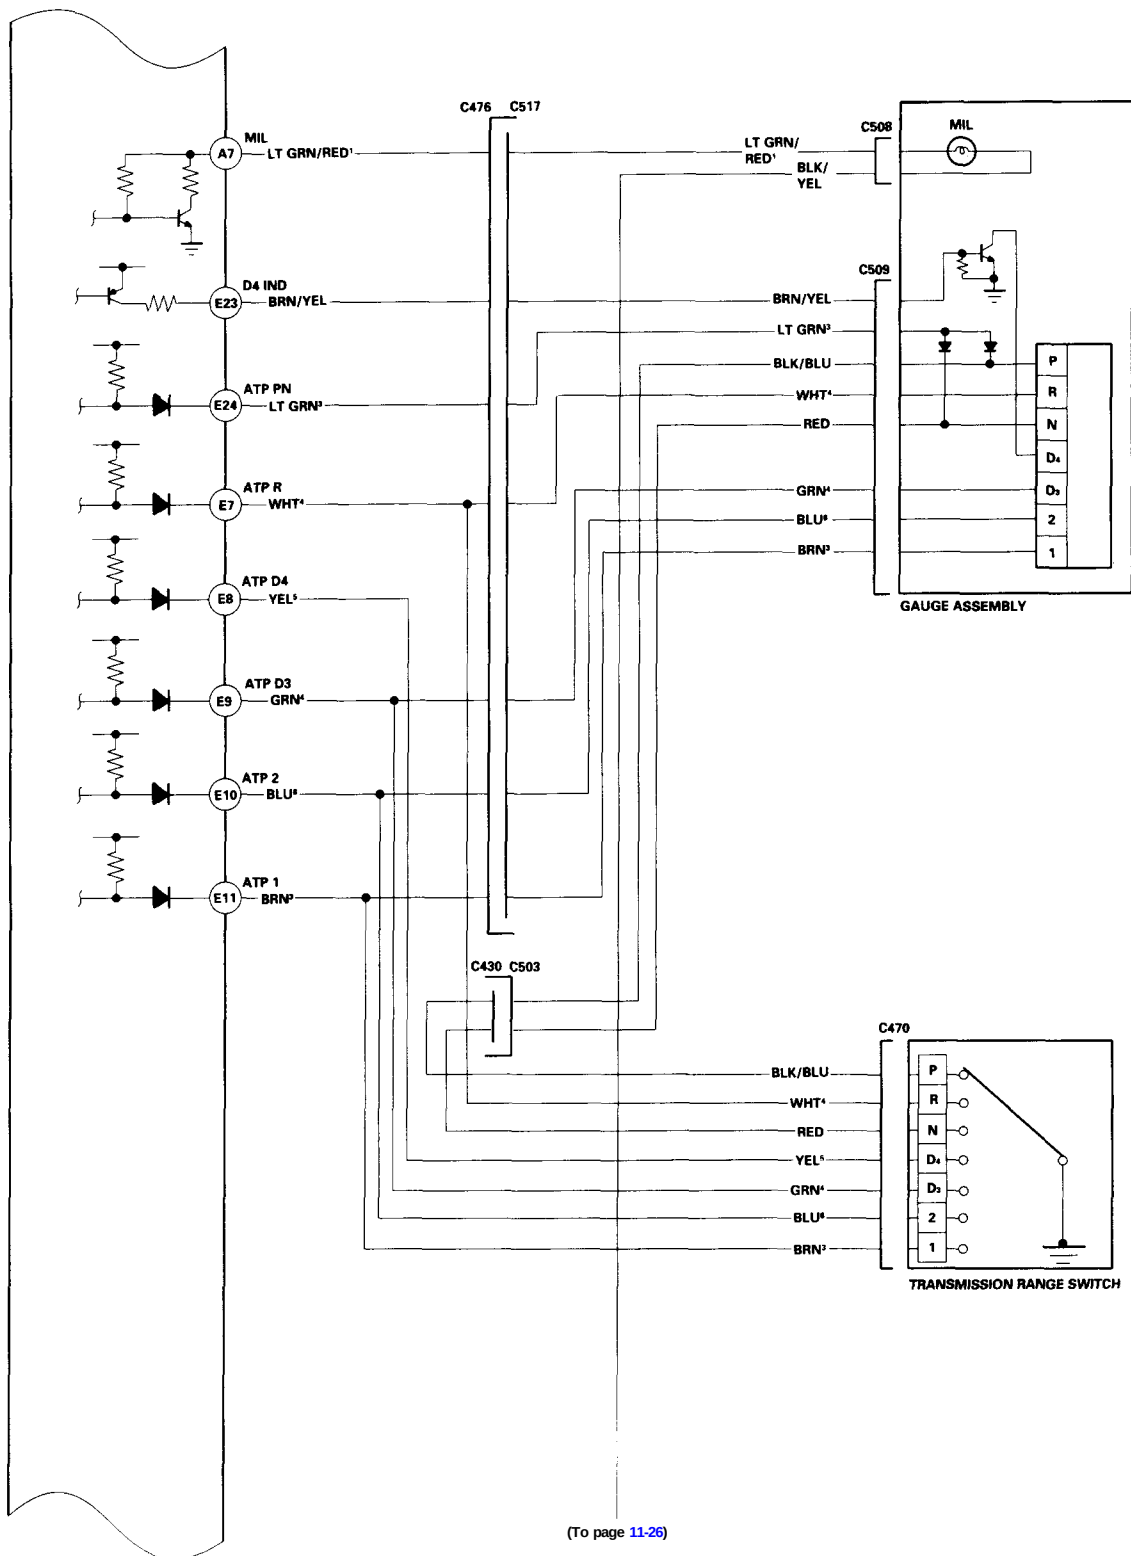

(cont'd)

System Description

Electrical Connections (cont'd)

