

Idle Control System

Alternator (ALT) FR Signal

This signals the PCM when the Alternator (ALT) is charging.

