
 


Illustrated Index

Rear Cover

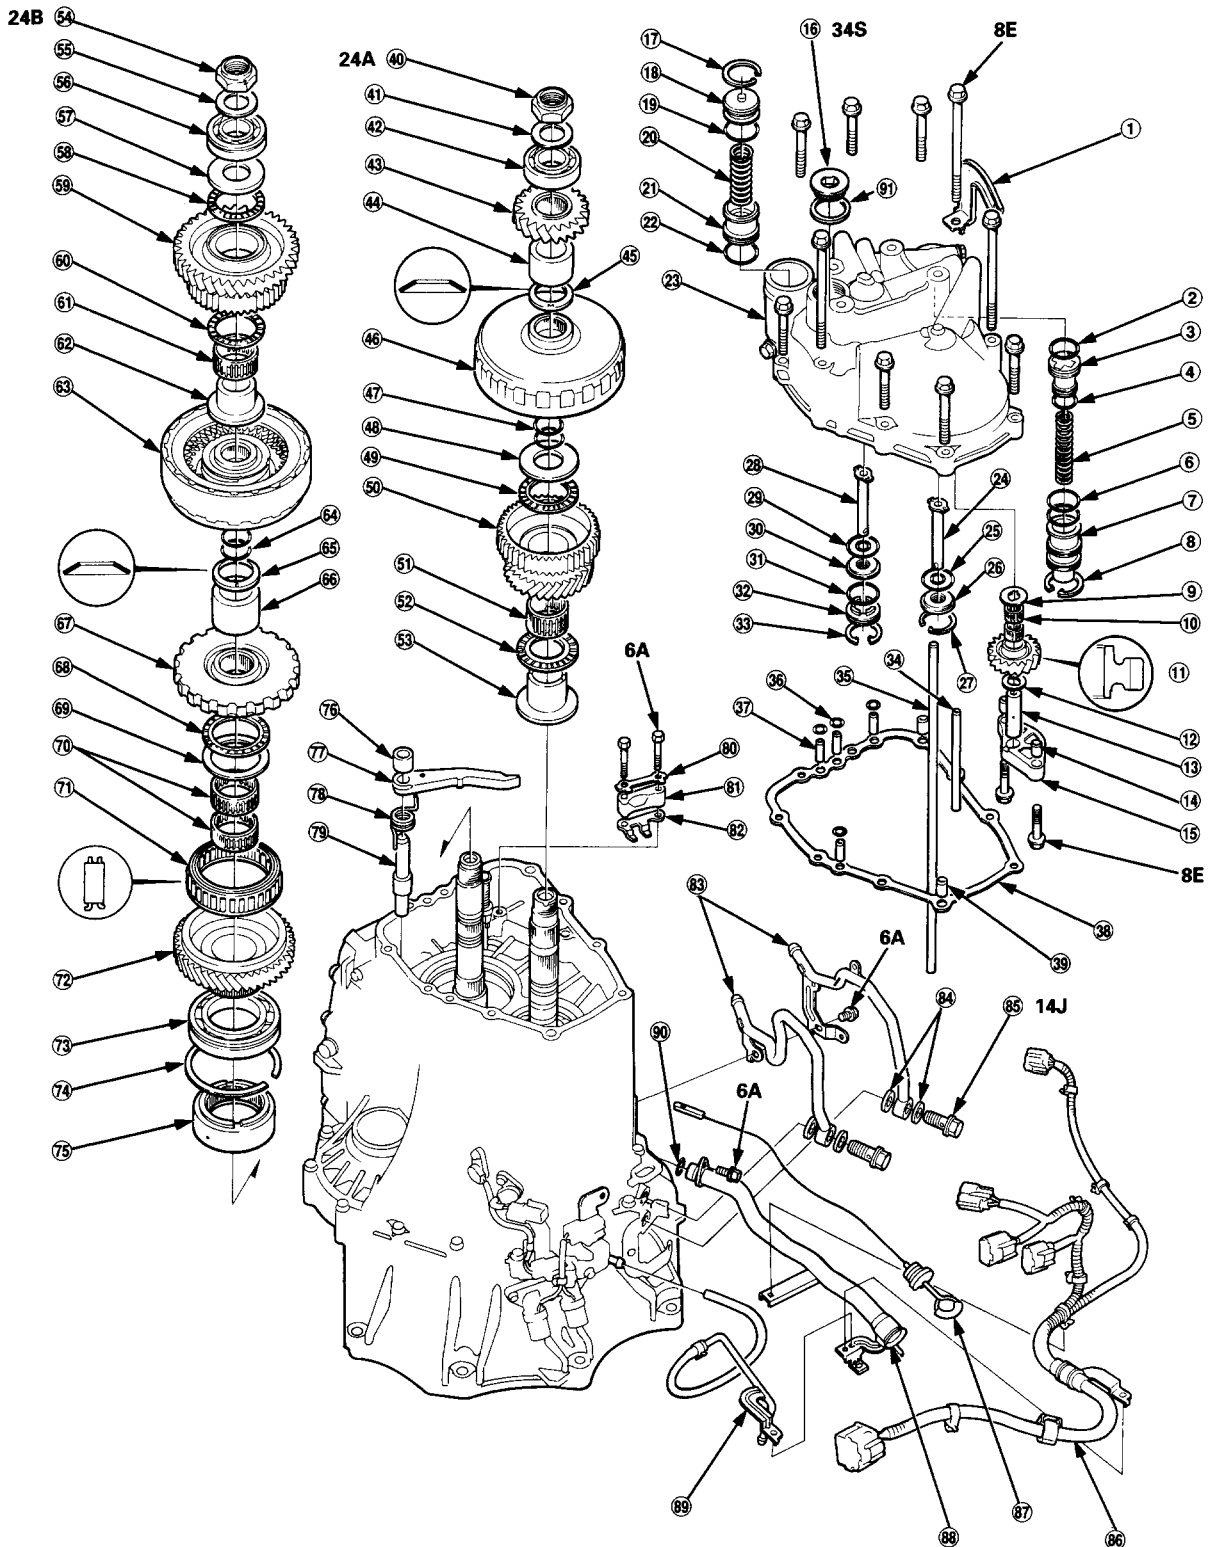



- ① TRANSMISSION RANGE SWITCH HARNESS BRACKET
 ② O-RING Replace.
 ③ REVERSE ACCUMULATOR PISTON
 ④ O-RING Replace.
 ⑤ REVERSE ACCUMULATOR SPRING
 ⑥ O-RINGS Replace.
 ⑦ REVERSE ACCUMULATOR SLEEVE
 ⑧ SNAP RING
 ⑨ THRUST WASHER, 14 x 30 mm
 ⑩ NEEDLE BEARINGS
 ⑪ REVERSE IDLER GEAR
 ⑫ THRUST WASHER, 14 x 25 mm
 ⑬ REVERSE IDLER GEAR SHAFT
 ⑭ DOWEL PIN
 ⑮ REVERSE IDLER GEAR SHAFT HOLDER
 ⑯ SEALING BOLT, 34 x 1.5 mm
 ⑰ SNAP RING
 ⑱ 1ST-HOLD ACCUMULATOR SLEEVE
 ⑲ O-RING Replace.
 ⑳ 1ST-HOLD ACCUMULATOR SPRING
 ㉑ 1ST-HOLD ACCUMULATOR PISTON
 ㉒ O-RING Replace.
 ㉓ REAR COVER
 ㉔ 2ND CLUTCH FEED PIPE
 ㉕ O-RINGS Replace.
 ㉖ FEED PIPE GUIDE
 ㉗ SNAP RING
 ㉘ REVERSE CLUTCH FEED PIPE
 ㉙ O-RINGS Replace.
 ㉚ FEED PIPE GUIDE
 ㉛ O-RING Replace.
 ㉜ ATF FEED GUIDE
 ㉝ SNAP RING
 ㉞ ATF FEED PIPE
 ㉟ ATF FEED PIPE
 ㊱ O-RING Replace.
 ㊲ ATF FEED PIPE
 ㊳ REAR COVER GASKET Replace.
 ㊴ DOWEL PINS
 ㊵ MAINSHAFT LOCKNUT, 24 x 1.25 mm
 Replace.
 ㊶ WASHER, 24 mm Replace.
 ㊷ BALL BEARING
 ㊸ MAINSHAFT REVERSE GEAR
 ㊹ MAINSHAFT REVERSE GEAR DISTANCE COLLAR
 ㊺ CONICAL SPRING WASHER, 28 mm
 Replace.
 ㊻ 2ND CLUTCH ASSEMBLY
 ㊼ O-RINGS Replace.
 ㊽ THRUST WASHER, 29 mm
 ㊾ THRUST NEEDLE BEARING
 ㊿ MAINSHAFT 2ND GEAR
 ① NEEDLE BEARING
 ② THRUST NEEDLE BEARING
 ③ MAINSHAFT 2ND GEAR COLLAR
 ④ COUNTERSHAFT LOCKNUT, 24 x 1.25 mm
 Replace.
 ⑤ WASHER, 24 mm Replace.
 ⑥ BALL BEARING
 ⑦ THRUST WASHER, 25 mm
 ⑧ THRUST NEEDLE BEARING
 ⑨ COUNTERSHAFT REVERSE GEAR
 ⑩ THRUST NEEDLE BEARING
 ⑪ NEEDLE BEARING
 ⑫ COUNTERSHAFT REVERSE GEAR COLLAR
 ⑬ REVERSE CLUTCH ASSEMBLY
 ⑭ O-RINGS Replace.
 ⑮ CONICAL SPRING WASHER, 29 mm
 Replace.
 ⑯ REVERSE CLUTCH DISTANCE COLLAR
 ⑰ PARK GEAR
 ⑱ THRUST NEEDLE BEARING
 ㉑ THRUST WASHER, 45.5 x 60 mm Selective part
 ㉒ NEEDLE BEARINGS
 ㉓ 2ND GEAR ONE-WAY CLUTCH
 ㉔ COUNTERSHAFT 2ND GEAR
 ㉕ BALL BEARING
 ㉖ SNAP RING
 ㉗ ONE-WAY CLUTCH HUB
 ㉘ PARK PAWL SHAFT SLEEVE
 ㉙ PARK PAWL
 ㉚ PARK PAWL SPRING
 ㉛ PARK PAWL SHAFT
 ㉜ LOCK PLATE Replace.
 ㉝ PARK ROD HOLDER
 ㉞ PARK ROD GUIDE
 ㉟ ATF COOLER LINES
 ㊱ SEALING WASHERS Replace.
 ㊲ LINE BOLT
 ㊳ TRANSMISSION SUB-HARNESS
 ㊴ ATF DIPSTICK
 ㊵ ATF DIPSTICK TUBE
 ㊶ BREATHER TUBE/HOSE
 ㊷ O-RING Replace.
 ㊸ WASHER, 34 mm Replace.
 '96 (M5DA - 1026239-) - 01 models

TORQUE SPECIFICATIONS

Bolt/Nut No.	Torque Value	Size	Remarks
6A	12 N·m (1.2 kgf·m, 8.7 lbf·ft)	6 x 1.0 mm	
8E	26 N·m (2.7 kgf·m, 20 lbf·ft)	8 x 1.25 mm	
14J	39 N·m (4.0 kgf·m, 29 lbf·ft)	14 x 1.5 mm	Line bolt
24A	127 N·m (13.0 kgf·m, 94 lbf·ft)	24 x 1.25 mm	Mainshaft locknut
24B	127 N·m (13.0 kgf·m, 94 lbf·ft)	24 x 1.25 mm	Countershaft locknut: Left-hand threads
34S	78 N·m (8.0 kgf·m, 58 lbf·ft)	34 x 1.25 mm	Sealing bolt
	98 N·m (10.0 kgf·m, 72 lbf·ft)		'96 model (~ M5DA - 1026238) '96 (M5DA - 1026239-) - 01 models