



Component Locations

Index

NOTE:

- If an intact airbag assembly has been removed from a scrapped vehicle or has been found defective or damaged during transit, storage or service, it should be deployed (see [section 24](#)).
- Before removing the gearbox, remove the driver's airbag assembly and steering wheel.
- After installing the gearbox, check the wheel alignment and adjust it if necessary.

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS ([section 24](#)) before performing repairs or service.

RESERVOIR

Fluid Replacement, page [17-16](#)

Fluid Leakage Inspection, page [17-23](#)

POWER STEERING PUMP

Pump Belt Inspection and Adjustment, page [17-15](#)

Pump Pressure Check, page [17-17](#)

Removal/Installation, page [17-24](#)

Disassembly, page [17-25](#)

Inspection, page [17-26](#)

Reassembly, page [17-28](#)

STEERING WHEEL

Removal and Installation, page [17-18](#)

Disassembly/Reassembly, page [17-19](#)

DRIVER'S AIRBAG ASSEMBLY

Removal/Installation, see [section 24](#)

STEERING COLUMN

Removal/Installation, page [17-20](#)

Inspection, page [17-21](#)

Steering Lock Replacement, page [17-22](#)

Inspection for Driving Position

Memory System (DPMS), see [section 23](#)

CABLE REEL

Removal/Installation, see [section 24](#)

IGNITION SWITCH

Inspection and Replacement, see [section 23](#)

POWER STEERING SPEED SENSOR

Replacement, page [17-13](#)

STEERING GEARBOX

Rack Guide Adjustment, page [17-16](#)

Removal, page [17-30](#)

Disassembly, page [17-32](#)

Reassembly, page [17-40](#)

Installation, page [17-51](#)

VALVE BODY UNIT

Overhaul, page [17-36](#)

TIE-ROD END BALL JOINT

Ball Joint Boot Replacement, page [17-53](#)

