


Power Steering Pump

Removal/Installation

NOTE: Before disconnecting the hoses from the pump, place a suitable container under the vehicle.

1. Remove the air cleaner (ACL) and intake air duct.
2. Remove the belt by loosening the pump mounting bolt, nut and adjusting bolt.

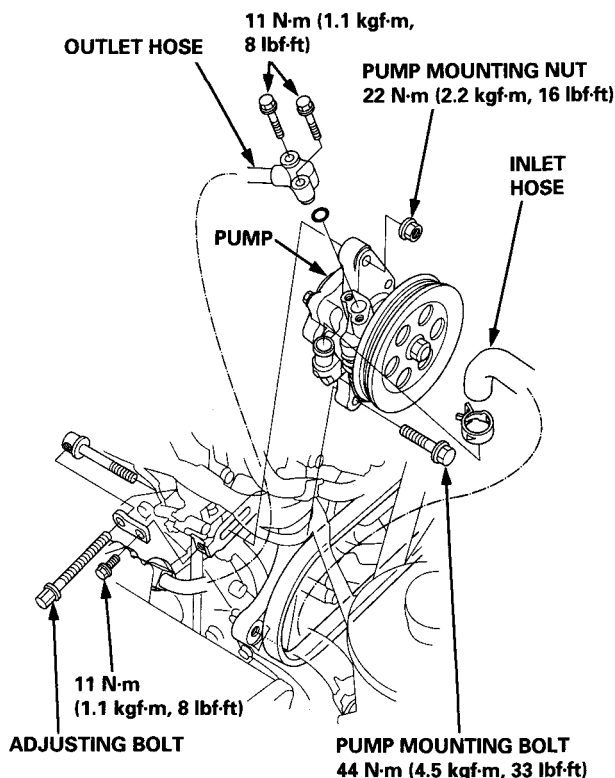

3. Disconnect the inlet and outlet hoses from the pump, and plug the hoses.

NOTE: Take care not to spill the fluid on the body or parts. Wipe off any spilled fluid at once.

4. Remove the pump mounting bolt, nut and adjusting bolt, then remove the pump.


NOTE:

- Do not turn the steering wheel with the pump removed.
- Wrap the opening of the pump with a piece of tape to prevent foreign material from entering the pump.

5. Connect the inlet and outlet hoses. Tighten the pump fittings securely.
6. Loosely install the pump in the pump bracket with mounting bolt, nut and adjusting bolt.
7. Install the pump belt

CAUTION:

- Make sure that the power steering belt is properly positioned on the pulleys.
- Do not get power steering fluid or grease on the power steering belt or pulley faces. Clean off any fluid or grease before installation.

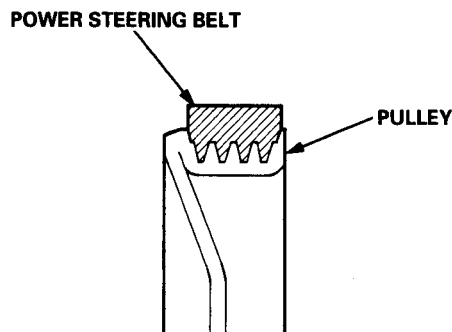

8. Adjust the pump belt (see page [17-15](#)).
9. Install the air cleaner (ACL) and intake air duct.
10. Fill the reservoir to the upper level line (see page [17-16](#)).