



Suspension Arms Removal/Inspection

CAUTION:

- Replace the self-locking nuts after removal.
- Be careful not to damage the ball joint boot.

NOTE:

- The ball joint remover will interfere with the lower arm when removing the lower arm. To prevent interference, remove the beam's pivot bolts before installing the ball joint remover.
- The ball joint remover will interfere with the brake hose bracket when removing the upper arm. To prevent interference, remove the brake hose bracket before installing the ball joint remover.

