



Troubleshooting

ABS Indicator Does Not Come On

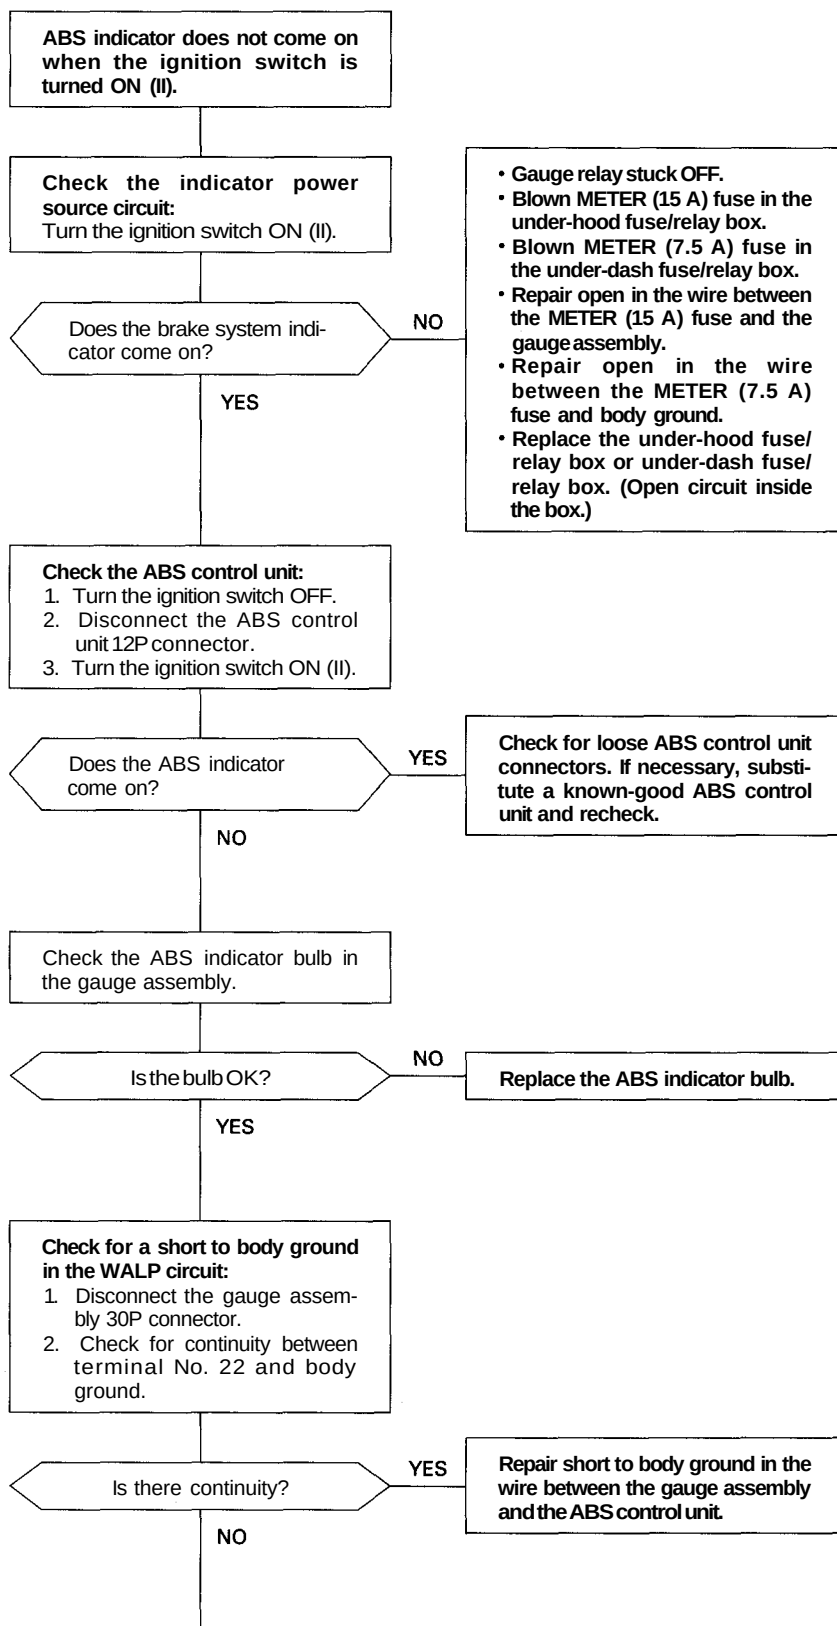

GAUGE ASSEMBLY 30P CONNECTOR

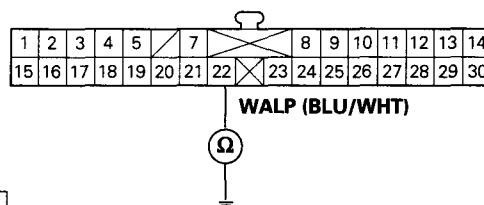

(To page 19-123)



(From page 19-122)

Check for an open in the indicator GND circuit:

1. Turn the ignition switch OFF.
2. Connect the gauge assembly 30P connector.
3. Connect the gauge assembly 22P connector terminal No. 10 to body ground with a jumper wire.
4. Turn the ignition switch ON (II).

Does the ABS indicator come on?


YES

- Repair open in the wire between the gauge assembly and body ground.
- Repair poor ground (G401, G402).

NO

Replace the printed circuit board in the gauge assembly.

GAUGE ASSEMBLY 22P CONNECTOR

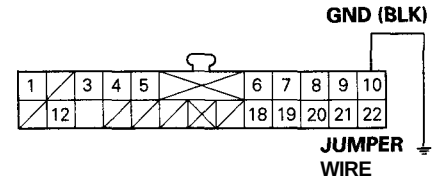

Wire side of female terminals