


VSA System Indicator Does Not Go Off

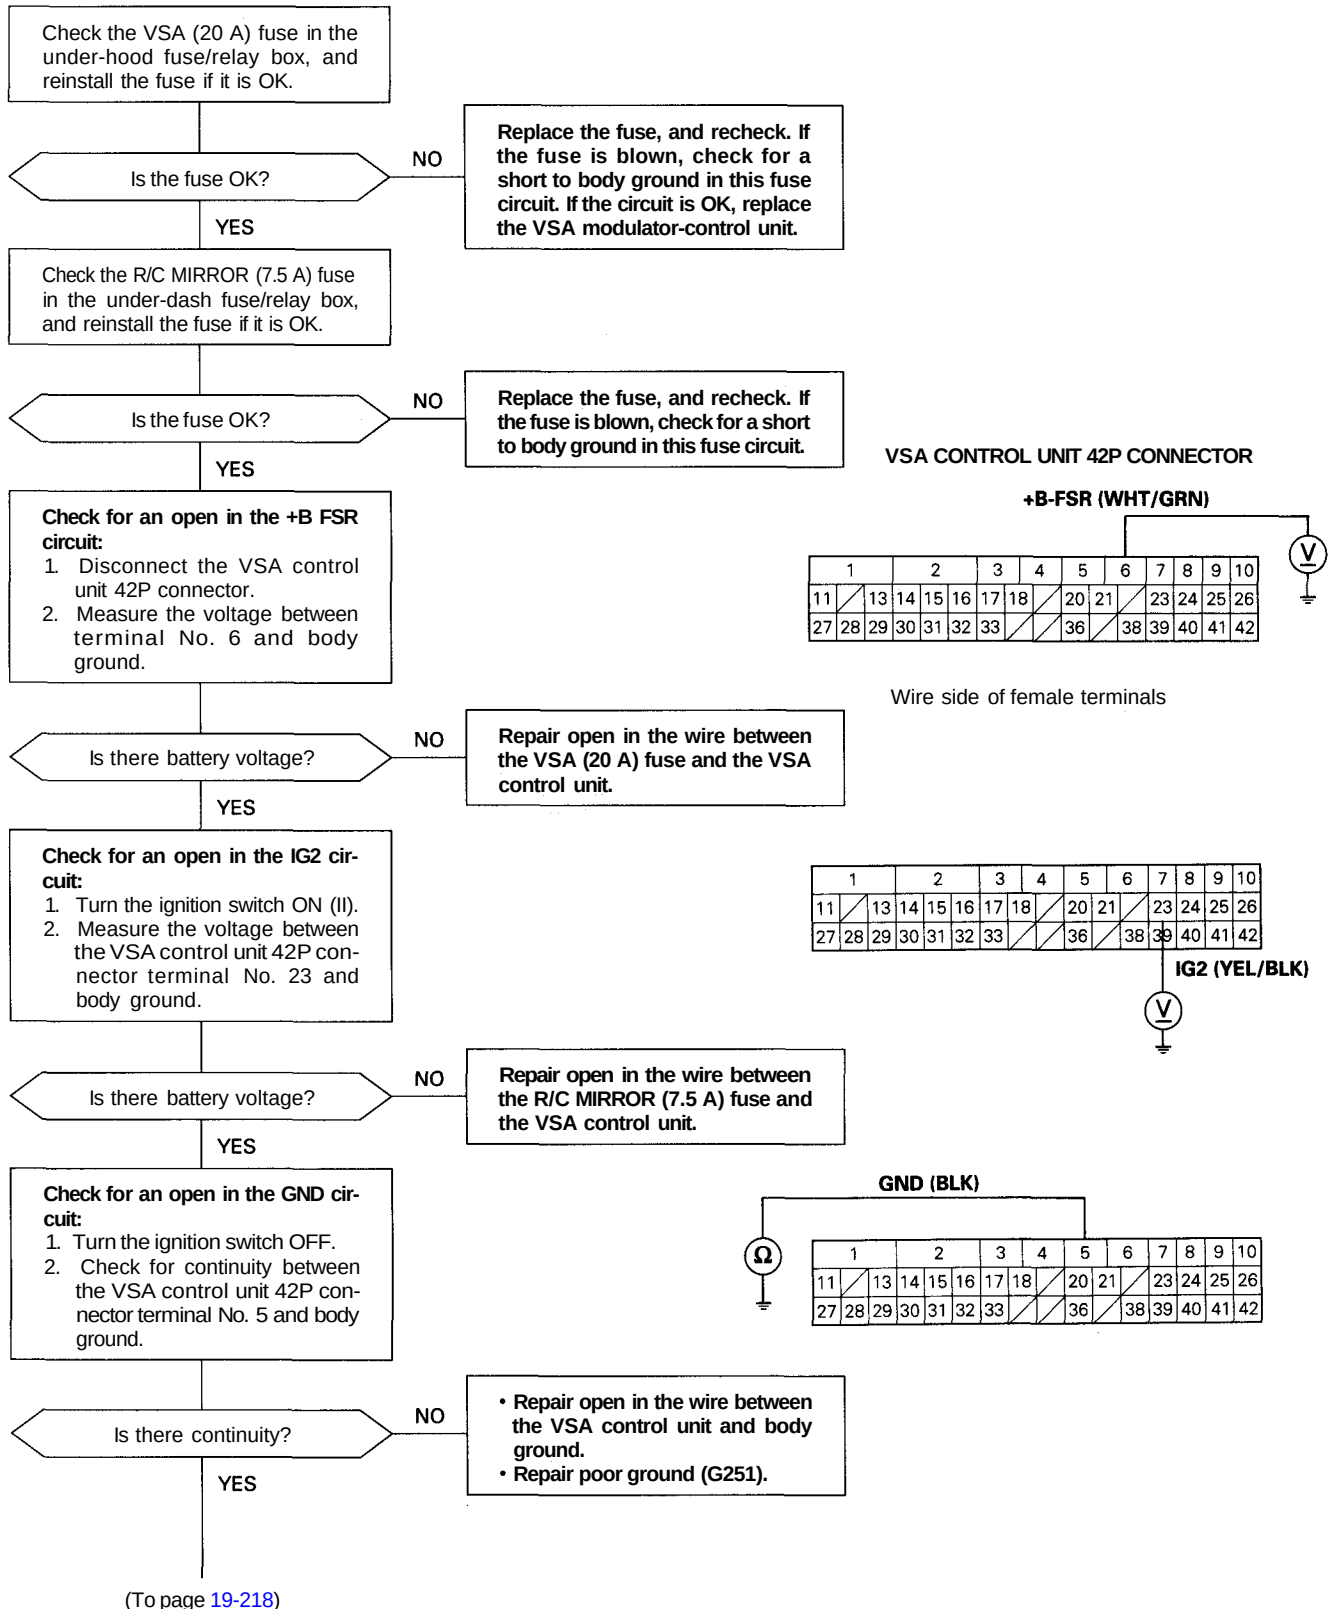


(cont'd)

Troubleshooting

VSA System Indicator Does Not Go Off (cont'd)

(From page 19-217)

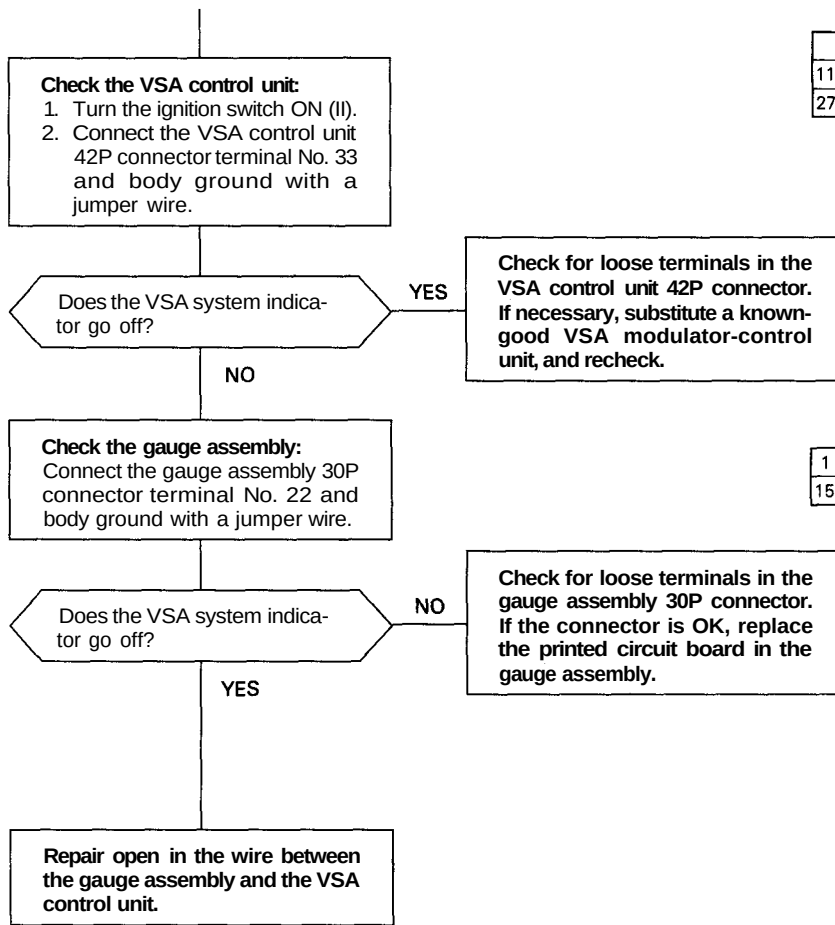

VSA CONTROL UNIT 42P CONNECTOR

1	2	3	4	5	6	7	8	9	10
11	13	14	15	16	17	18	20	21	23
27	28	29	30	31	32	33	36	38	39
40	41	42							

JUMPER WIRE

VSA (LT GRN/RED)

Wire side of female terminals

GAUGE ASSEMBLY 30P CONNECTOR

1	2	3	4	5	6	7	8	9	10	11	12	13	14
15	16	17	18	19	20	21	22	23	24	25	26	27	28
29	30												

JUMPER WIRE

VSA (LT GRN/RED)

Terminal side of female terminals