


DTC 66: Pressure Sensor

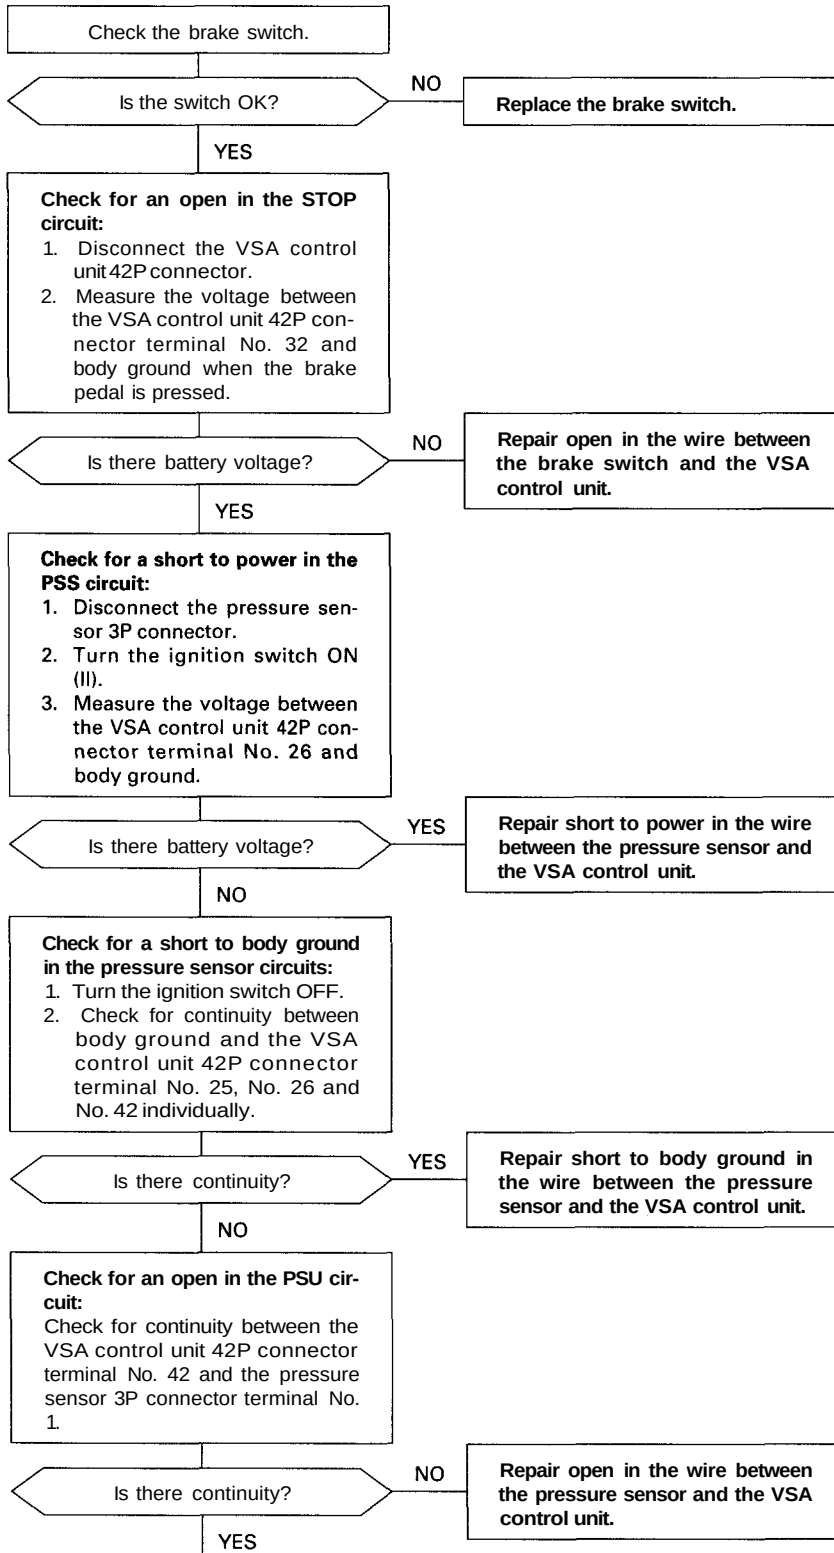

VSA CONTROL UNIT 42P CONNECTOR

1	2	3	4	5	6	7	8	9	10
11	13	14	15	16	17	18	20	21	23
27	28	29	30	31	32	33	36	38	39


STOP (GRN/WHT)



Wire side of female terminals

1	2	3	4	5	6	7	8	9	10
11	13	14	15	16	17	18	20	21	23
27	28	29	30	31	32	33	36	38	39

PSS (BLU)

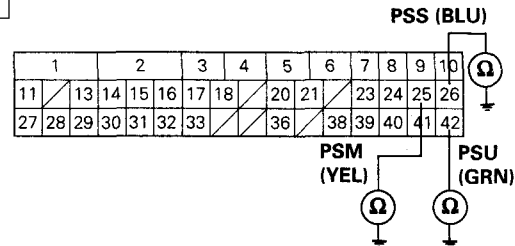

1	2	3	4	5	6	7	8	9	10
11	13	14	15	16	17	18	20	21	23
27	28	29	30	31	32	33	36	38	39

PSU (GRN)

PSU (GRN)

PRESSURE SENSOR
3P CONNECTOR

Wire side of female terminals


(To page 19-242)

(cont'd)

Troubleshooting

DTC 66: Pressure Sensor (cont'd)

(From page 19-241)

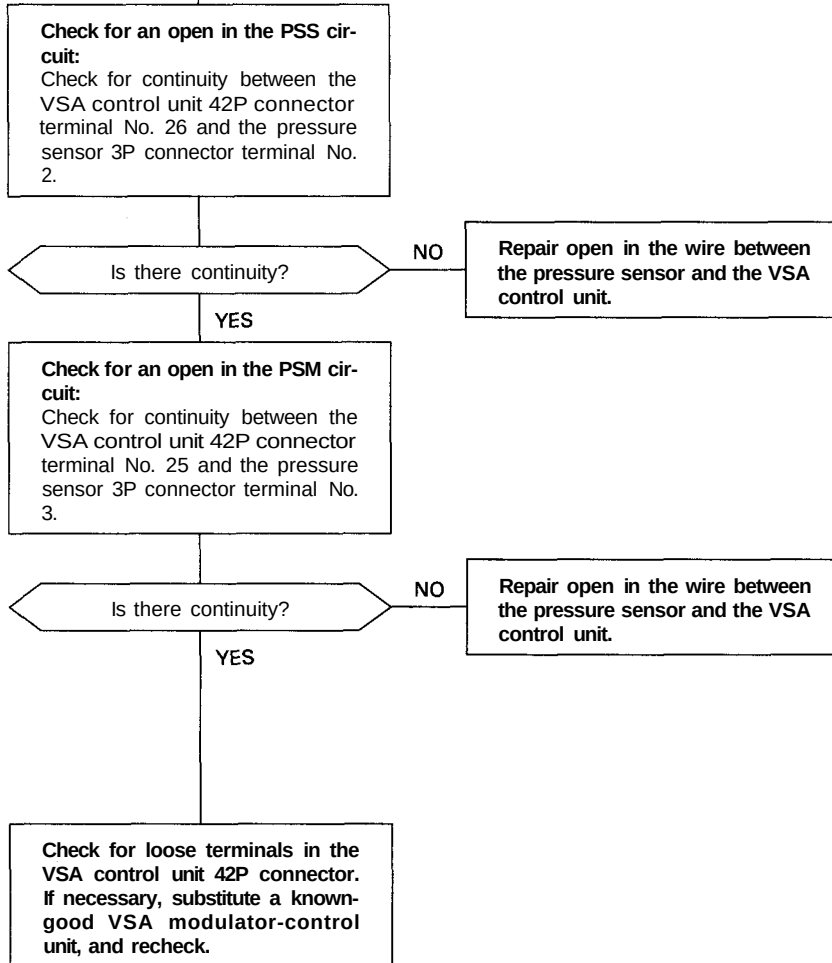

VSA CONTROL UNIT 42P CONNECTOR

1	2	3	4	5	6	7	8	9	10
11	13	14	15	16	17	18	20	21	23
27	28	29	30	31	32	33	36	38	39

Wire side of female terminals

PSS (BLU)

PSS (BLU)



PRESSURE SENSOR
3P CONNECTOR

Wire side of female terminals

1	2	3	4	5	6	7	8	9	10
11	13	14	15	16	17	18	20	21	23
27	28	29	30	31	32	33	36	38	39

PSM (YEL)



PSM (YEL)