


 


Outer Handle/Latch Removal

NOTE: Raise the glass fully.

1. Remove:
 - Door panel
 - Plastic cover (see page 20-2)
2. Remove the glass run channel as needed, then remove the rear lower channel.

►: Bolt location, 1

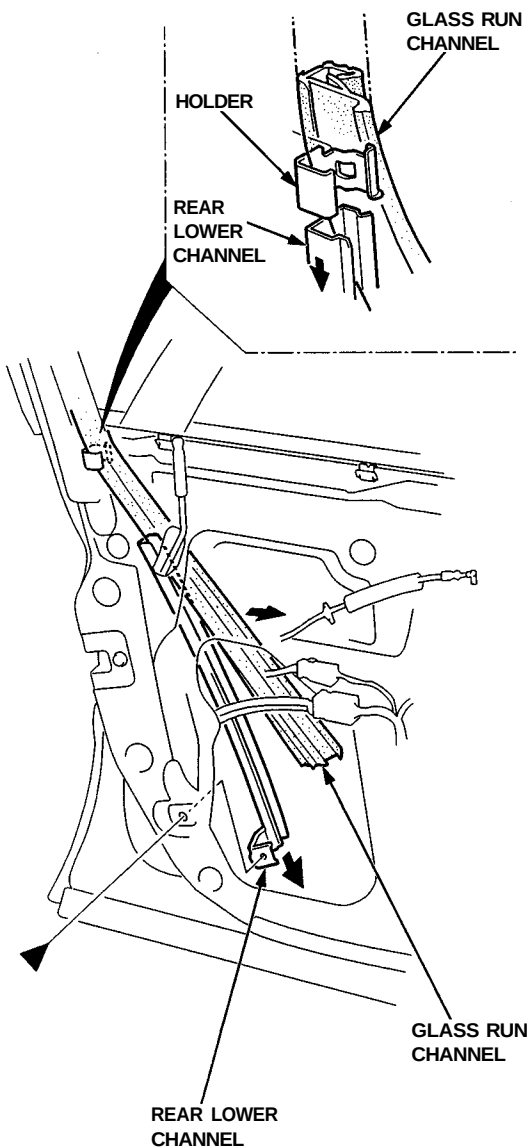


3. Remove the outer handle cover, then remove the lock cylinder.

NOTE:

- Take care not to drop the bolt inside the door.
- Remove in numbered sequence.

►: Bolt locations

 A ►, 1




4 x 0.8 mm
3 N-m (0.3 kgf-m,
2 lbf-ft)

B ►, 1



5 x 0.8 mm
5 N-m (0.5 kgf-m,
4 lbf-ft)

COLLAR

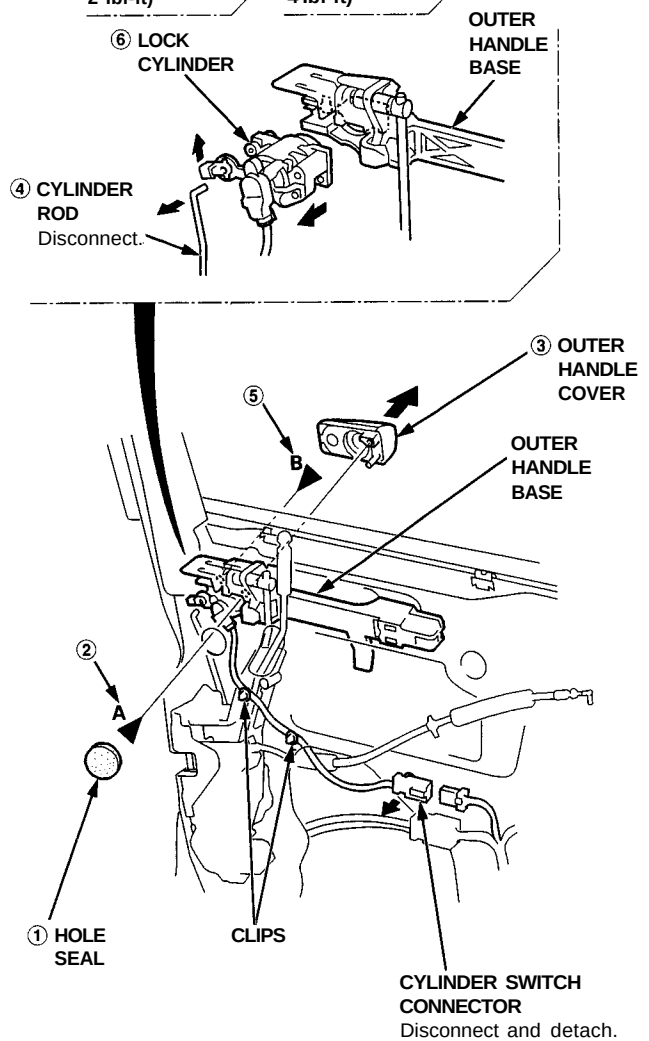


(cont'd)


Doors

Outer Handle/Latch Removal (cont'd)

4. Remove the outer handle as shown.

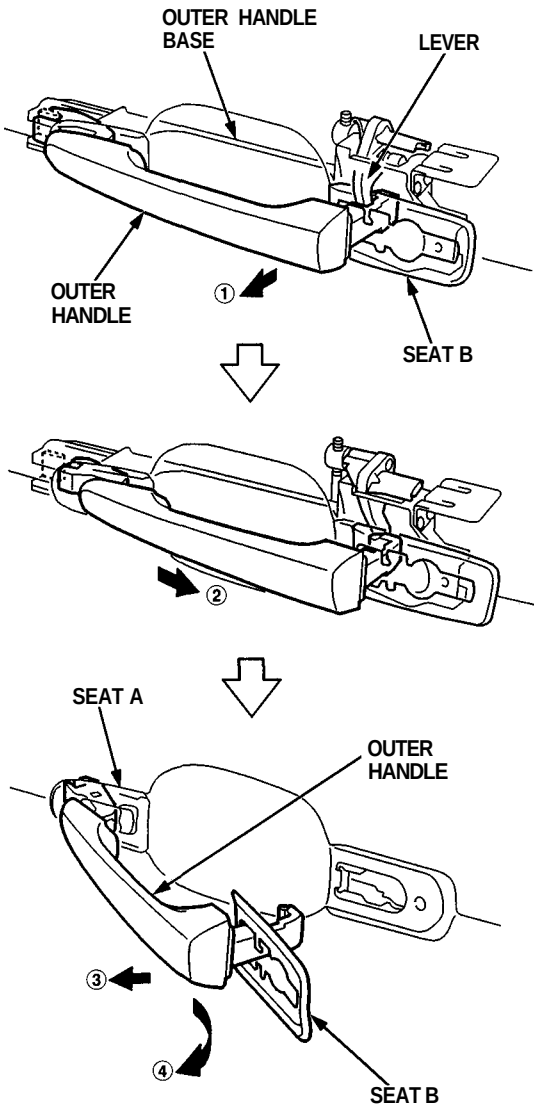

5. Remove the seat A, then loosen the bolt.

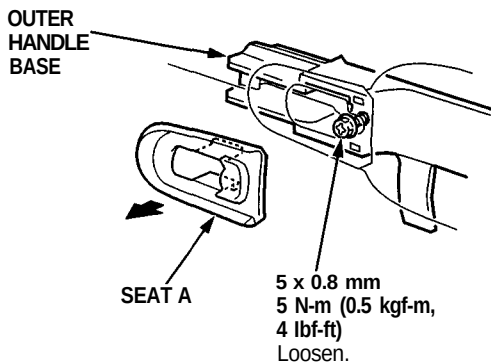

6. Slide the outer handle base, and remove it from the door. Disconnect the connector, detach the clips, then remove the latch with the outer handle base through the hole in the door. Pry the outer handle rod out from the outer handle base using diagonal cutters.

NOTE:

- To ease reassembly, note location **A** of the outer handle rod on the joint before disconnecting it.
- Take care not to bend the rods.

►: Screw locations


A ►, 2

B ►, 1

6 x 1.0 mm
5 N-m (0.5 kgf-m,
4 lbf-ft)

●: Nut location, 1

6 x 1.0 mm
8 N-m (0.8 kgf-m,
6 lbf-ft)

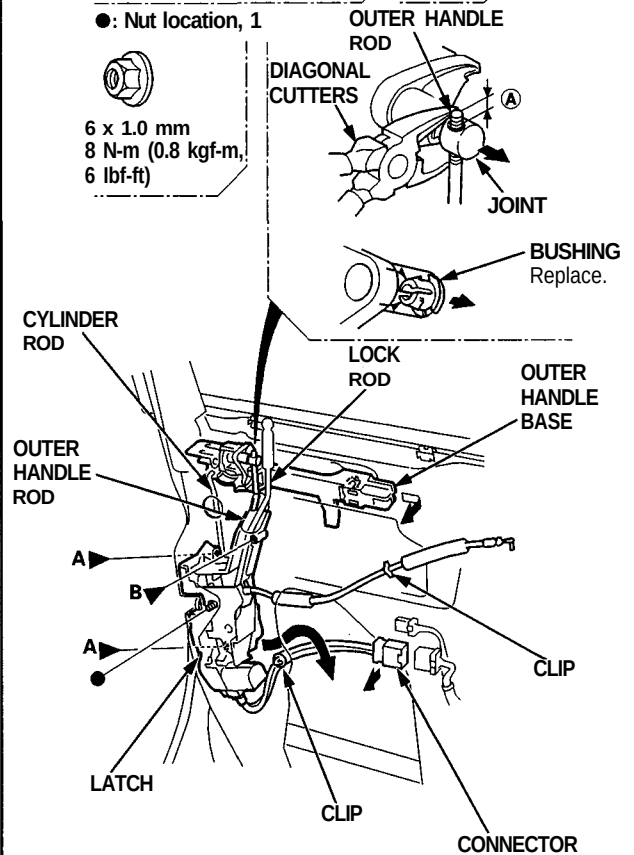

7. Installation is the reverse of the removal procedure.

NOTE:

- Make sure the glass run channel is installed securely into the rear lower channel.
- Make sure the door locks and opens properly.