


Doors

Outer Handle/Latch Removal

1. Remove:
 - Door panel (see page 20-11)
 - Plastic cover (see page 20-9)
 - Inner molding (see page 20-9)
 - Inner sash trim (see page 20-15)
 - Sash trim (see page 20-15)
 - Glass
 - Rear channel (see page 20-14)
2. Remove the rod protector.

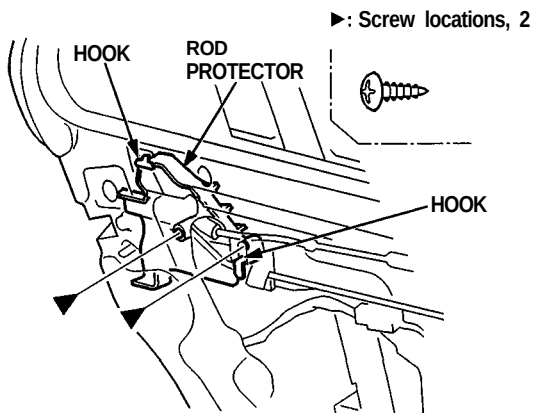

 
3. Remove the outer handle cover, then remove the outer handle holder.

NOTE:

- Take care not to drop the bolt inside the door.
- Remove in numbered sequence.

►: Bolt locations

A ►, 1




4 x 0.8 mm
3 N-m (0.3 kgf-m,
2 lbf-ft)


B ►, 1




5 x 0.8 mm
5 N-m (0.5 kgf-m,
4 lbf-ft)

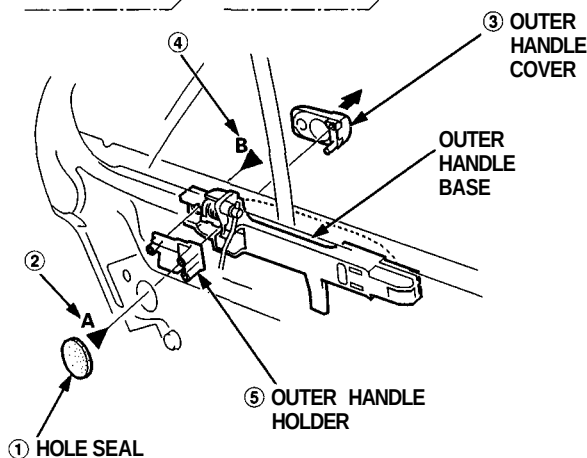

4. Remove the outer handle as shown.

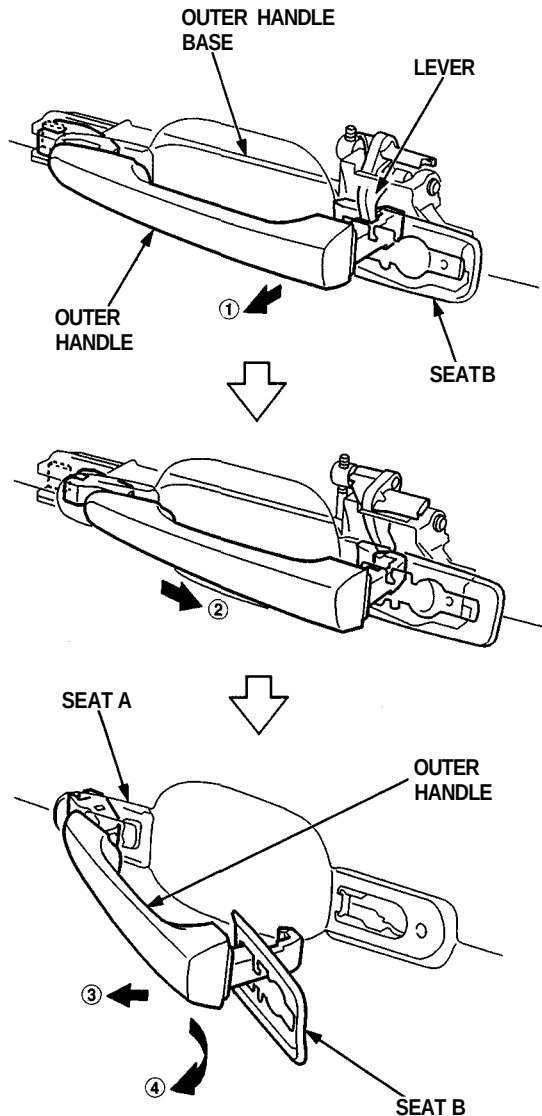

5. Remove the seat A, then loosen the bolt.

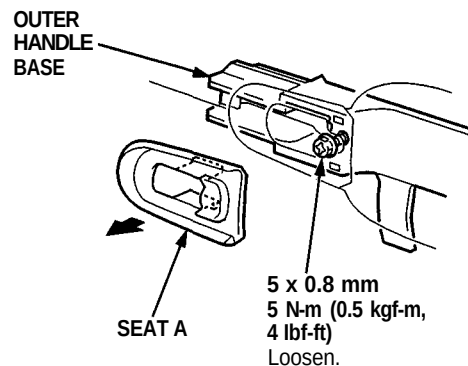



6. Slide the outer handle base, and remove it from the door. Disconnect the connector, detach the clips, and remove the lock crank, then remove the latch with the outer handle rod through the hole in the door. Pry the outer handle rod out from the outer handle base using diagonal cutters.

NOTE:

- To ease reassembly, note location **A** of the outer handle rod on the joint before disconnecting it.
- Take care not to bend the rods.

►: Screw locations

A ►, 2

B ►, 1


6 x 1.0 mm
5 N·m (0.5 kgf·m,
4 lbf·ft)

●: Nut location, 1

6 x 1.0 mm
8 N·m (0.8 kgf·m,
6 lbf·ft)

OUTER HANDLE
ROD
DIAGONAL
CUTTERS
JOINT

BUSHING
Replace.

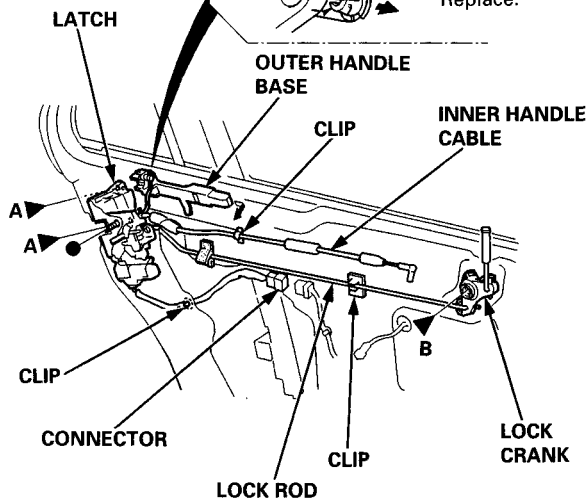

7. Installation is the reverse of the removal procedure.

NOTE: Make sure the door locks and opens properly.