


 


Glass/Quarter Glass/Regulator Removal

1. Remove:
 - Door panel (see page 20-11)
 - Plastic cover (see page 20-9)
 - Inner molding (see page 20-9)
 - Inner sash trim (see page 20-15)
 - Sash trim (see page 20-15)
2. Carefully move the glass until you can see the bolts, then remove them. Carefully pull the glass out through the window slot.

NOTE: Take care not to drop the glass inside the door.

►: Bolt locations, 2

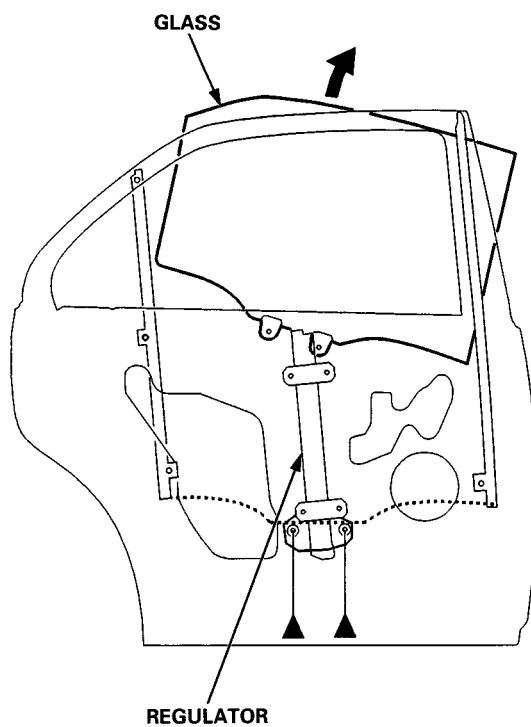

(cont'd)

Doors

Glass/Quarter Glass/Regulator Removal (cont'd)

3. Remove the glass run channel as needed, remove the bolts and screw, then move the rear channel forward.

►: Bolt, screw locations

A ►, 2


B ►, 1



6 x 1.0 mm
9 N-m (0.9 kgf-m,
7 lbf-ft)



4 x 0.8 mm
4 N-m (0.4 kgf-m,
3 lbf-ft)

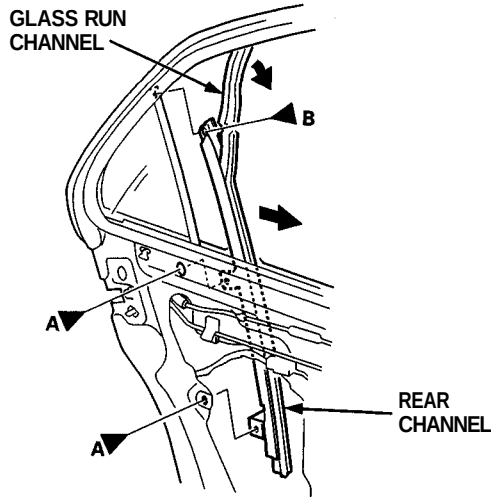


4. Remove the quarter glass.

NOTE: When installing the quarter glass, make sure the outer molding lip is not pinched.

►: Screw locations

A ►, 1

B ►, 1

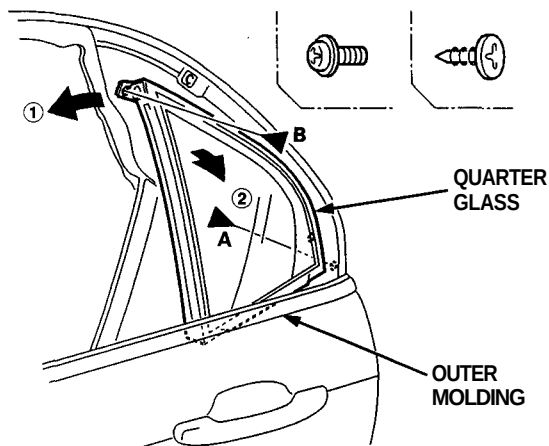


5. Disconnect the connector, then remove the regulator through the hole in the door.


►: Bolt locations, 7



6 x 1.0 mm
8 N-m (0.8 kgf-m,
6 lbf-ft)

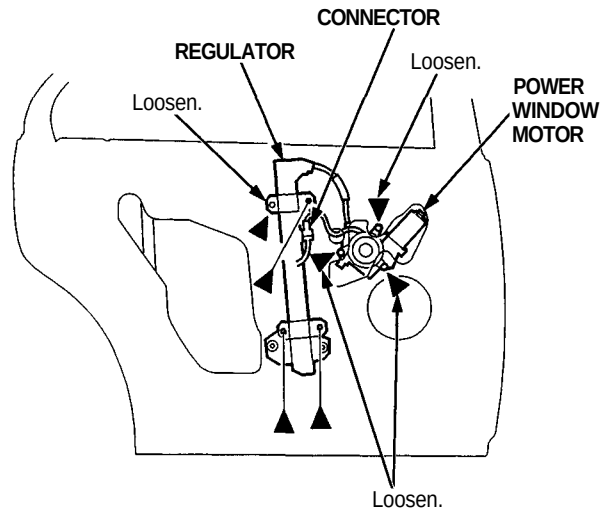

6. Grease all the sliding surfaces of the regulator where shown.

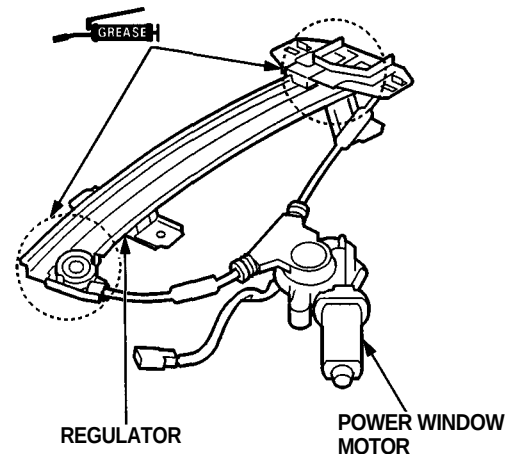

7. Installation is the reverse of the removal procedure.

NOTE: Roll the glass up and down to see if it moves freely without binding. Also make sure that there is no clearance between the glass and glass run channel when the glass is closed. Adjust the position of the glass as necessary (see page 20-16).