

Doors

Glass Adjustment

NOTE:


- Place the vehicle on a firm, level surface when adjusting the glass.
- Check the weatherstrips and glass run channel for damage or deterioration, and replace them if necessary.

1. Remove:
 - Door panel (see pages 20-4, 20-11)
 - Plastic cover (see pages 20-2, 20-9)
2. Raise the glass fully.
3. Loosen the glass mounting bolts and regulator mounting bolts.
4. Push the glass rearward (front door glass) or forward (rear door glass).


A▶: Glass mounting bolt locations.

B▶: Regulator mounting bolt locations.

Front:

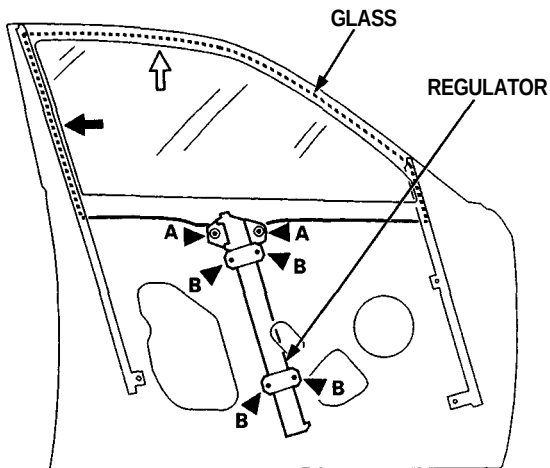


Rear:

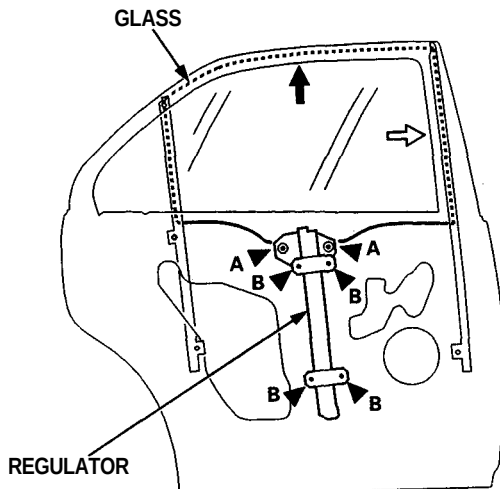


5. Tighten the glass mounting bolts and regulator mounting bolts.
6. Loosen the front channel mounting bolts or rear channel mounting bolts.
7. Lower the glass.
8. Push the front channel or rear channel against the glass, then tighten each mounting bolt.

▶: Front and rear channel mounting bolt locations

Front:

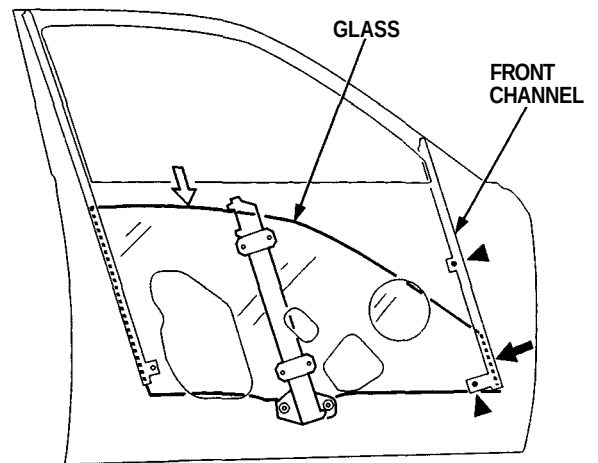


Rear:

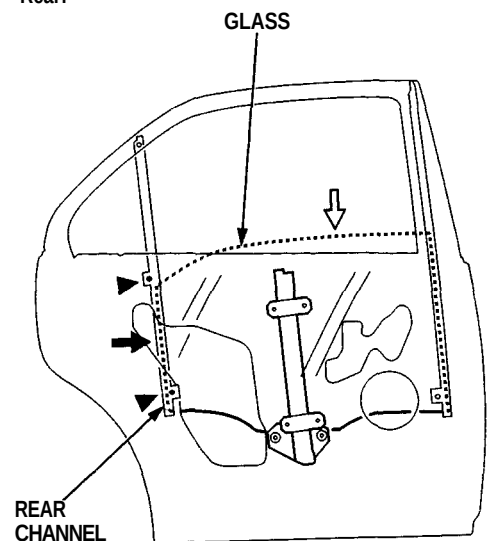



9. Check that the glass moves smoothly.
10. Raise the glass fully and check for gaps.
11. Check the glass operation.

NOTE: Check that the glass contacts the glass run channel evenly.


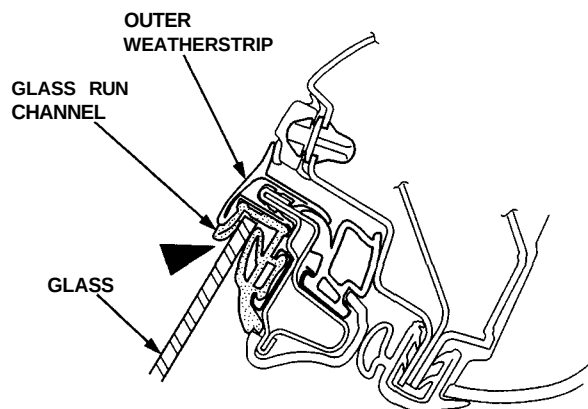


12. Check for water leaks.

Spray water over the roof and on the sealing area as shown.

NOTE:

- Adjust the water pressure as shown.
- Do not squeeze the tip of the hose.

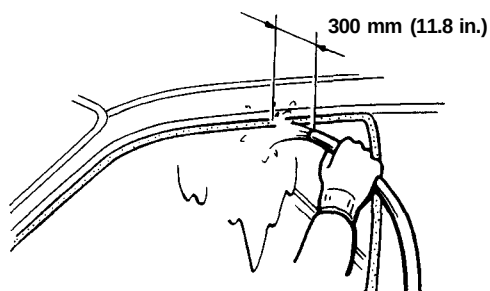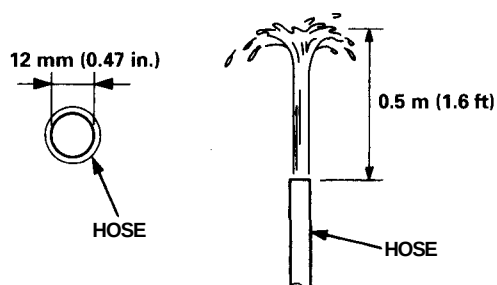

13. Reinstall all removed parts in the reverse order of removal.