



Position Adjustment

NOTE: Place the vehicle on a firm, level surface when adjusting the doors.

After installing the door, check for a flush fit with the body, then check for equal gaps between the front, rear, and bottom door edges and the body. The door and body edges should also be parallel. Before adjusting, replace the mounting bolts. Adjust at the hinges as shown.


CAUTION: Place a shop towel on the jack to prevent damage to the door when loosening the door and hinge mounting bolts for adjustment.

DOOR MOUNTING BOLTS

8 x 1.25 mm

29 N·m (3.0 kgf-m, 22 lbf-ft)

Loosen the door mounting bolts slightly to move the door in or out until it's flush with the body. If necessary, you can install a shim behind one hinge to make the door edges parallel with the body.

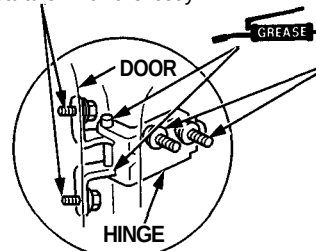


HINGE MOUNTING BOLTS


8 x 1.25 mm

29 N·m (3.0 kgf-m, 22 lbf-ft)

Remove the inner fender, loosen the hinge mounting bolts, and move the door backward or forward, up or down as necessary to equalize the gaps.

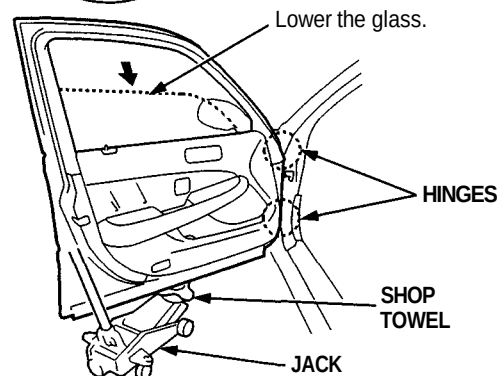

The door and body edges should be parallel.

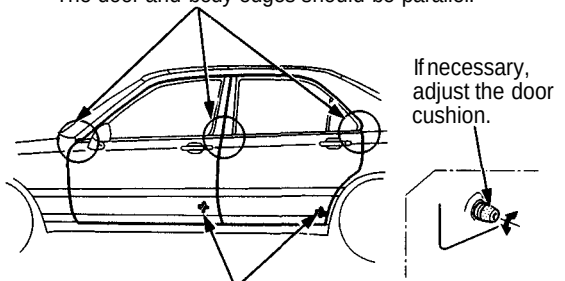

NOTE:

DOOR CUSHIONS

- Apply touch-up paint to the hinge mounting bolts and around the hinges.
- Check for water leaks.