


## Doors

### Striker Adjustment

Make sure the door latches securely without slamming it. If necessary, adjust the striker: The striker nuts are fixed. The striker can be adjusted slightly up or down, and in or out.

1. Loosen the screws, then insert a shop towel between the body and striker.

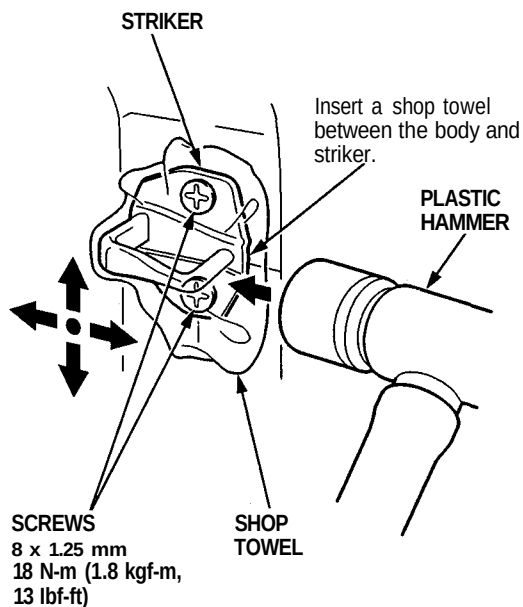

2. Lightly tighten the screws.
3. Wrap the striker with a shop towel, then adjust the striker by tapping it with a plastic hammer.

**CAUTION:** Do not tap the striker too hard.

4. Loosen the screws and remove the shop towel.
5. Lightly tighten the screws.
6. Hold the outer handle out, and push the door against the body to be sure the striker allows a flash fit. If the door latches properly, tighten the screws and recheck.


 
## Mirrors

### Power Mirror Removal

NOTE: Take care not to scratch the mirror and door.

1. Raise the glass fully.
2. Remove the door panel (see page 20-4), then remove the plastic cover as needed.
3. Disconnect the connector, and detach the clip. Remove the nuts, detach the clip, then remove the mirror while holding it.

• Nut locations, 3

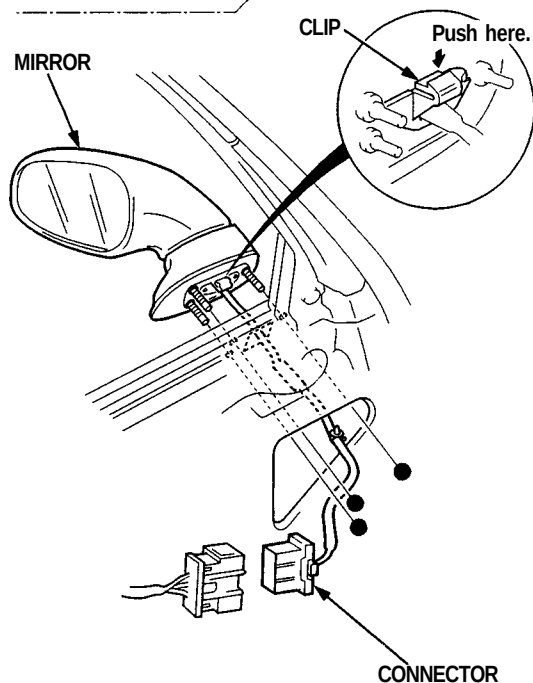

4. Installation is the reverse of the removal procedure.

NOTE: Make sure the connector is connected properly.