



Headliner

Removal


CAUTION: When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.

NOTE:

- Take care not to bend and scratch the headliner.
- Be careful not to damage the dashboard and other interior trim.

1. Remove the grab handles.

►: Bolt locations, 2

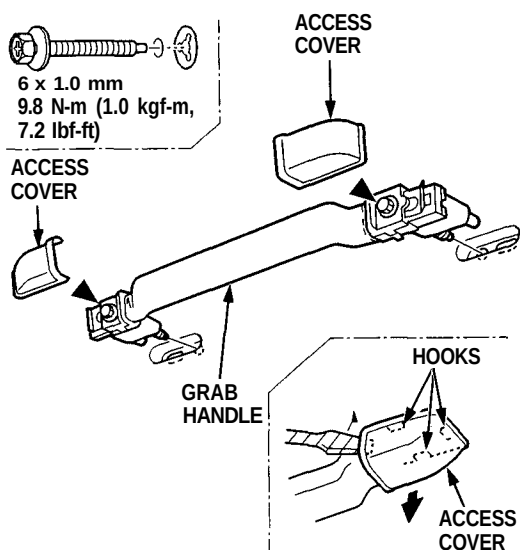

2. Remove:


- Rear seat cushion and rear seat-back (see page 20-65)
- Front and rear side trim (see page 20-43)
- Front and rear door trim (see page 20-43)
- Center pillar trim (see page 20-43)
- Front pillar trim (see page 20-43)
- Rear pillar trim (see page 20-43)
- Roof side trim (see page 20-43)
- Ceiling lights (see section 23)
- Window antenna terminal cover (see page 20-27)
- Moonroof switch (see section 23)

3. Remove the sunvisor and holder from each side. Disconnect both positive terminals or 2P connector (with Homelink, remove the control panel).

►: Screw locations


A ►, 4

B ►, 2

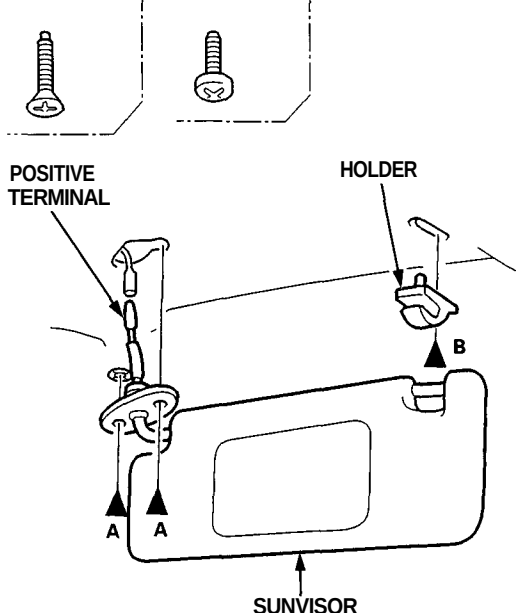

4. Remove the sunglasses holder.

►: Screw locations, 2

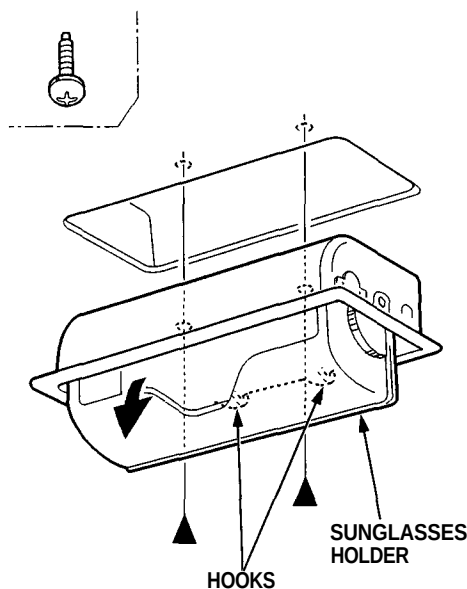

(cont'd)

Headliner



Removal (cont'd)

5. Remove the clips and roof trim, detach the rear clips, then remove the headliner.

▷: Clip locations

A ▷, 3

B ▷, 4

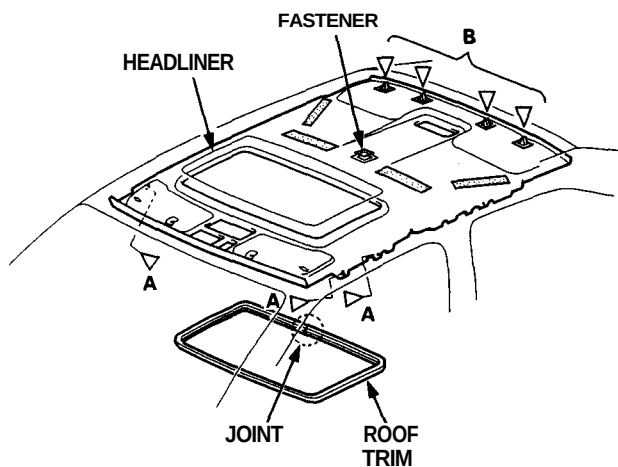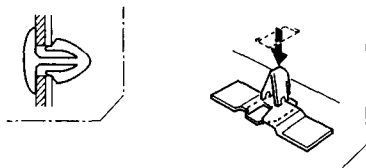

6. Remove the headliner through the passenger's door opening.
7. Installation is the reverse of the removal procedure.

NOTE:

- When inserting the headliner through the door opening, be careful not to fold or bend it. Also, be careful not to scratch the body.
- Check that both sides of the headliner are securely attached to the trim.
- When installing the roof trim, install the joint toward the rear.