

Carpet


 
 
Removal

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the Restraints ([section 24](#)) before performing repairs or service.

1. Remove:
 - Front seat (see page [20-57](#))
 - Rear seat cushion (see page [20-67](#))
 - Front and rear side trim (see page [20-43](#))
 - Kick panel (see page [20-43](#))
 - Front and rear door trim (see page [20-43](#))
 - Front seat belt lower anchor (see [section 24](#))
 - Center pillar trim (see page [20-43](#))
 - Rear heater cover (see page [20-48](#))
 - Console panel and rear console, '96 - 98 models (see page [20-48](#))
 - Console panel and rear console, '99 - 01 models (see page [20-49](#))
 - Dashboard lower cover (passenger's) (see page [20-53](#))
 - Glove box (see page [20-53](#))
 - Opener cover (see page [20-89](#))
2. Remove the accelerator pedal stop and footrest.

►: Bolt locations, 2

●: Nut locations, 2

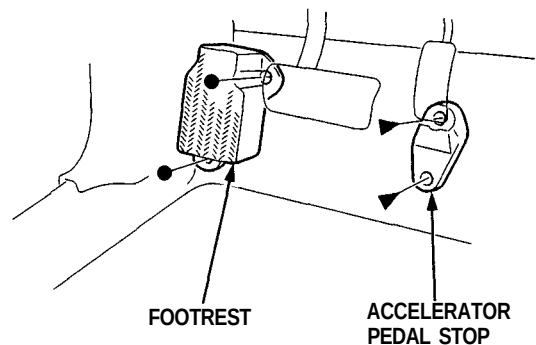




3. Remove the console lower carpet from each side. Cut area (A) in the carpet, then pull it back as shown.

▷: Clip locations


A ▷, 6 B ▷, 2

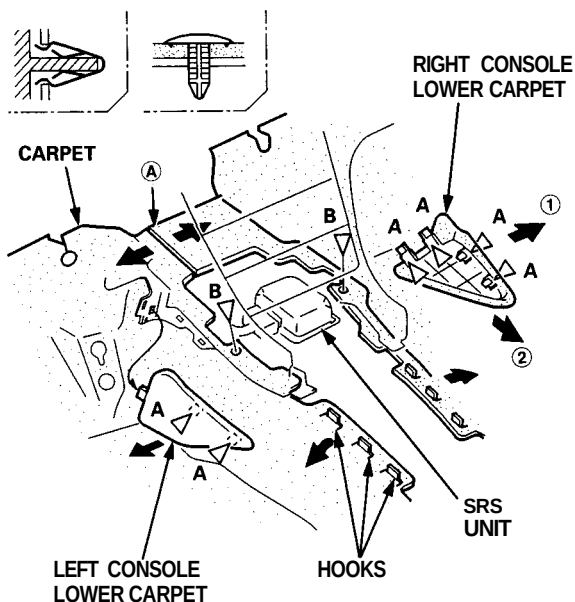

4. Detach the retainers, then remove the carpet.

NOTE: Take care not to damage, wrinkle, or twist the carpet.

▷: Clip locations, 4

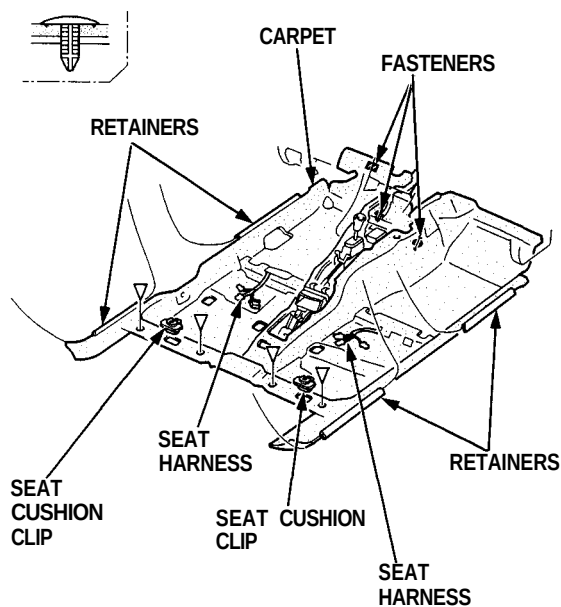


5. Installation is the reverse of the removal procedure.

NOTE:

- Take care not to damage, wrinkle, or twist the carpet.
- Make sure the seat harness is routed correctly.
- If necessary, replace any damaged clips.
- Reattach the cut area (A) in the carpet with a wire tie as follows.

- a. Tie a string to the end of the carpet, then slip the carpet under the heater unit by pulling the string.

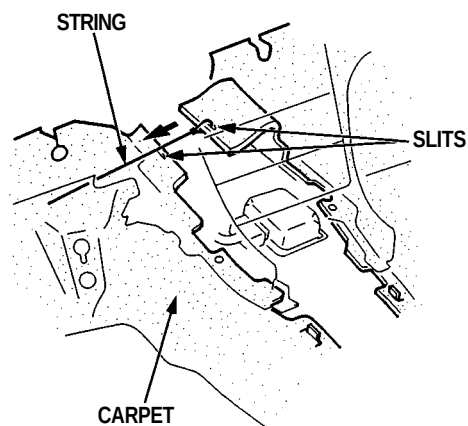

- b. Reattach with a wire tie.

