

Dashboard

Component Removal/Installation

CAUTION: When prying with a flat-tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.

NOTE: Take care not to scratch the dashboard and related parts.

Instrument panel:

1. Remove the center air vent.
2. Remove the climate control unit and audio unit as an assembly ('96 - 98 models see page 20-51, '99 - 01 models see page 20-52).


NOTE: Do not disconnect the connectors.

3. Remove the dashboard lower cover and driver's switch trim.
4. Remove the screws, detach the clips, then carefully pull out the instrument panel in the numbered sequence. Disconnect the connector, then remove it.

NOTE: Release the adhesive at the left side of the skirt carefully.

►: Screw locations, 2 ▷: Clip locations

A ▷, 4 B ▷, 2

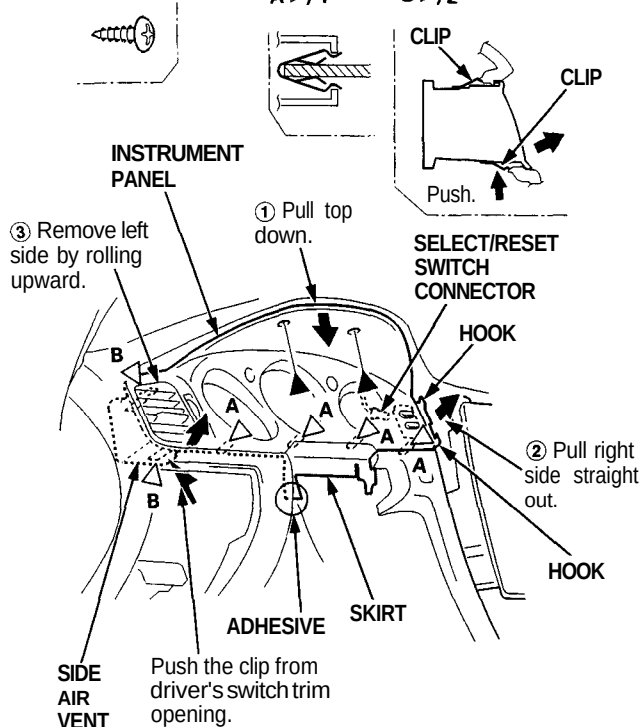


5. Installation is the reverse of the removal procedure.

NOTE: Make sure the connectors are connected properly.

Dashboard lower cover:

Detach the clips, then remove the dashboard lower cover.

▷: Clip locations, 8

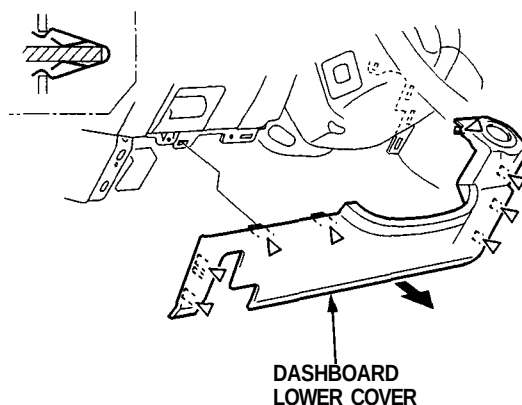


Installation is the reverse of the removal procedure.

Driver's switch trim:

1. Remove the dashboard lower cover.
2. Remove the screw, detach the clips, then pull out the driver's switch trim. Disconnect the connectors, then remove it.

►: Screw location, 1 ▷: Clip locations

A ▷, 1 B ▷, 1

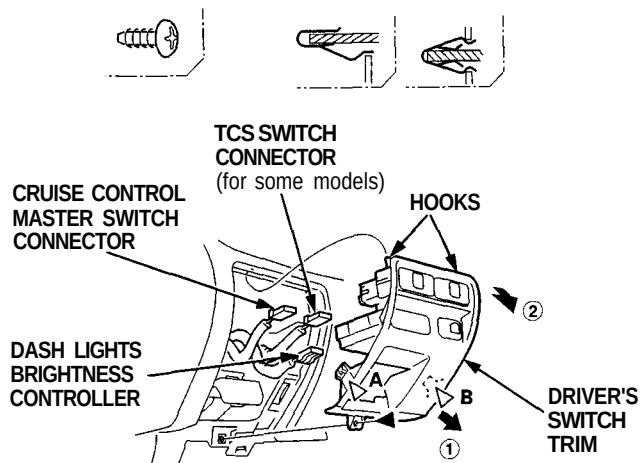

3. Installation is the reverse of the removal procedure.

NOTE: Make sure the connectors are connected properly.



Climate control unit and audio unit ('96 - 98 models):

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the Restraints ([section 24](#)) before performing repairs or service.


1. Remove the console panel (see page [20-48](#)).
2. Remove the center air vent.

NOTE: Insert a flat metal plate under the B clips, then detach the B clips by prying up. Pull the center air vent backward while prying the clips.


▷: Clip locations

A ▷, 2

B ▷, 2

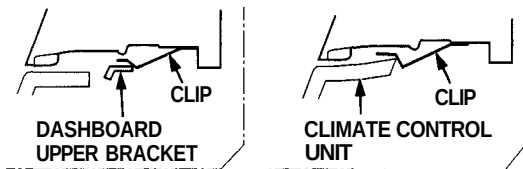



C ▷, 4

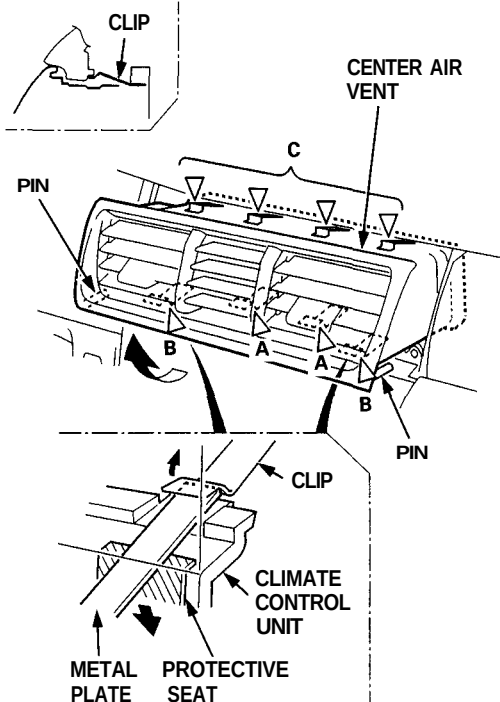

3. Make sure you have the anti-theft code for the radio, then write down the frequencies for the radio's preset buttons.

4. Remove the bolts, then pull out the climate control unit and audio unit as an assembly. Disconnect the connectors and antenna leads, then remove it.

 ►: Bolt locations, 4

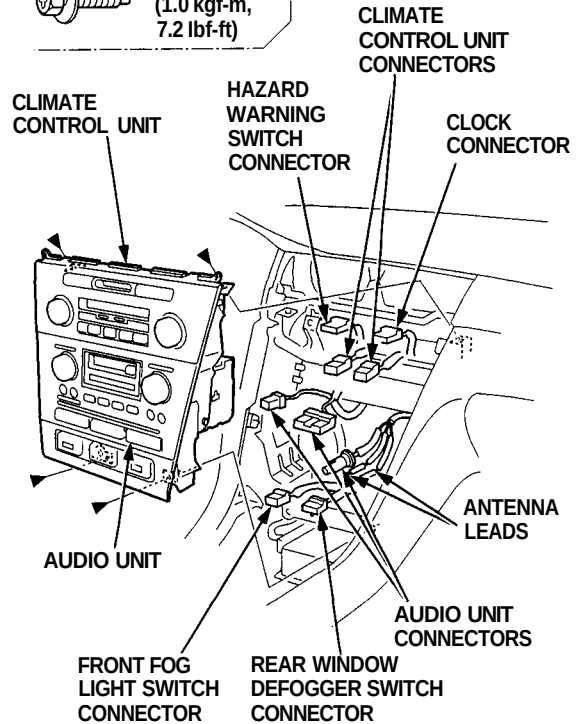

5. Installation is the reverse of the removal procedure.

NOTE:

- Make sure the connectors and antenna lead are connected properly.
- Enter the anti-theft code for the radio, then enter the customer's radio station presets.

(cont'd)

Dashboard

Component Removal/Installation (cont'd)


 
Climate control unit, audio unit and center air vent ('99 - 01 models):

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the Restraints ([section 24](#)) before performing repairs or service.

1. Remove:
 - Console panel (see page [20-49](#))
 - Console lower carpet, both sides (see page [20-47](#))
2. Make sure you have the anti-theft code for the radio, then write down the frequencies for the radio's preset buttons.
3. Remove the bolts. Pull out the bottom of the climate control unit, audio unit, and center air vent as an assembly, and carefully detach the clip at the center air vent. Disconnect the connectors and antenna leads, then remove it.

►: Bolt locations, 4

►: Clip locations, 4

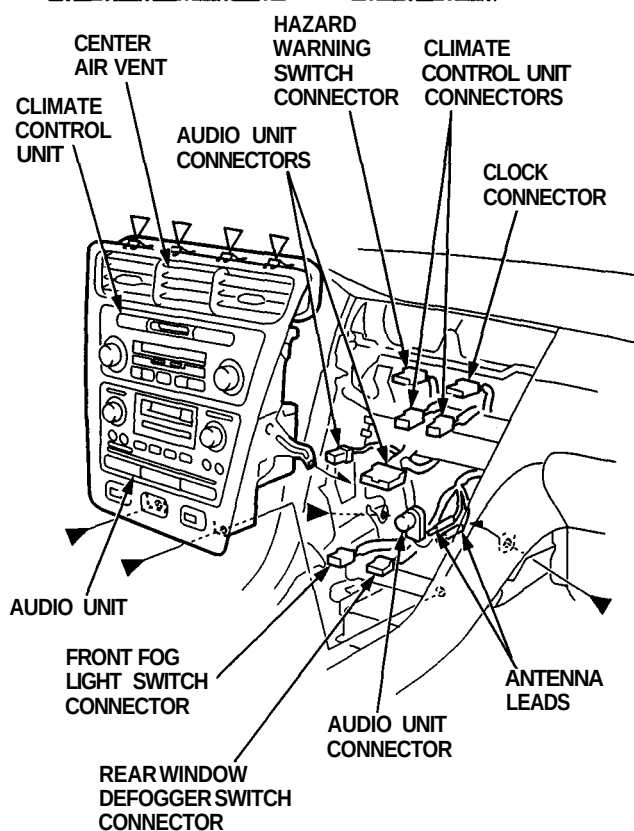

4. Installation is the reverse of the removal procedure.

NOTE:


- Make sure the connectors and antenna lead are connected properly.
- Enter the anti-theft code for the radio, then enter the customer's radio station presets.



Glove box:



1. Remove the dashboard lower cover.

▷: Clip locations, 3

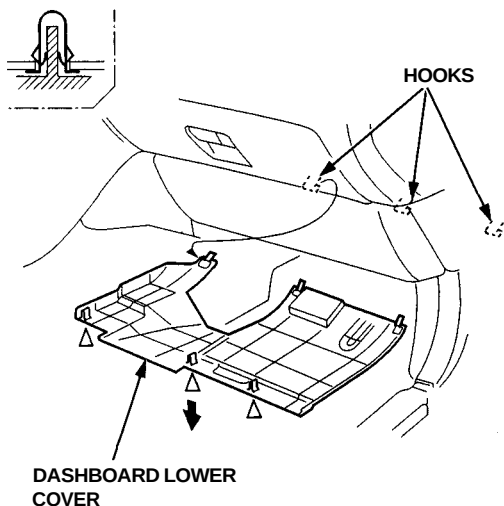


2. Remove the glove box stop from each side.

 ▷: Bolt locations, 2

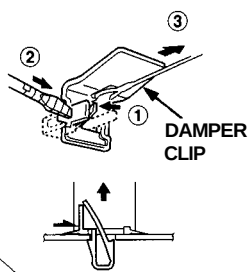


TRUNK LID
OPENER MAIN
SWITCH
CONNECTOR

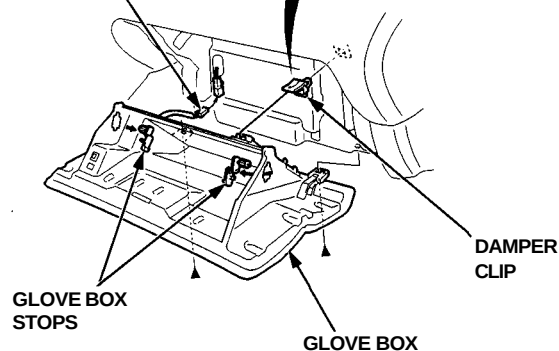

3. Detach the damper clip while holding the glove box, and disconnect the connector.
4. Remove the bolts, then remove the glove box.

5. Remove the glove box back cover.

▷: Screw locations, 3 ▷: Clip locations, 4

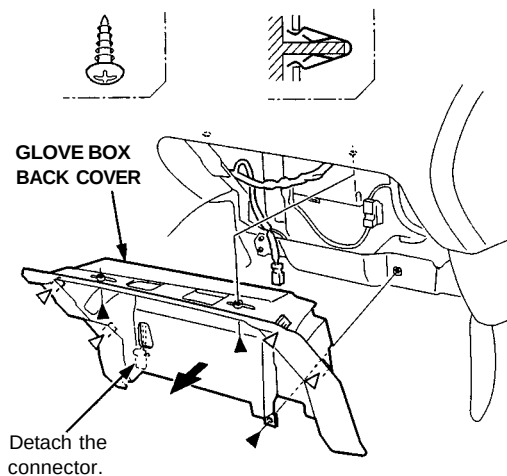


6. Installation is the reverse of the removal procedure.

Passenger's dashboard panel:

1. Remove the side air vent.
2. Carefully detach the clips, then pull out the passenger's dashboard panel.

▷: Clip locations, 3

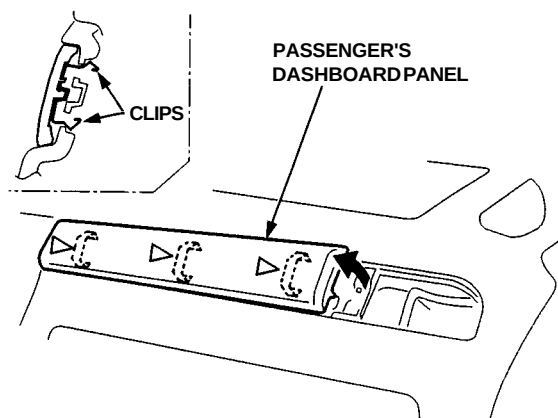

3. Installation is the reverse of the removal procedure.

(cont'd)


Dashboard

Component Removal/Installation (cont'd)

Side air vent (passenger's):

Insert a flat metal plate under the clips, then detach the clips by prying up. Pull the side air vent backward while prying the clips.

▷: Clip locations, 4

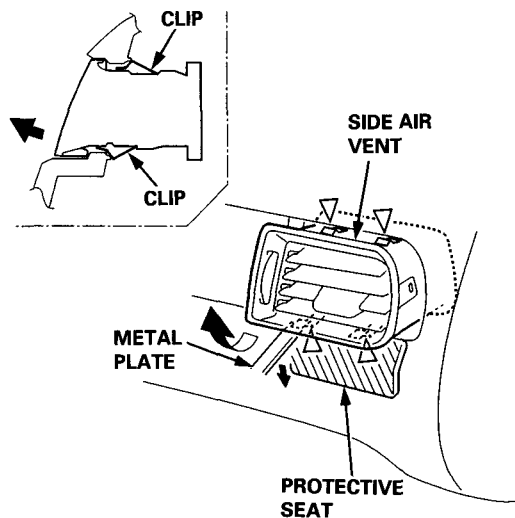

Side defogger trim:

Carefully pry the side defogger trim at the rear edge, then remove it.

▷: Clip location, 1

