



Front Seat

Removal


SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the Restraints (section 24) before performing repairs or service.

CAUTION: When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.



NOTE: Take care not to scratch the seat covers and body.

1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the pre-set buttons.
2. Disconnect the negative battery cable, and wait at least 3 minutes before beginning work.
3. Remove the seat track end covers, then remove the bolts.

Seat track end cover removal:

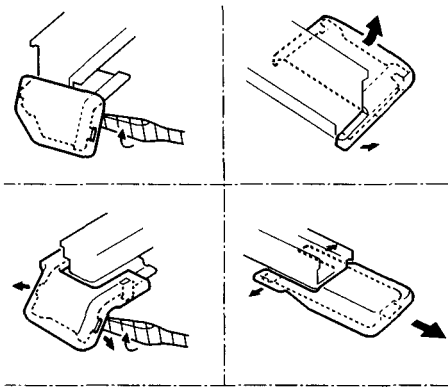


►: Bolt locations, 4

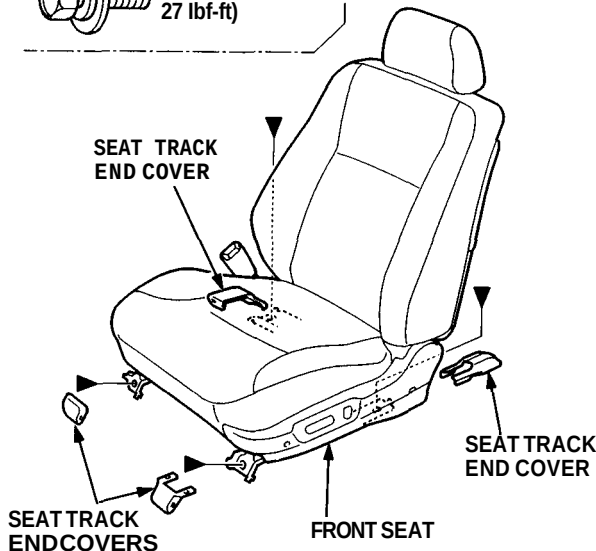 


4. Lift the front seat, then disconnect the connectors.

Driver's seat:

►: Clip location

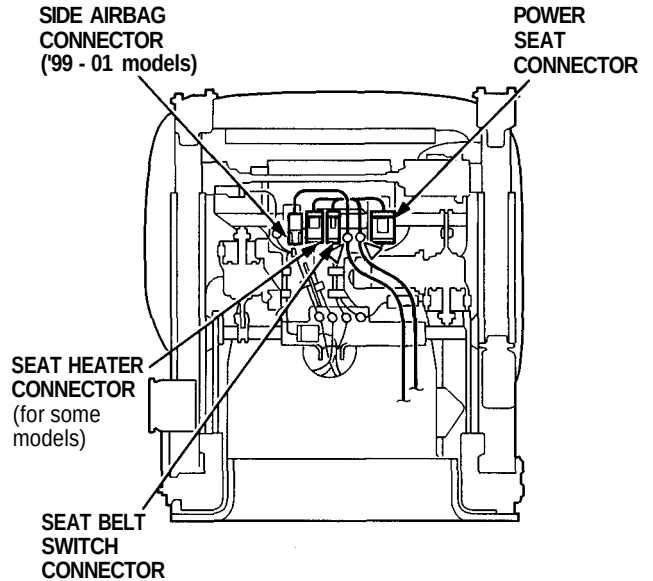

Passenger's seat:

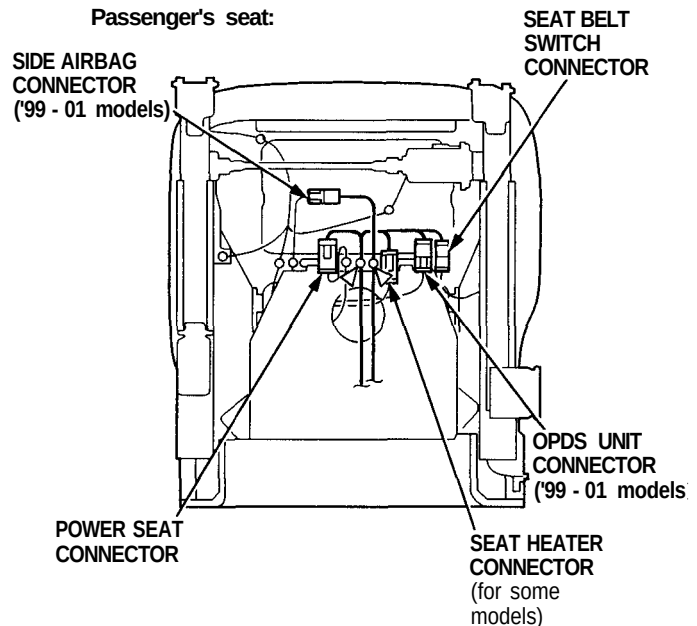

5. Remove the headrest.
6. Carefully remove the front seat through the door opening.
7. Installation is the reverse of the removal procedure.

NOTE:

- Make sure the connectors are connected properly.
- Enter the anti-theft code for the radio, then enter the customer's radio station presets.