

Front Seat


Disassembly

CAUTION: When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.

NOTE: Take care not to scratch the seat covers and body.

8-way power adjustable (with seat heater):

NOTE: Refer to page [20-65](#) for the seat wire harness installation.

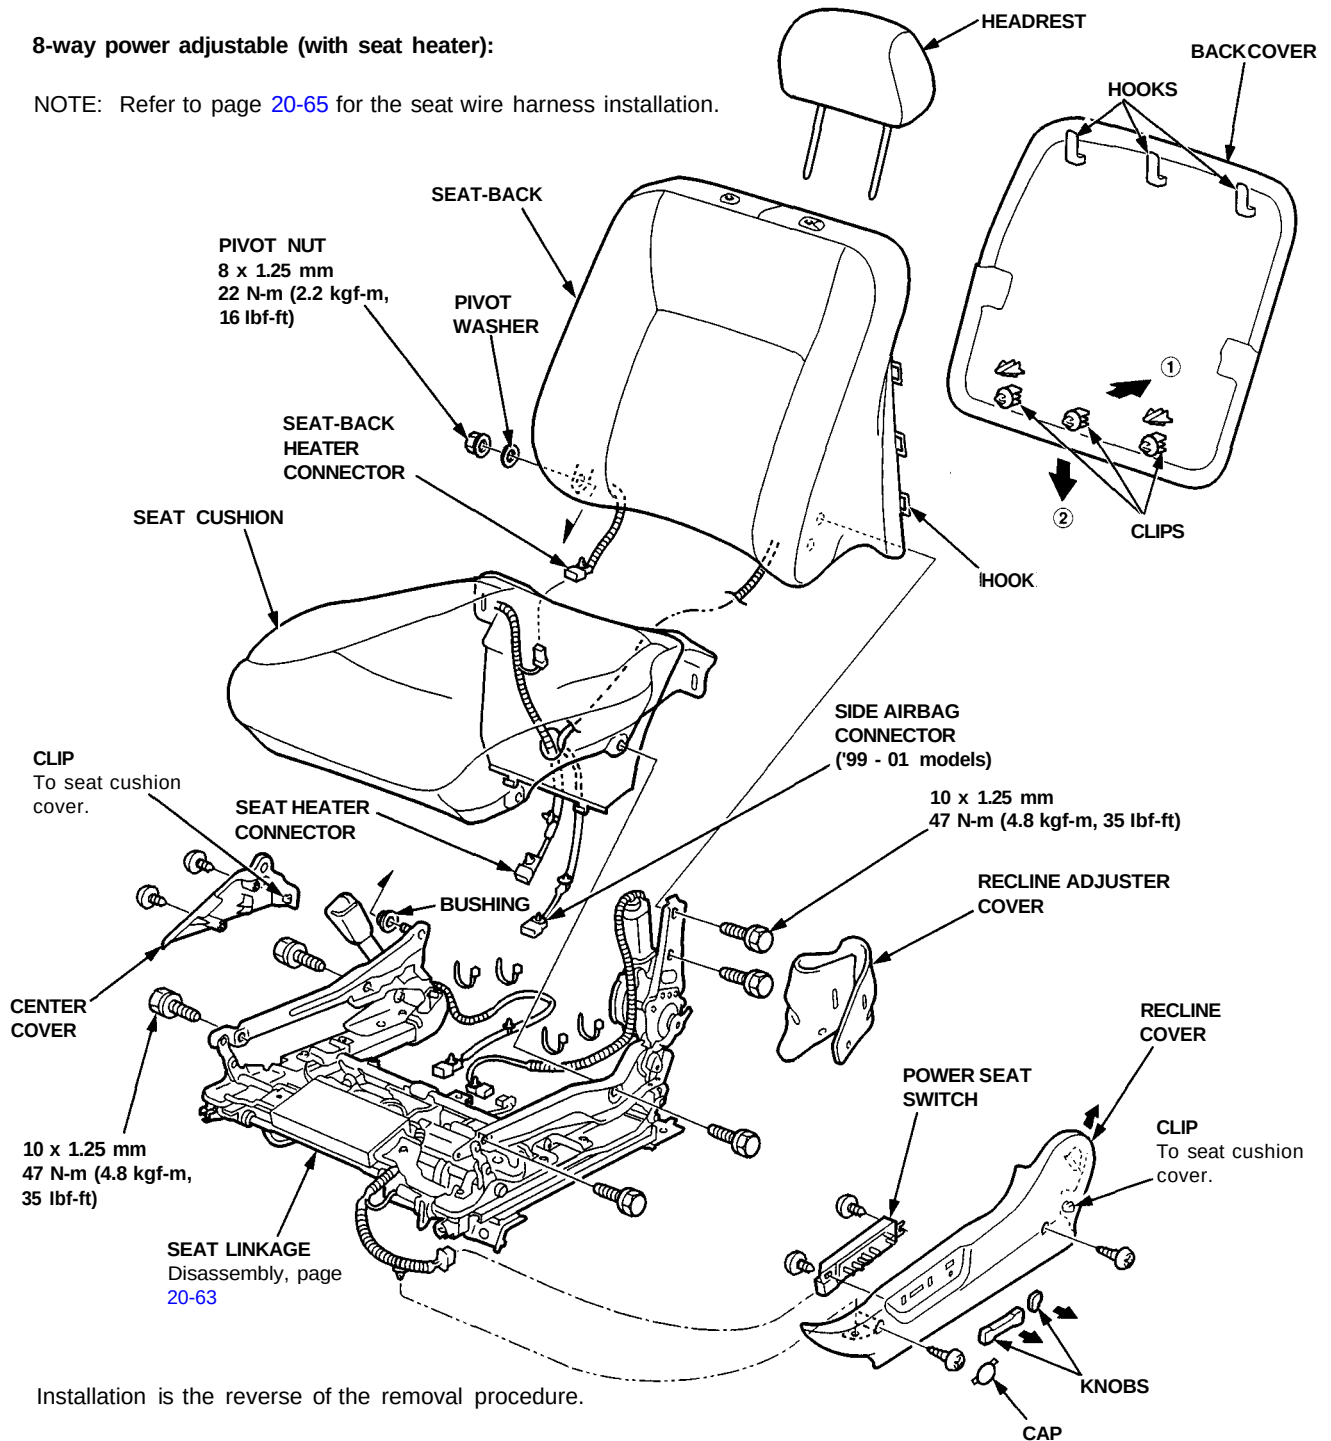

NOTE:


- Make sure the bushing and pivot washer are installed properly.
- To prevent wrinkles when installing the seat-back cover, make sure the material is stretched evenly over the pad.
- Grease the sliding portion.



Disassembly

4-way power adjustable (with seat heater):

NOTE: Refer to page [20-66](#) for the seat wire harness installation.

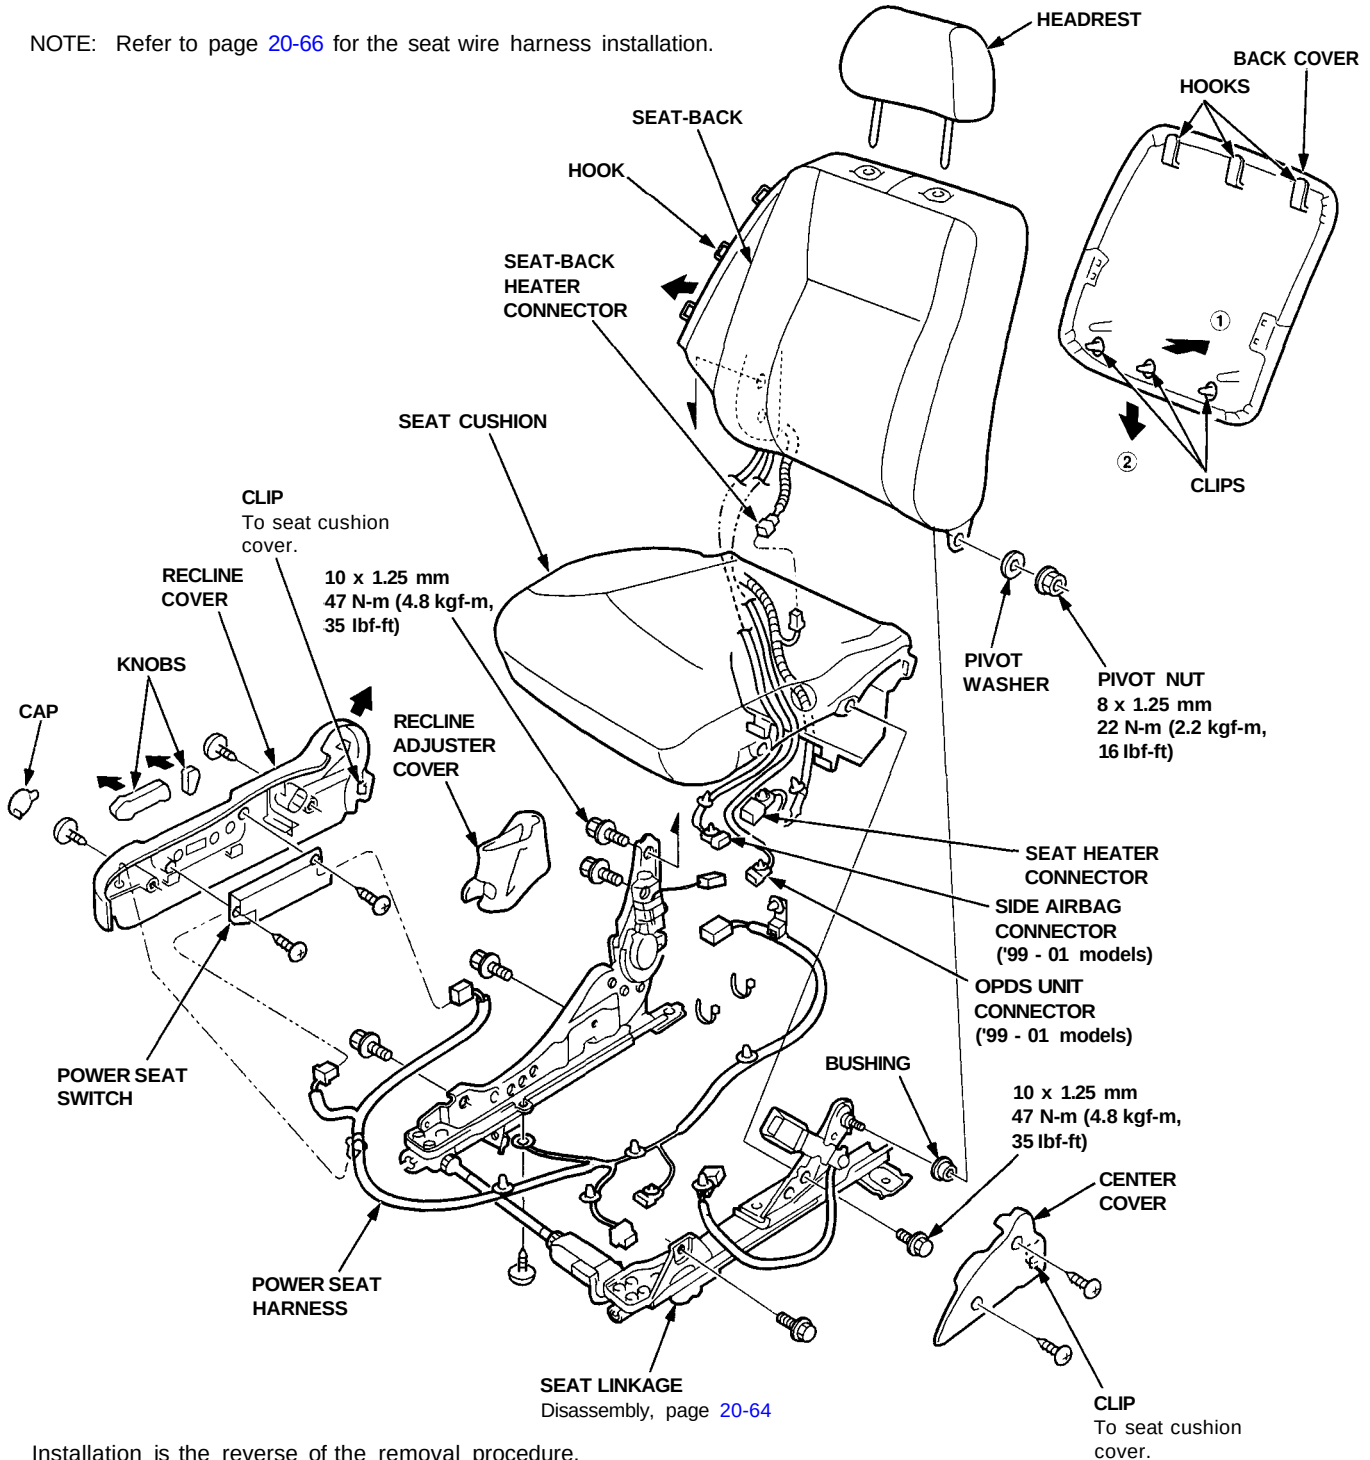

NOTE:

- Make sure the bushing and pivot washer are installed properly.
- To prevent wrinkles when installing the seat-back cover, make sure the material is stretched evenly over the pad.
- Grease the sliding portion.