




Seat Linkage Disassembly

CAUTION: Put on gloves to protect your hands.

8-way power adjustable:

NOTE:

- Before removing the front seat, raise the seat cushion to its maximum height.
- To remove the slide motor and slide gearbox, slide the front seat backward fully.
- Refer to page 20-65 for the power seat wire harness installation.

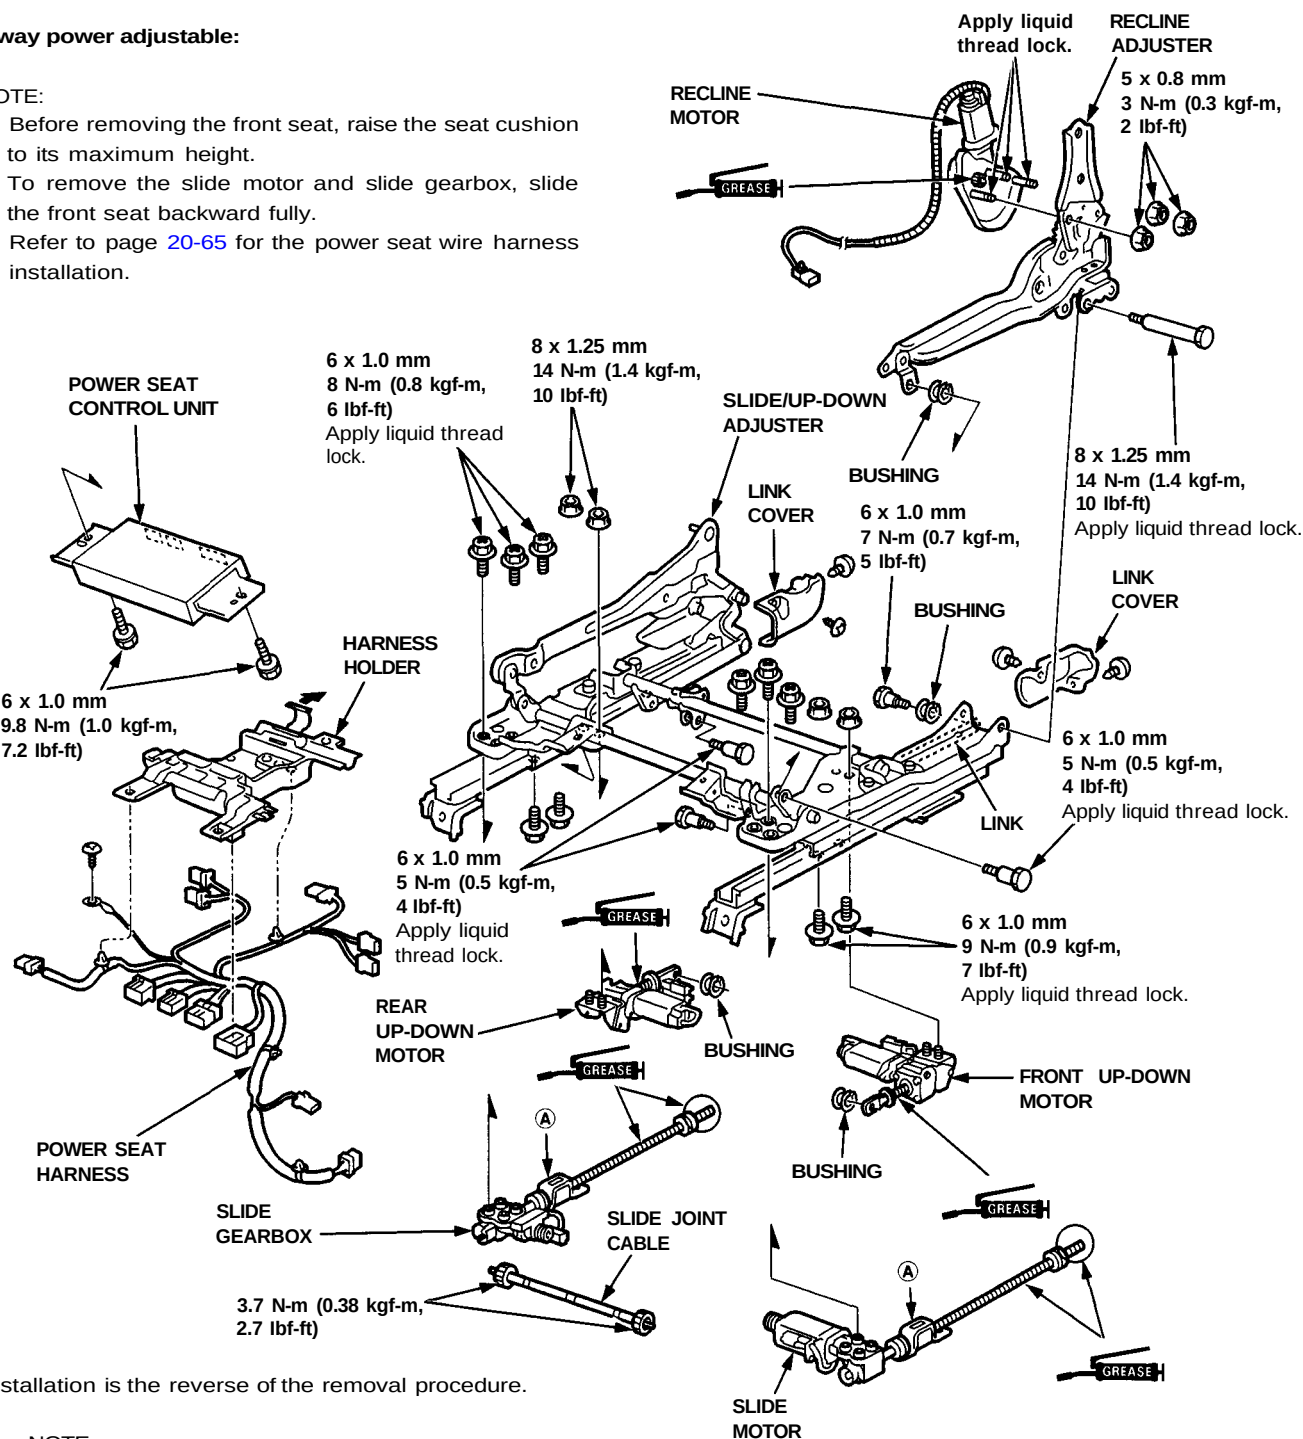

Installation is the reverse of the removal procedure.

NOTE:

- Replace the bushings with new ones.
- Before installing the slide motor and slide gearbox, align portion (A) as shown.
- Grease each lead screw and gear portion of the recline motor.
- Check the slide motor, slide gearbox, up-down motor, and recline motor operations.


(cont'd)

Front Seat

Seat Linkage Disassembly (cont'd)

4-way power adjustable:

NOTE: To remove the slide motor and slide gearbox, slide the front seat backward fully.

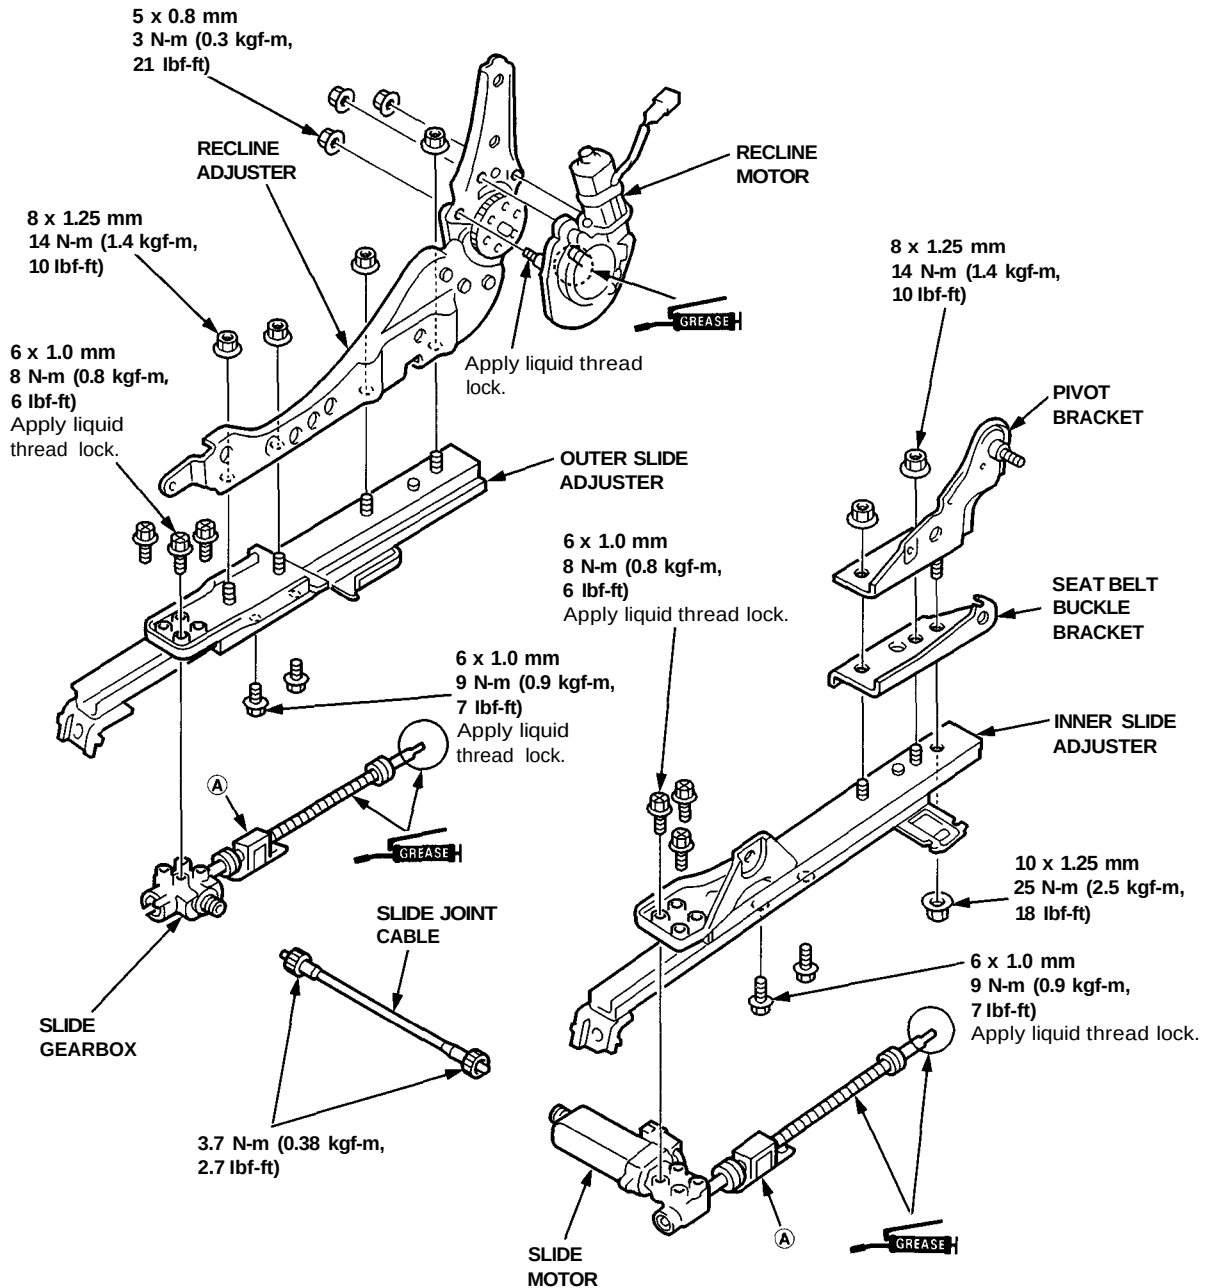

Installation is the reverse of the removal procedure.

NOTE:

- Before installing the slide motor and slide gearbox, align portion (A) as shown.
- Grease the slide lead screws and gear portion of the recline motor.
- Check the slide motor, slide gearbox, and recline motor operations.