


Rear Seat

Trunk Pass-through Cover Key Cylinder Replacement


NOTE:

- When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.
- Take care not to scratch the cover.

1. Using a flat-tip screwdriver, pry the rear seat handle up at either hook portion on forward side of the trunk pass through cover. Then slide the handle half-way up.

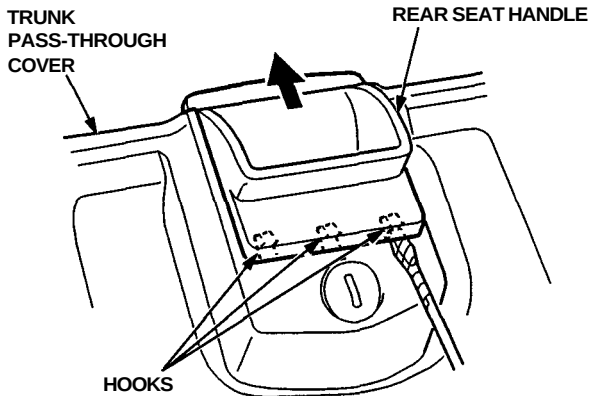


2. From trunk compartment side of the cover, using a small screwdriver, press the inside hook down through the access hole.

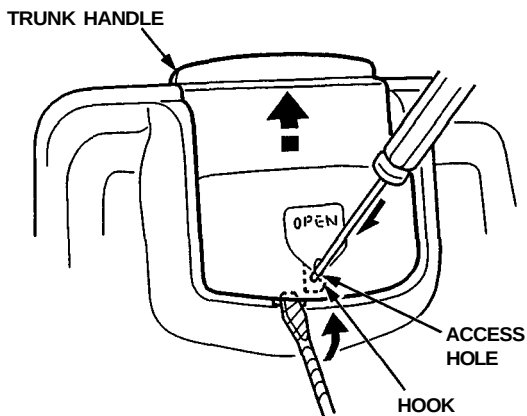

3. While pressing the hook, pry the trunk handle up with a flat-tip screwdriver.

4. Remove the trunk handle and rear seat handle together at the same time.

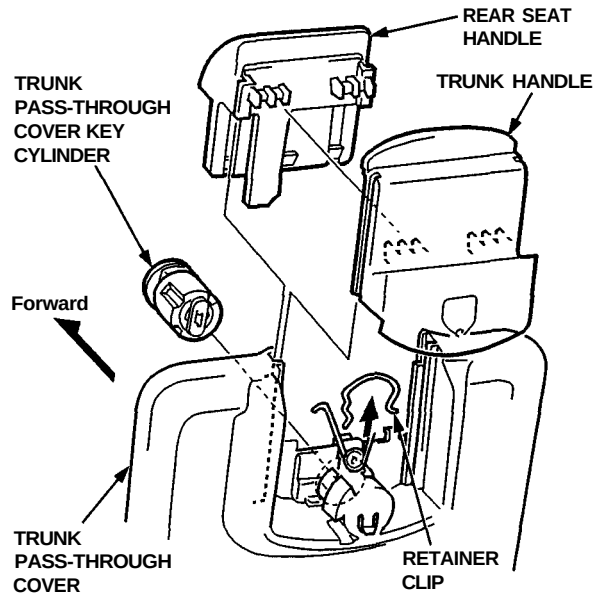

5. Remove the retainer clip, then remove the trunk pass-through cover key cylinder from the cover.
6. Install the key cylinder in the reverse order of removal, and note these items:

- Put the two handles together before installing them on the trunk pass-through cover.
- Make sure the trunk pass-through cover opens properly and locks securely.