




Seat Cover Replacement

CAUTION: Put on gloves to protect your hands.


NOTE: Take care not to tear the seams or damage the seat covers.

Seat-back cover:


1. Remove the seat-back (see page 20-67).
2. Remove the armrest lid and armrest (see page 20-67).
3. Remove the headrest guides.

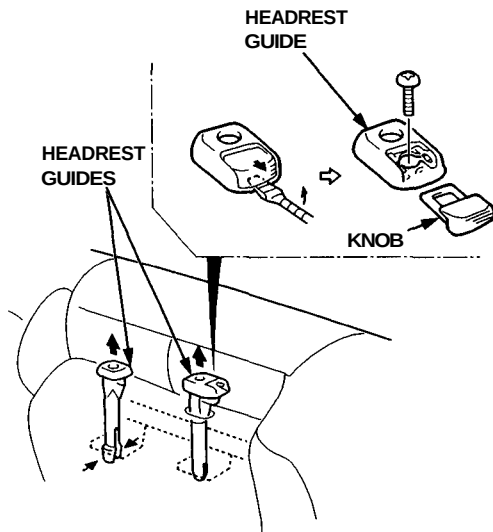


4. Remove the center seat belt guide ('98 - 01 models).

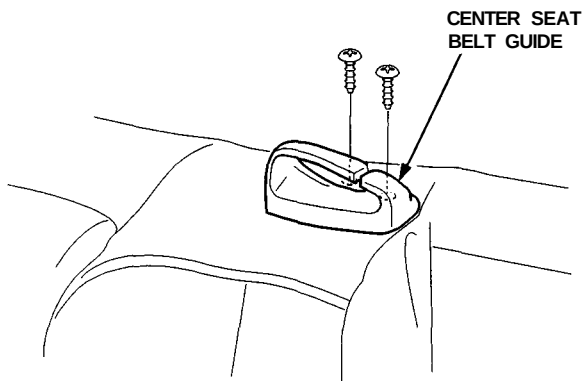

5. Loosen the seat-back cover by releasing all the clips, hooks, and inside springs.

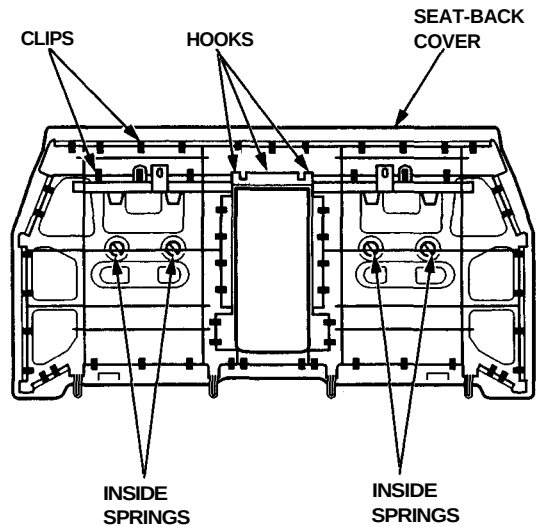

6. Pull back the edge of the seat-back cover all the way around, release the clips, and remove the seat-back cover.

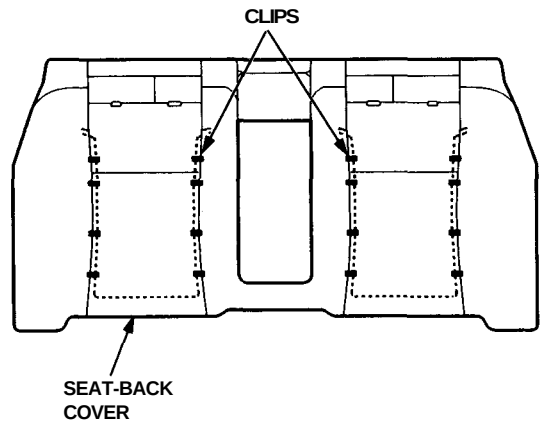

7. Installation is the reverse of the removal procedure.

NOTE:

- To prevent wrinkles when installing a seat-back cover, make sure the material is stretched evenly over the pad before securing the hooks, clips and inside springs.
- Replace the released clips with new ones.


(cont'd)

Rear Seat


Seat Cover Replacement (cont'd)

Seat cushion cover:

1. Remove the seat cushion (see page 20-67).
2. Loosen the seat cushion cover by releasing all the clips.

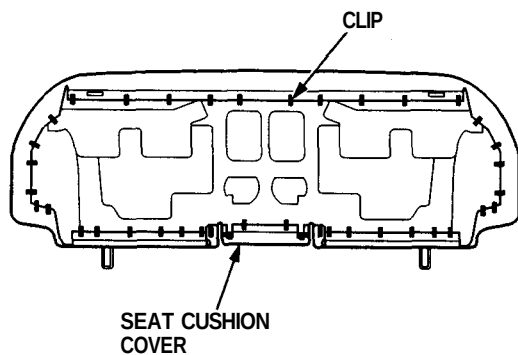

3. Pull back the edge of the seat cushion cover all the way around, release the clips, and remove the seat cushion cover.

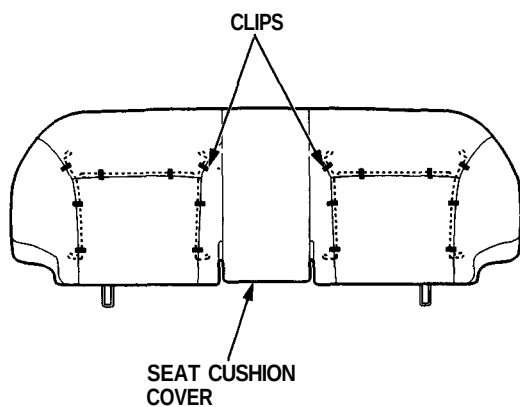

4. Installation is the reverse of the removal procedure.

NOTE:

- To prevent wrinkles when installing a seat cushion cover, make sure the material is stretched evenly over the pad before securing the clips.
- Replace the released clips with new ones.

