



Opener Cables

Removal

NOTE:


- When removing the clips, use a clip remover.
- Take care not to bend the opener cables.

Hood opener cable:


NOTE: Remove the inner fender (see page 20-85) and kick panel (see page 20-43) from the left side of the vehicle.

▷: Clip locations



A ▷, 4

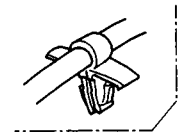

B ▷, 1

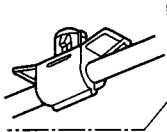

C ▷, 4

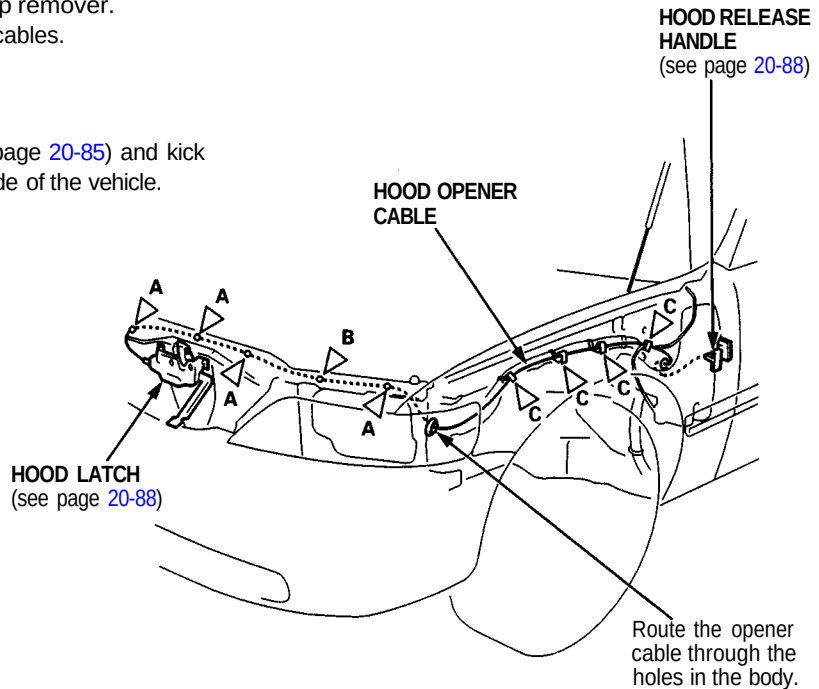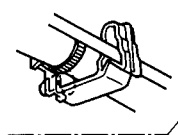


Fuel fill door opener cable:

NOTE: Remove the following parts from the left side of the vehicle, then pull the carpet and rear carpet back, as necessary (see page 20-46).



- Front and rear side trim (see page 20-43)
- Front and rear door trim (see page 20-43)
- Front seat belt lower anchor (see section 24)
- Center pillar trim (see page 20-43)
- Rear seat cushion and rear seat-back (see page 20-67)
- Trunk front trim (see page 20-44)
- Spare tire lid (see page 20-44)
- Rear trim panel and trunk side trim (see page 20-44)

▷: Clip locations

A ▷, 1

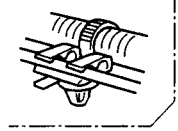

B ▷, 1

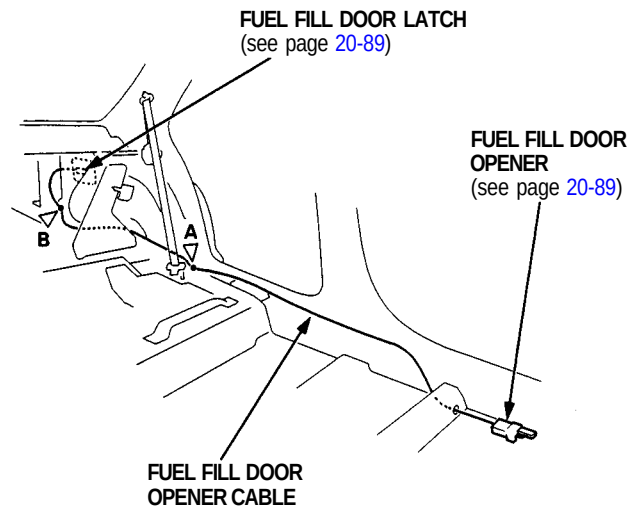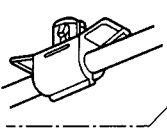

Installation is the reverse of the removal procedure.

NOTE:

- Make sure each opener cable is routed and connected properly.
- Make sure the hood and fuel fill door open properly.