

Opener and Latch


Removal

NOTE: Take care not to bend the opener cables.

Hood release handle:

NOTE: Remove the dashboard lower cover (see page 20-49).

►: Bolt locations, 2

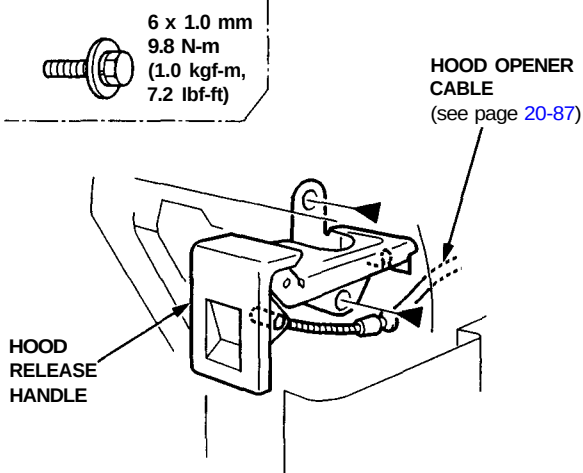



Installation is the reverse of the removal procedure.

NOTE:

- Make sure the opener cable is connected properly.
- Make sure the hood opens properly and locks securely.

Hood latch:

 
►: Bolt locations, 3

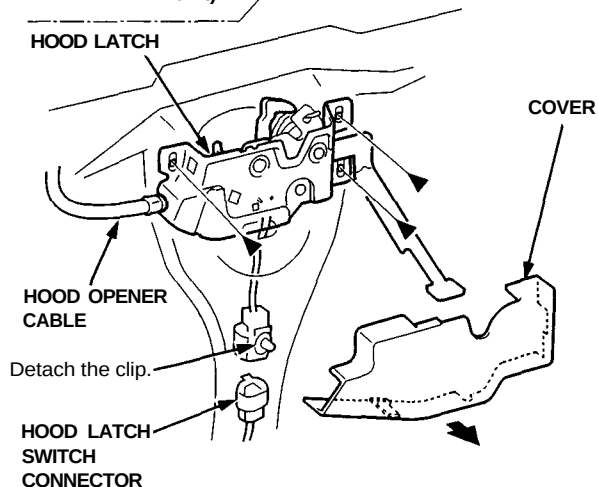

Installation is the reverse of the removal procedure.

NOTE:

- Make sure the opener cable is connected properly.
- Make sure the hood opens properly and locks securely.
- Grease each location of the hood latch indicated by the arrows.

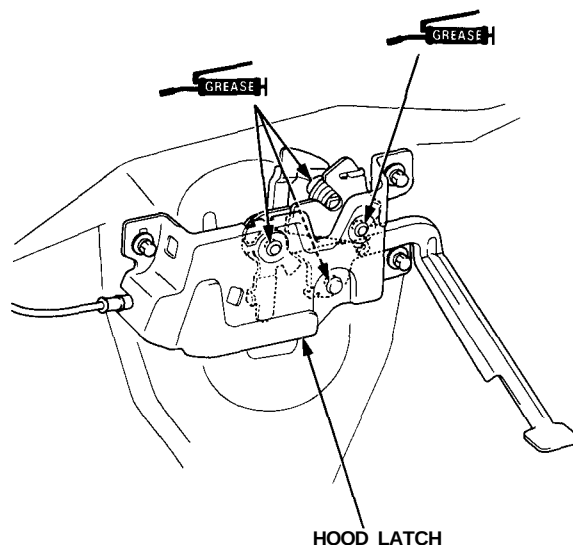





Fuel fill door opener:

►: Bolt, screw locations

 A ►, 2



B ►, 1

 

OPENER COVER

Slide and remove the opener cover while pulling it up.

HOOK

HOOK

FUEL FILL DOOR OPENER

KNOB

To fuel fill door latch.

FUEL FILL DOOR OPENER CABLE
(see page 20-87)

Installation is the reverse of the removal procedure.

NOTE:

 
- Make sure the opener cable is connected properly.
- Make sure the fuel fill door opens properly.

Fuel fill door latch:


NOTE: Remove the following parts.

- Rear trim panel (see page 20-44)
- Rear edge of the trunk side trim (left side, see page 20-44)

►: Bolt locations, 2




FUEL FILL DOOR LATCH

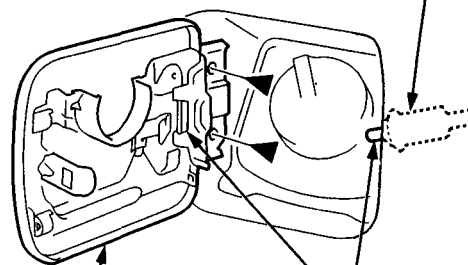

FUEL FILL DOOR

After installing check for a flush fit with the body.

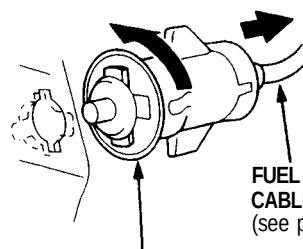

FUEL FILL DOOR OPENER CABLE
(see page 20-87)

FUEL FILL DOOR LATCH

Remove the fuel fill door latch by turning it 90°

Installation is the reverse of the removal procedure.

NOTE:

- Make sure each opener cable is connected properly.
- Make sure the fuel fill door opens properly and locks securely.

(cont'd)

Opener and Latch

Removal (cont'd)

Trunk lid latch/Lock cylinder:

NOTE: Remove the trunk lid trim (see page [20-78](#)).

►: Bolt locations

A ►, 3


B ►, 1



6 x 1.0 mm
9.8 N-m (1.0 kgf-m,
7.2 lbf-ft)



6 x 1.0 mm
9.8 N-m (1.0 kgf-m,
7.2 lbf-ft)

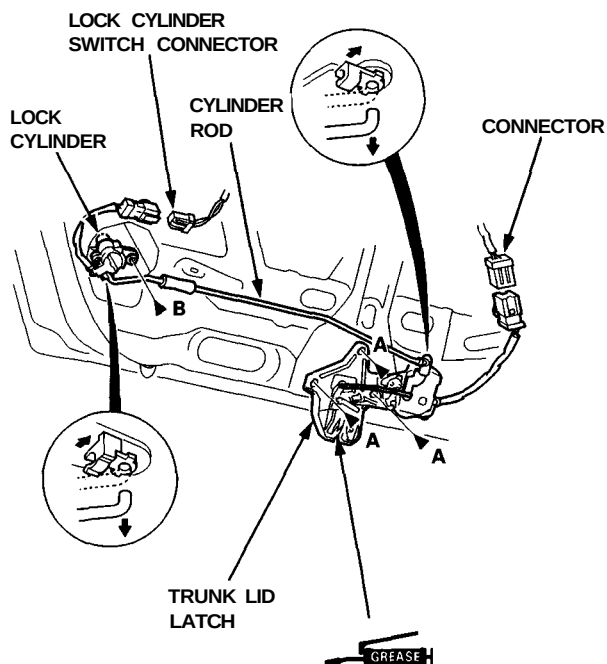

Installation is the reverse of the removal procedure.

NOTE:

- Grease the trunk latch.
- Make sure the trunk lid opens properly and locks securely.
- Make sure the connector is connected properly.