


Wiring/Connector Locations

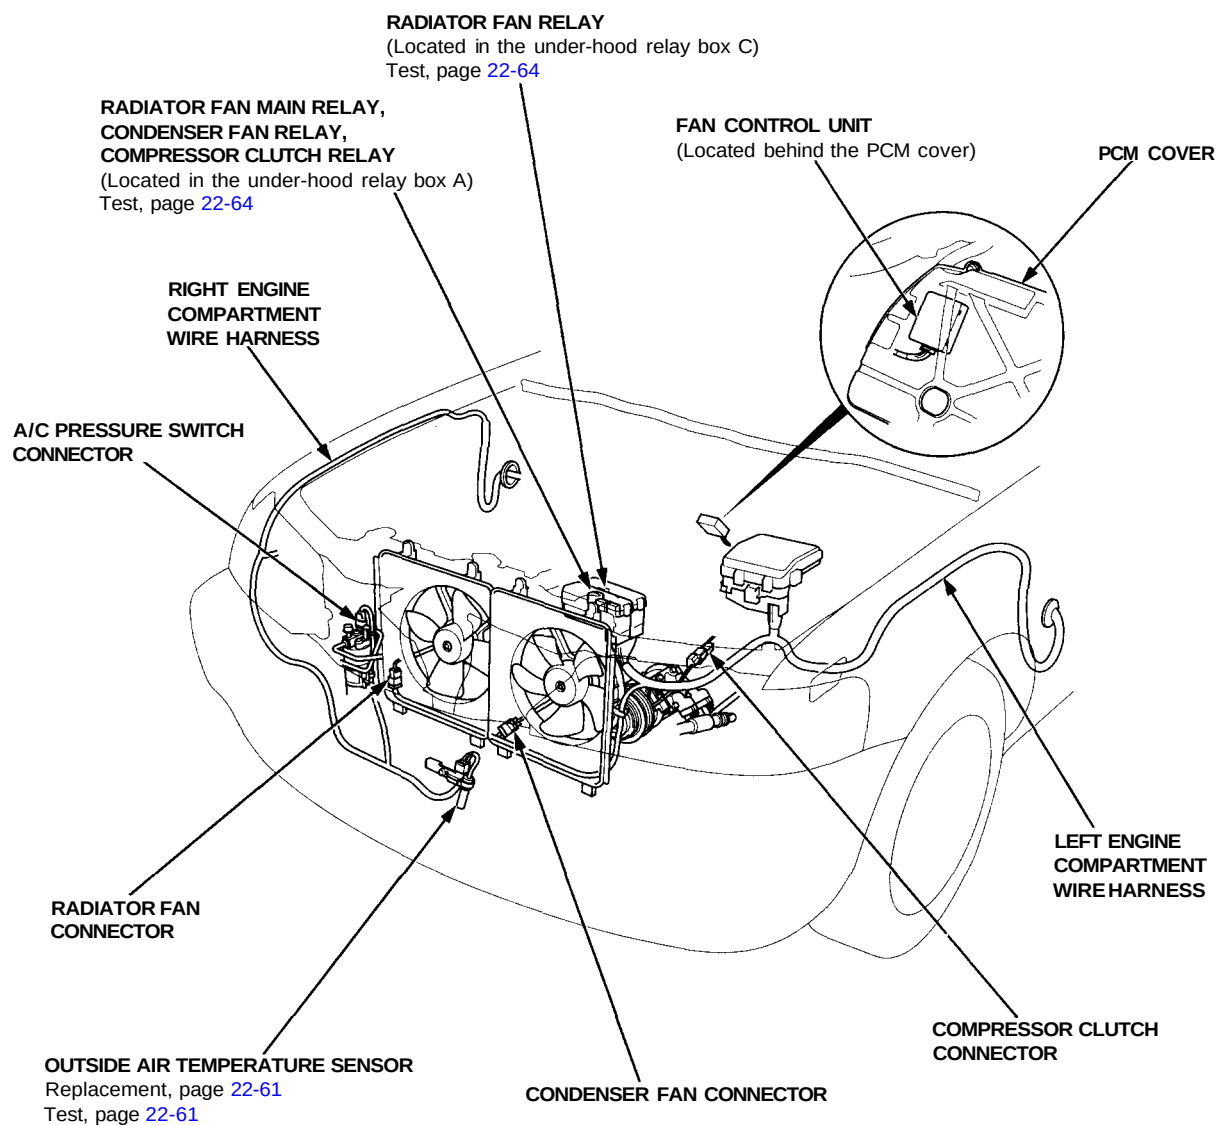

Wiring/Connector Locations

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS (section 24) before performing repairs or service.

