


Troubleshooting

Engine Coolant Temperature (ECT) Sensor

The blower motor does not run immediately, even though the engine is fully warmed up. (NOTE: The temperature control dial must be set between 61°F [18°C] and 89°F [32°C].)

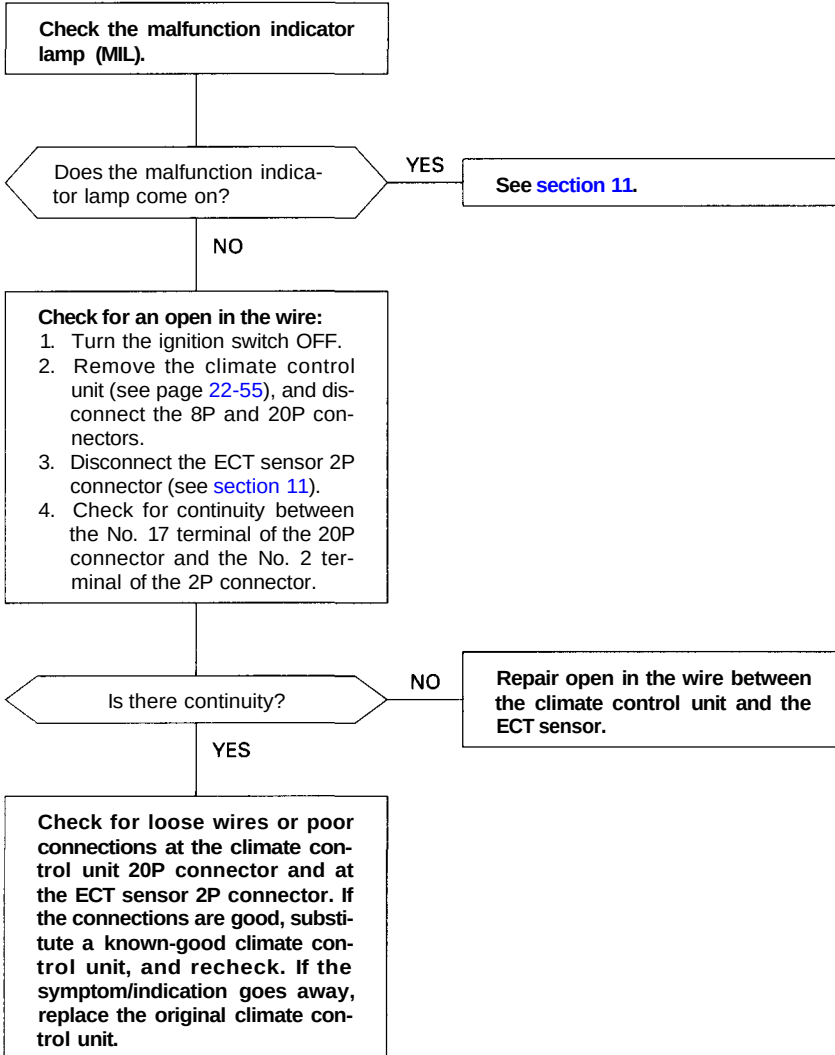

CLIMATE CONTROL UNIT 20P CONNECTOR
Wire side of female terminals

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20

RED/WHT



RED/WHT

ECT SENSOR 2P CONNECTOR
Wire side of female terminals