



Climate Control Unit

Replacement

1. Remove the center air vent and center console trim (see [section 20](#)).
2. Remove the bolts and the climate control unit together with audio unit, then disconnect the connectors.

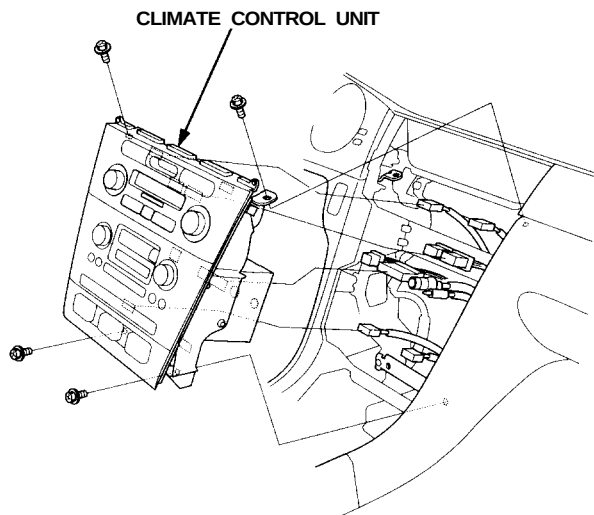

3. Remove the bolts, the screws and the brackets, then remove the screws and the climate control unit from the audio unit.

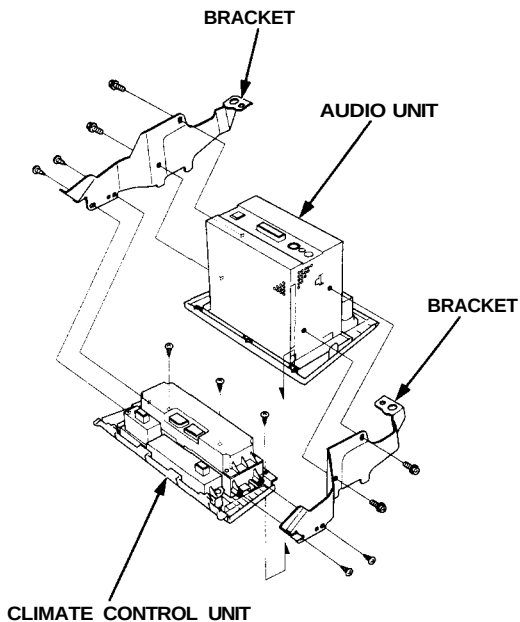


4. Install in the reverse order of removal.

Bulb Replacement


CAUTION:

- Before replacing bulbs, discharge the static electricity (which accumulated on you when you removed the climate control unit) by touching the door striker or other body parts.
- Do not touch the electronic components on the printed circuit board in the climate control unit.

1. Remove the climate control unit (see previous column).
2. Carefully remove the self-tapping screws and the rear cover.

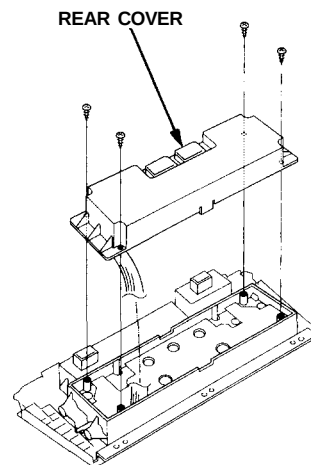

3. Remove the bulb(s) with a flat-tip screwdriver.

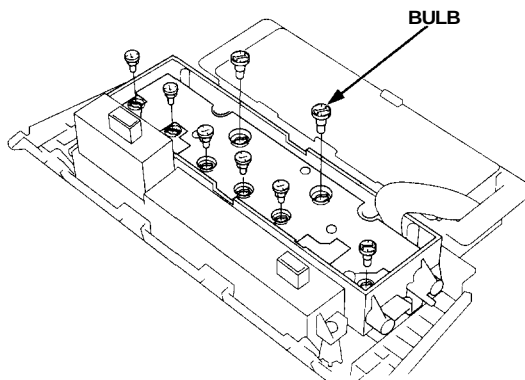

4. Install in the reverse order of removal. Make note of the following items.

NOTE:

- Do not kink or pull on the wires between the control unit and printed circuit board.
- After installation, operate the climate control unit to see whether it works properly.
- Run the self-diagnosis function to confirm that there are no problems in the system.