


Recirculation Control Motor

Replacement

1. Remove the glove box (see [section 20](#)).
2. Remove the glove box back cover (see page [22-65](#)).
3. Disconnect the wire harness clip and the connector from the recirculation control motor, then remove the self-tapping screws and the recirculation control motor.

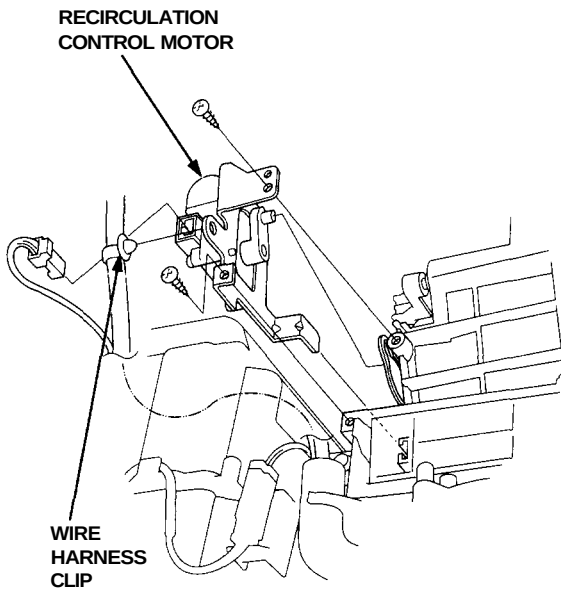


4. Install in the reverse order of removal. After installation, make sure the recirculation control motor runs smoothly.

Test

1. Disconnect the 4P connector from the recirculation control motor.
2. Connect battery power to the No. 1 terminal, and ground the No. 2 and No. 4 terminals; the recirculation control motor should run smoothly.

CAUTION: Never connect the battery in the opposite direction.

RECIRCULATION
CONTROL MOTOR
4P CONNECTOR

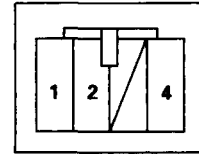

3. Disconnect the No. 2 or No. 4 terminals from ground; the recirculation control motor should stop at FRESH or RECIRCULATE.

NOTE: Don't cycle the recirculation control motor for a long time.

4. If the recirculation control motor does not run in step 2, remove it, then check the recirculation control linkage and doors for smooth movement. If they move smoothly, replace the recirculation control motor.