


Condenser


Replacement

1. Recover the refrigerant with a recovery/recycling/charging station (see page 22-75).
2. Remove the bolts and the upper mount brackets from the radiator.

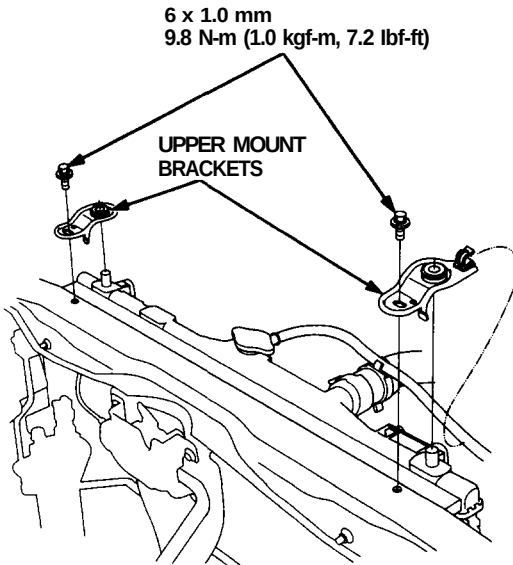


3. Remove the bolts, then disconnect the condenser line and the receiver line B from the condenser. Remove the receiver/dryer mounting bolts from the condenser.

NOTE: Plug or cap the lines immediately after disconnecting them to avoid moisture and dust contamination.

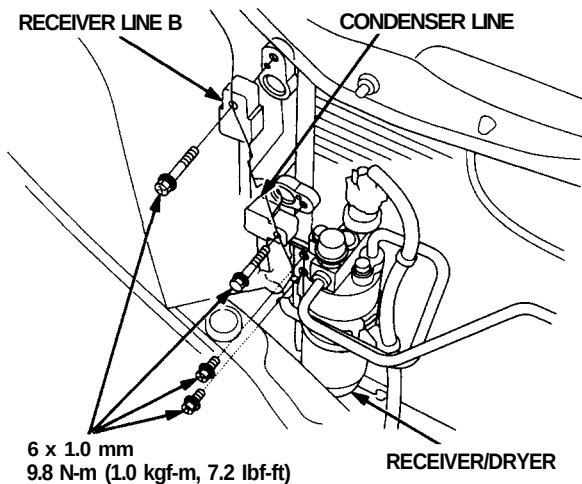



4. Remove the bolts, then disconnect the discharge line and the receiver line A from the condenser.

NOTE: Plug or cap the lines immediately after disconnecting them to avoid moisture and dust contamination.

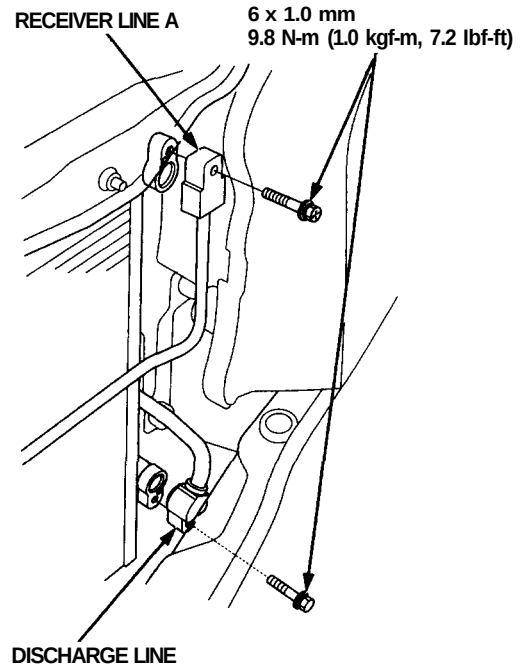


 5. Remove the mounting nuts from the condenser.

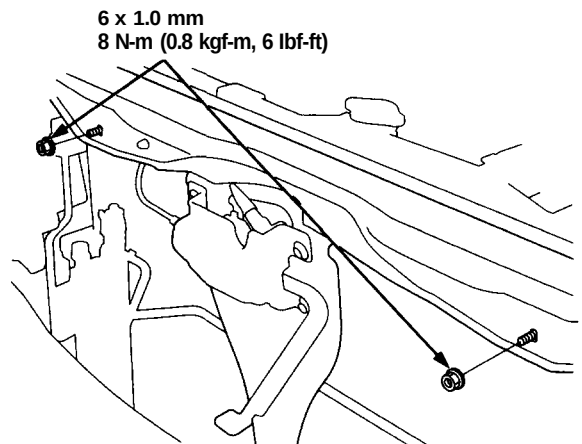




6. Remove the bolts and the upper mount brackets from the condenser as shown.

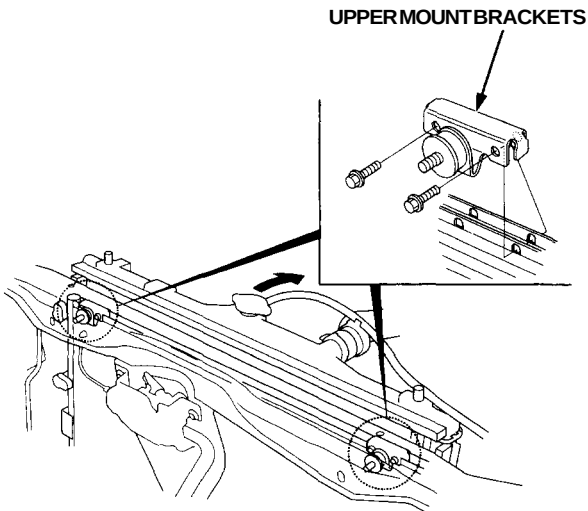

7. Remove the condenser by lifting it up as shown.

NOTE: Be careful not to damage the radiator and the condenser fins when removing the condenser.

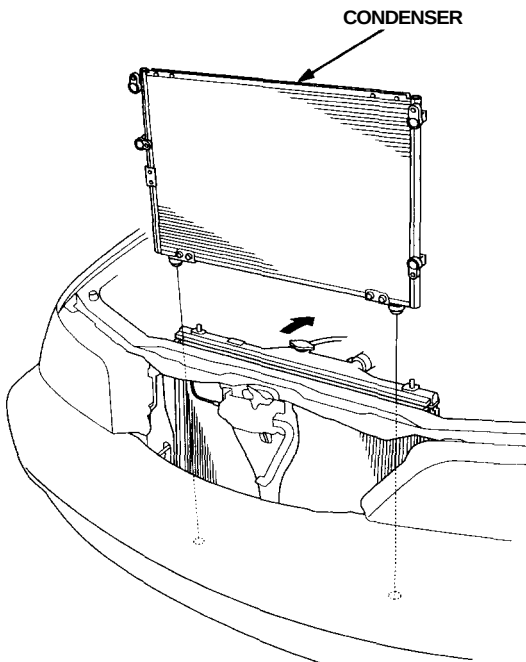

8. Install in the reverse order of removal. Make note of the following items.

- If you're installing a new condenser, add refrigerant oil (ND-OIL 8) (see page [22-73](#)).
- Replace the O-rings with new ones at each fitting, and apply a thin coat of refrigerant oil before installing them.
NOTE: Be sure to use the right O-rings for HFC - 134a (R - 134a) to avoid leakage.
- Be careful not to damage the radiator and the condenser fins when installing the condenser.
- Be sure to install the lower mount cushions of condenser securely into the holes.
- Charge the system (see page [22-89](#)), and test its performance (see page [22-76](#)).