


Gauge Assembly

Bulb Locations

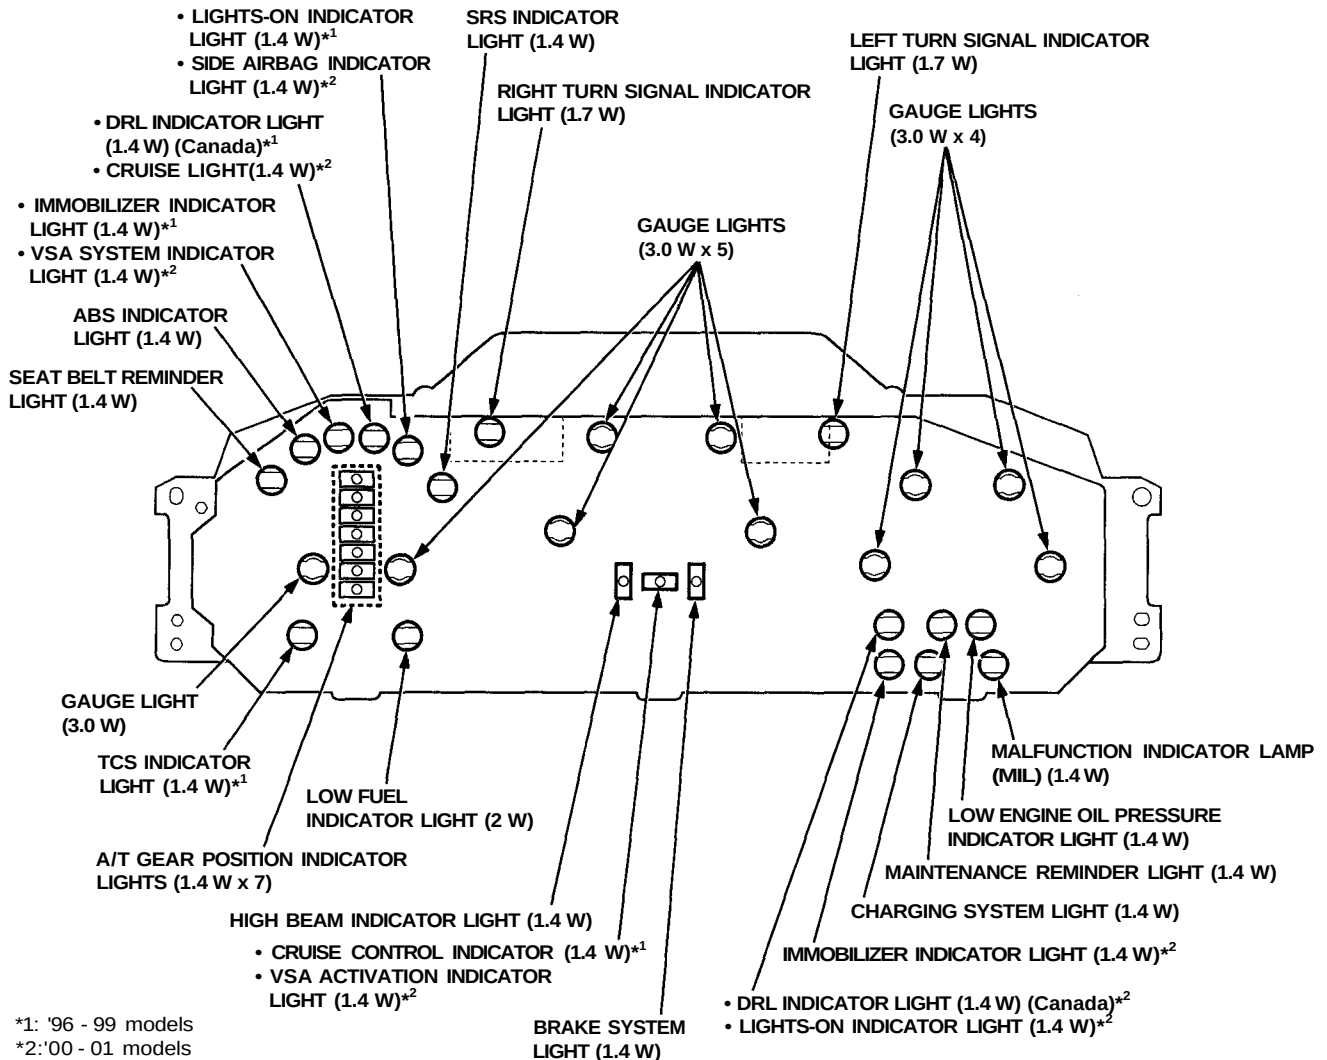

MAINTENANCE REMINDER LIGHT

Blinking Pattern:

Miles (km)	Maintenance Reminder Light
0 to about 6,000 (9,600)	Does not come on.
About 6,000 (9,600) to 7,500 (12,000)	Blinks for 10 seconds when the ignition switch is ON (II).
After 7,500 (12,000)	Comes on for 10 seconds when the ignition switch is ON (II).

If the light does not blink or does not come on, check the bulb and the speedometer operation. If the bulb and the speedometer are OK, the gauge internal circuits must be faulty.

How to Reset:

Push the select switch and the reset switch at the same time, and hold them more than 10 seconds with the ignition switch ON (II).