


# Clock

## Removal

1. Remove the climate control unit (see [section 22](#)).
2. Remove the two screws, then remove the clock.

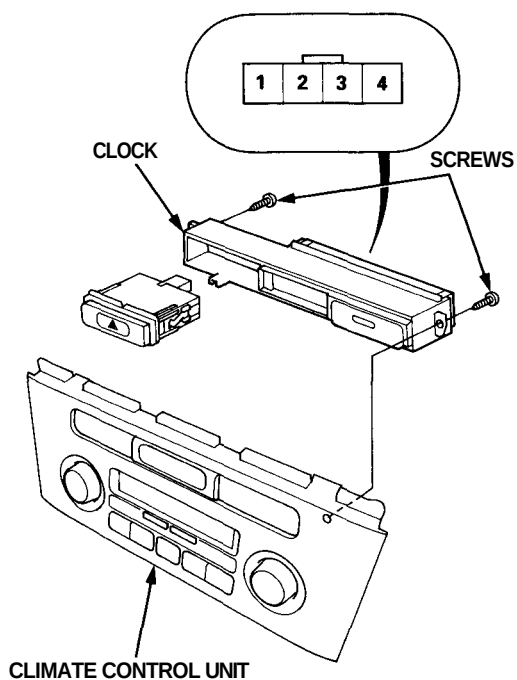

## Terminals

| Cavity | Wire    | Connects to                   |
|--------|---------|-------------------------------|
| 1      | BLK     | Ground (G401, G402 or G251)   |
| 2      | BLK/WHT | Lights-on signal              |
| 3      | WHT/YEL | Constant power (time memory)  |
| 4      | BLK/YEL | IG1 (main clock power supply) |