



Immobilizer Receiver Replacement

1. Remove the dashboard lower cover (see [section 20](#)).
2. Disconnect the ignition key light socket from the ignition key light ring by turning the socket.

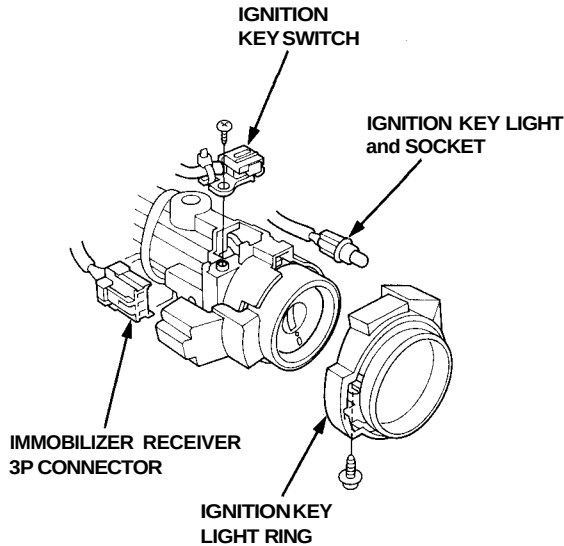


3. Loosen the screw, then remove the ignition key light ring.
4. Disconnect the immobilizer receiver 3P connector.
5. Remove the screw and the ignition key switch.
6. Remove the screw from the key cylinder housing.

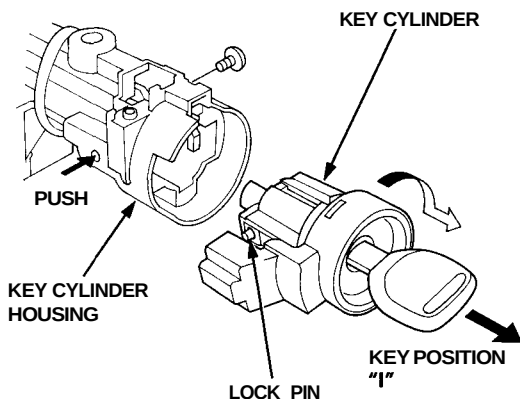

7. Turn the ignition key to "I".
8. Push the lock pin, and remove the key cylinder by pulling the ignition key.

NOTE: Don't pull on the immobilizer receiver.

9. Turn the ignition key to 0, and remove it.

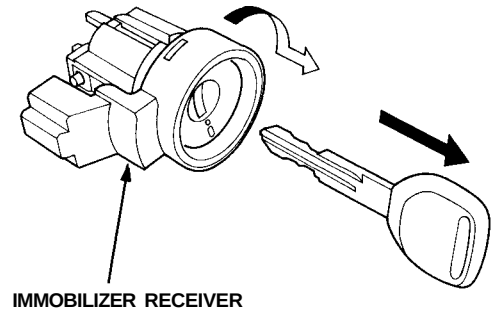

10. Turn the immobilizer receiver clockwise, and remove it.

Installation:

1. Install the new immobilizer receiver in the reverse order of removal.
2. Insert the ignition key into the key cylinder, and turn it to "I".
3. Insert the key cylinder into the key cylinder housing with pushing the lock pin.

NOTE: The lock pin can be pushed by pulling the key in position "I".

4. The remaining installation is the reverse of the removal procedure.

NOTE: This harness is shielded and serves as a communication link; be careful not to damage it.