

Diagnostic Trouble Code (DTC) Chart

NOTE: Before you proceed with the appropriate flowchart(s), check power and ground as described in the tests on page 23-206.

DTC	Symptom	Possible Cause	Flowchart	Page
1	Seat can't be adjusted with the slide switch.	Fault in slide switch or slide switch wiring	3	23-214
2	Seat can't be adjusted with the reclining switch.	Fault in recline switch or recline switch wiring	4	23-215
3	Seat front height can't be adjusted with the front up-down switch.	Fault in front up-down switch or front up-down switch wiring	5	23-216
4	Seat rear height can't be adjusted with the rear up-down switch.	Fault in rear up-down switch or rear up-down switch wiring	6	23-217
5	Steering column can't be adjusted with the tilt switch.	Fault in tilt switch or tilt switch wiring	7	23-218
6	Steering column can't be adjusted with the extend-retract switch.	Fault in extend-retract switch or extend-retract switch wiring	8	23-219
21	Positions can't be stored with the ignition switch ON (II) and the MEMO button pressed.	Fault in MEMO button wiring or common wiring of switches	9	23-220
22	Positions can't be stored or retrieved with position button 1.	Fault in position button 1 wiring or common wiring of switches	9	23-220
23	Positions can't be stored or retrieved with position button 2.	Fault in position button 2 wiring or common wiring of switches	9	23-220
24	Seat can't be adjusted forward with the slide switch.	Fault in forward slide switch wiring or common wiring of switches	3	23-214
25	Seat can't be adjusted backward with the slide switch.	Fault in backward slide switch wiring or common wiring of switches	3	23-214
26	Seat can't be adjusted forward with the recline switch.	Fault in forward recline switch wiring or common wiring of switches	4	23-215
27	Seat can't be adjusted backward with the recline switch.	Fault in backward recline switch wiring or common wiring of switches	4	23-215
28	Seat front height can't be adjusted with the front up switch.	Fault in front up switch wiring or common wiring of switches	5	23-216
29	Seat front height can't be adjusted with the front down switch.	Fault in front down switch wiring or common wiring of switches	5	23-216
30	Seat rear height can't be adjusted with the rear up switch.	Fault in rear up switch wiring or common wiring of switches	6	23-217
31	Seat rear height can't be adjusted with the rear down switch.	Fault in rear down switch wiring or common wiring of switches	6	23-217
32	Steering column can't be adjusted with the tilt-up switch.	Fault in tilt-up switch wiring or common wiring of switches	7	23-218
33	Steering column can't be adjusted with the tilt-down switch.	Fault in tilt-down switch wiring or common wiring of switches	7	23-218
34	Steering column can't be adjusted with the extend switch.	Fault in extend switch wiring or common wiring of switches	8	23-219
35	Steering column can't be adjusted with the retract switch.	Fault in retract switch wiring or common wiring of switches	8	23-219
36	Steering column doesn't tilt up and retract when the ignition key is pulled out.	Fault in the ignition switch or ignition switch wiring	1	23-206
37	Steering column doesn't tilt up, or the steering column position cannot be retrieved with the shift lever in position P .	Fault in the transmission range switch or transmission range switch	1	23-206