


Driving Position Memory System (DPMS)



Troubleshooting (cont'd)

Flowchart No. 7


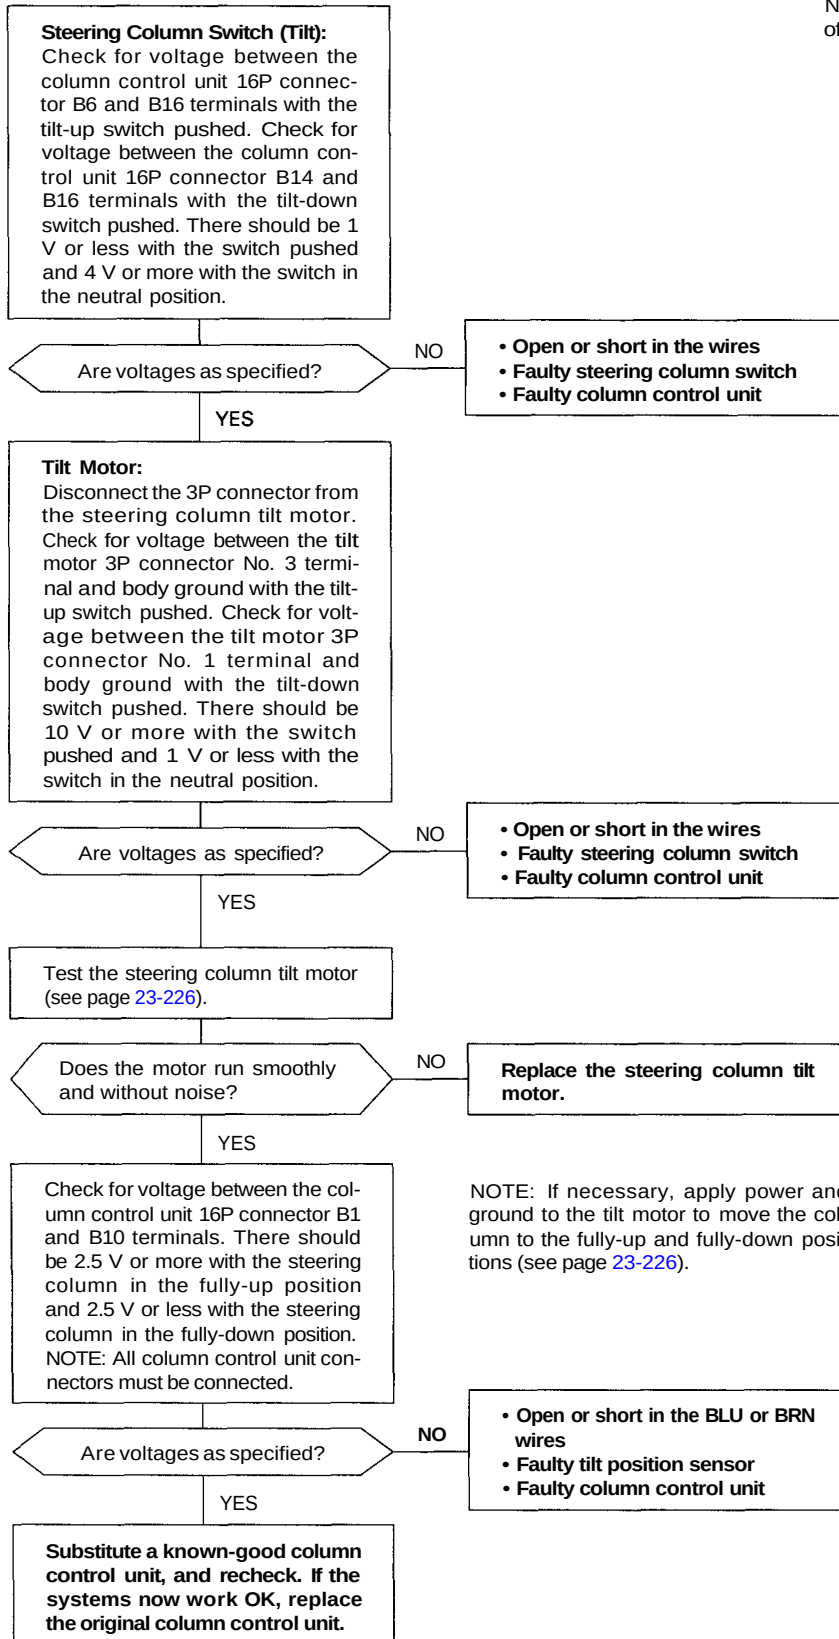


NOTE: All connector views are from wire side of female terminals.


COLUMN CONTROL UNIT
16P CONNECTOR "B"

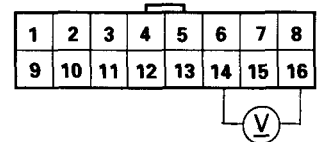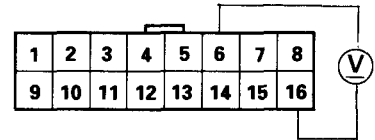

TILT MOTOR 3P CONNECTOR

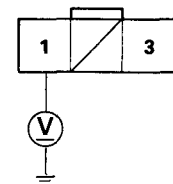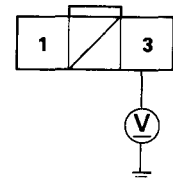

COLUMN CONTROL UNIT
16P CONNECTOR "B"

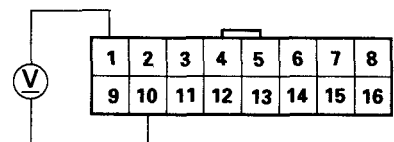

NOTE: If necessary, apply power and ground to the tilt motor to move the column to the fully-up and fully-down positions (see page 23-226).