

Power Door Locks

Transmitter Test

NOTE:

- The doors will not lock or unlock with the transmitter if the ignition key is inserted in the ignition switch.
- If any door is open, you cannot lock the doors with the transmitter.
- If you unlock the doors with the transmitter, but do not open any of the doors within 30 seconds, the doors relock automatically.
- For PANIC button and TRUNK button operation, hold the button for more than 1 second.

