

Security Alarm System

Description


This system is activated automatically 15 seconds after everything has been closed and locked. The security alarm system indicator light located on the driver's side door panel will flash after the doors are properly locked.

If any of the following conditions occur, the horns will sound, the headlights will flash, and the side marker lights, parking lights, and taillights will flash for about 2 minutes, or until the system is disarmed by unlocking either door from the outside with the key.

NOTE: When a switch is OFF, input voltage is about 5 V. when a switch is ON, input voltage drops to less than 1 V.

- | | |
|--|--|
| <ul style="list-style-type: none"> ① Door is opened forcibly ② Trunk lid is opened without using the key ③ Hood is opened | <ul style="list-style-type: none"> ④ Engine starter circuit and battery circuit are bypassed by breaking the ignition switch ⑤ Hood/trunk lid opener in the vehicle is operated ⑥ Panic button on the transmitter is pushed |
|--|--|

Flowchart of the security alarm system operation:

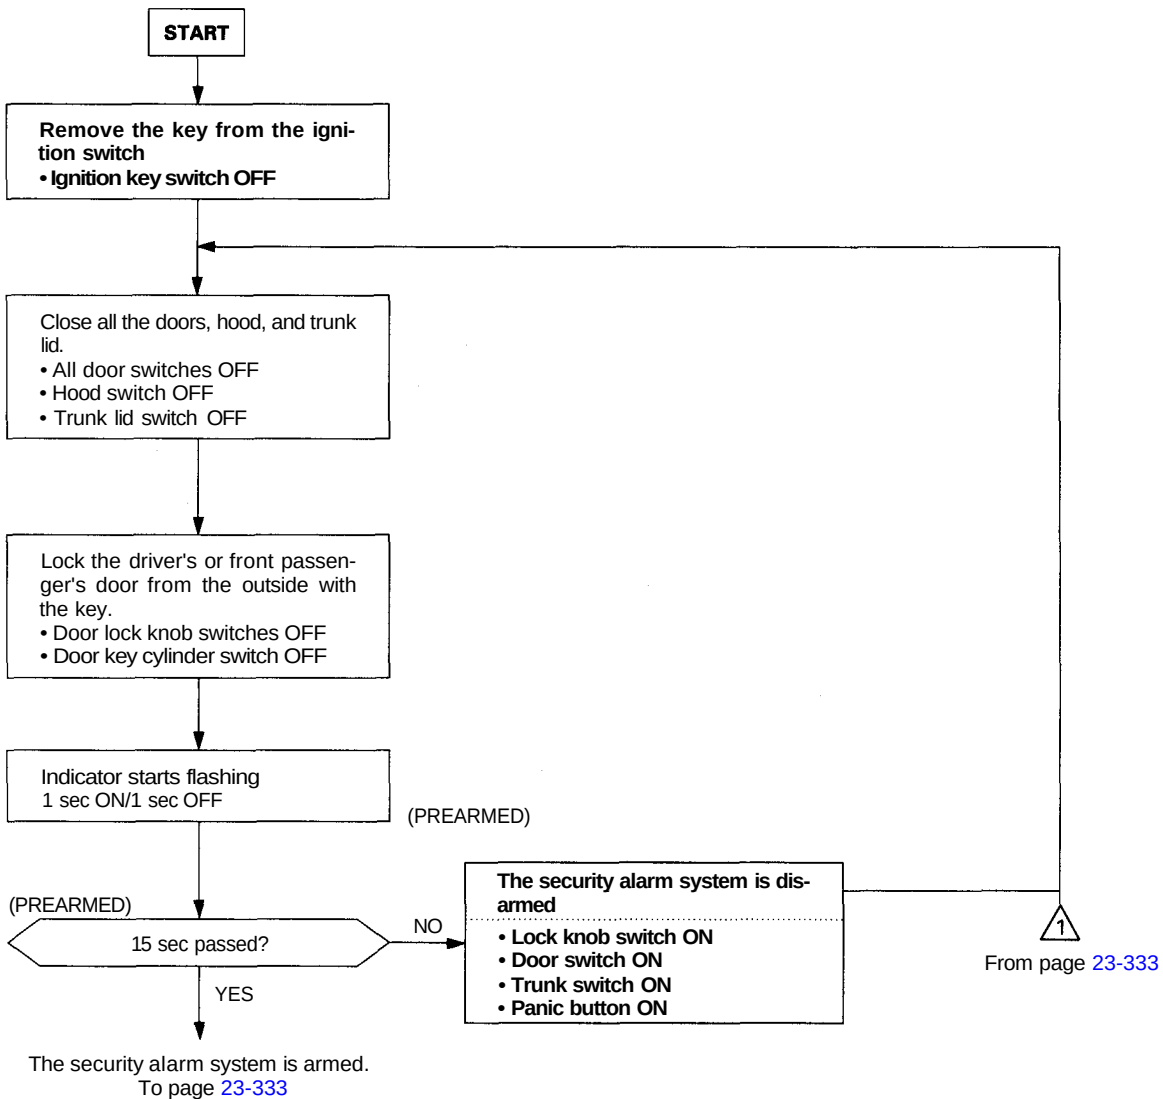

From page 23-332

