

Troubleshooting Guide

NOTE: Circles (○) in the table indicate which parts to inspect.

'96 - 99 models:

PROBLEM SYMPTOM	RELATED UNIT, OTHER PROBLEM ITEMS						DIAGNOSIS METHOD					Refer to troubleshooting page	
	NAVIGATION UNIT	DISPLAY UNIT	GPS ANTENNA	HARD DISK	AUDIO UNIT	HARNESS	UNIT CHECK	MONITOR CHECK	TIRE-CALIBRATE	SYSTEM LINKS	YAW RATE SENSOR		ELECTRIC CONTINUITY IN HARNESS
No picture is shown on the display	○	○				○						○	23-398
The picture is missing a color or tone	○					○		○				○	23-400
Display unit buttons do not work		○				○	○	○		○		○	23-401
Satellite mark in the GPS mark is not indicated	○		○				○			○			23-402
Audio driving instructions can't be heard	○				○	○				○		○	23-403

'00 - 01 models:

PROBLEM SYMPTOM	RELATED UNIT, OTHER PROBLEM ITEMS						DIAGNOSIS METHOD						Refer to troubleshooting page
	NAVIGATION UNIT	DISPLAY UNIT	GPS ANTENNA	DVD-ROM	AUDIO UNIT	HARNESS	UNIT CHECK	MONITOR CHECK	TIRE-CALIBRATE	SYSTEM LINKS	YAW RATE SENSOR	ELECTRIC CONTINUITY IN HARNESS	
No picture is shown on the display	○	○				○						○	23-404
The picture is missing a color or tone	○					○		○				○	23-406
Display unit buttons do not work		○				○	○	○		○		○	23-407
Satellite mark in the GPS mark is not indicated	○		○				○			○			23-408
Audio driving instructions can't be heard	○				○	○				○		○	23-409