




Rear Seat Belt

Removal/Installation

CAUTION: Check the rear seat belts for damage, and replace them if necessary. Be careful not to damage them during removal and installation.

Rear seat belt:

1. Remove:
 - Rear seat cushion and rear seat-back (see [section 20](#))
 - Rear side trim (see [section 20](#))
 - Rear door trim (see [section 20](#))
 - Rear pillar trim panel (see [section 20](#))
2. Remove all the anchor bolts and retractor bolt, remove the retractor mounting bolt, then remove the rear seat belt and retractor.

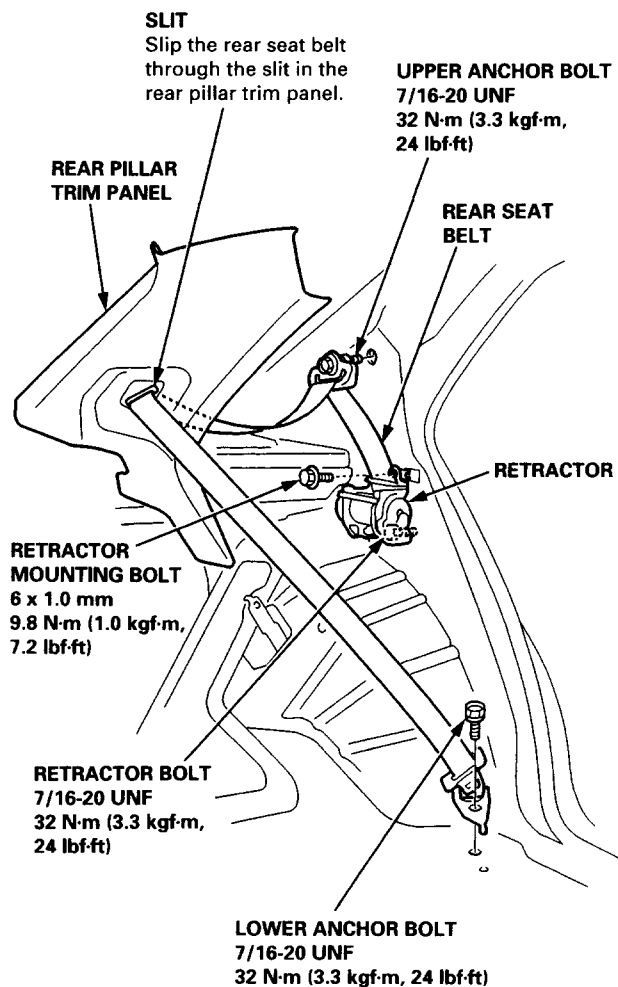

(cont'd)

Rear Seat Belt


Removal/Installation (cont'd)

- Installation is the reverse of the removal procedure.


NOTE:

- Check that the retractor locking mechanism functions as described on page 24-8.
- Before installing the anchor bolt, make sure there are no twists or kinks in the rear seat belt.

Upper anchor bolt construction:

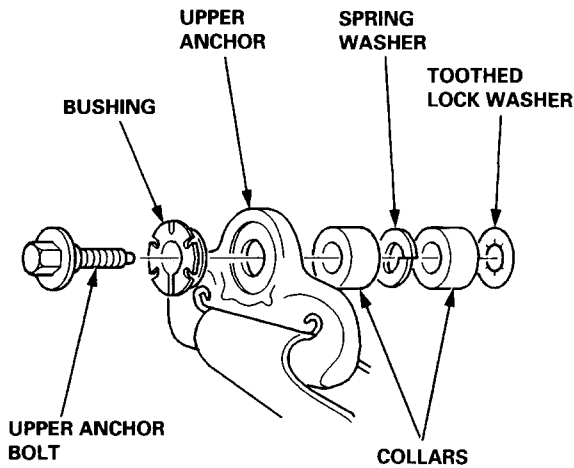

Retractor bolt construction:

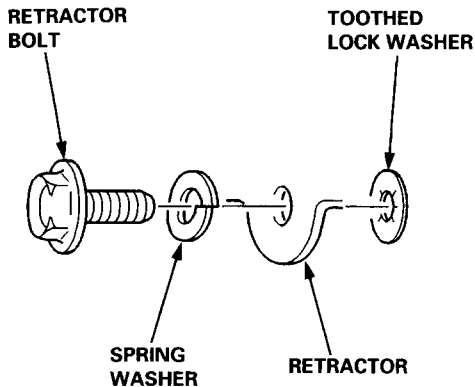


Seat belt buckle/Center belt tongue:

- Remove the rear seat cushion (see [section 20](#)).
- Remove the center anchor bolts, then remove the seat belt buckles and center belt tongue.


CENTER ANCHOR BOLTS

7/16-20 UNF

32 N·m (3.3 kgf·m,
24 lbf·ft)

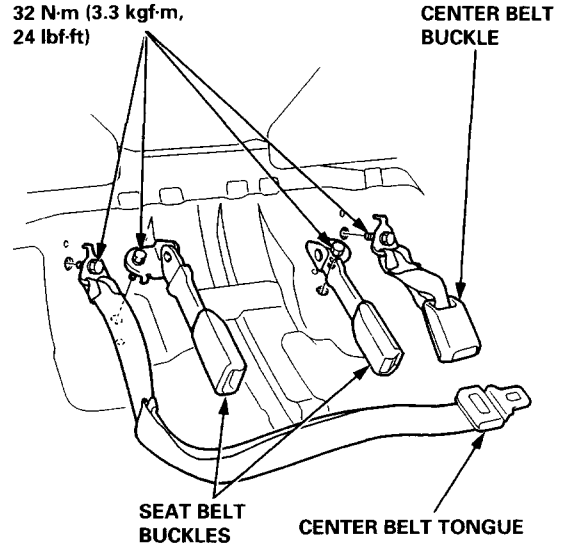

Center anchor bolt construction:

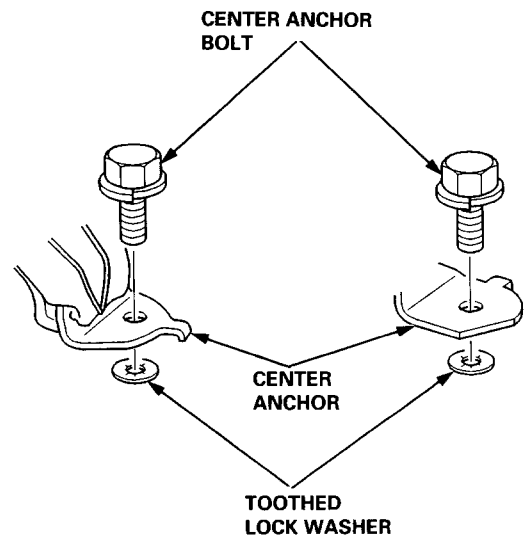


- Installation is the reverse of the removal procedure.

NOTE: Before attaching the rear seat-back and rear seat cushion, make sure there are no twists or kinks in the center belts.




Center seat belt/Center seat belt buckle ('98 - 01 models):

1. Remove:
 - Rear seat cushion and rear seat-back (see [section 20](#))
 - Rear side trim (see [section 20](#))
 - Rear door trim (see [section 20](#))
 - Rear pillar trim panel (see [section 20](#))
 - Rear shelf (see [section 20](#))
2. Remove the retractor mounting bolt, retractor bolt and lower anchor bolt, then remove the center seat belt.

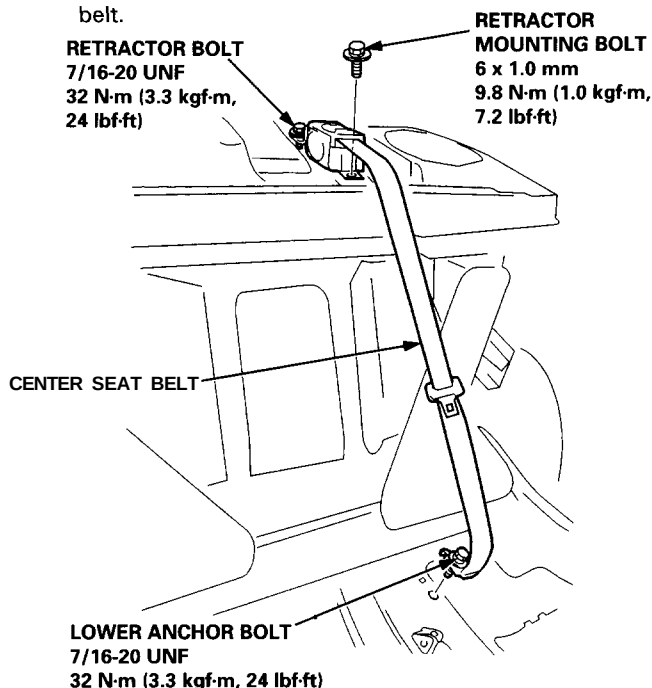


3. Remove the center seat belt anchor bolt, then remove the center seat belt buckle.


CENTER SEAT BELT ANCHOR BOLT
7/16-20 UNF
32 N-m (3.3 kgf-m, 24 lbf-ft)

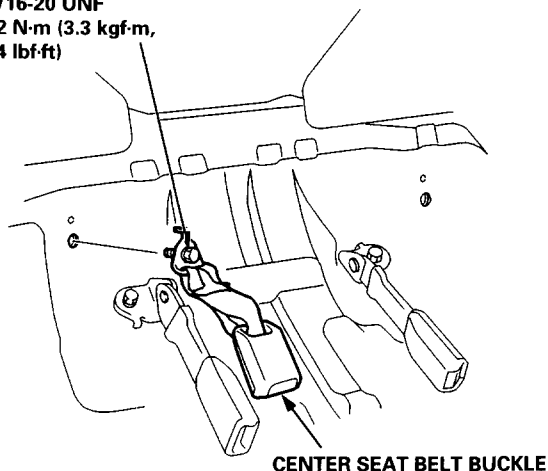

Retractor bolt construction:

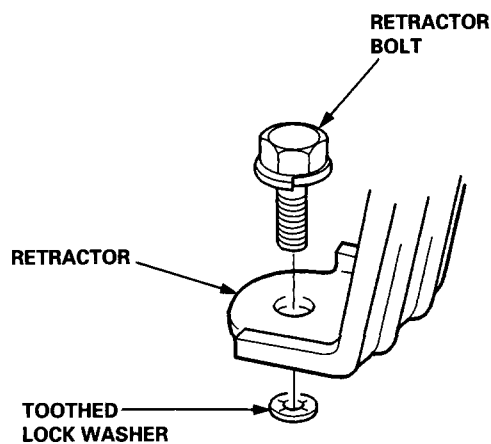

Lower/center anchor bolt construction:

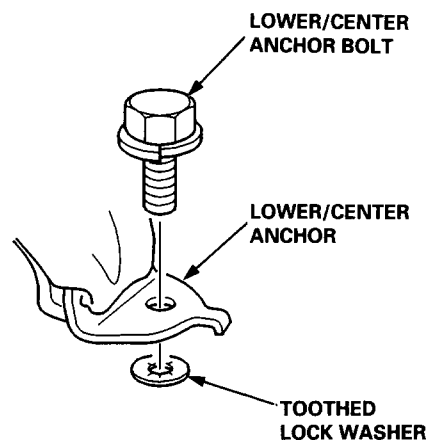

3. Installation is the reverse of the removal procedure.

NOTE:

- Check that the retractor locking mechanism functions as described on page [24-8](#).
- Before installing the anchor bolt, make sure there are no twists or kinks in the rear center seat belt.