



Troubleshooting - '99 - 01 Models

Fuse Box and Connector Locations


SRS main harness 18P connector and SRS floor harness 18P connector:

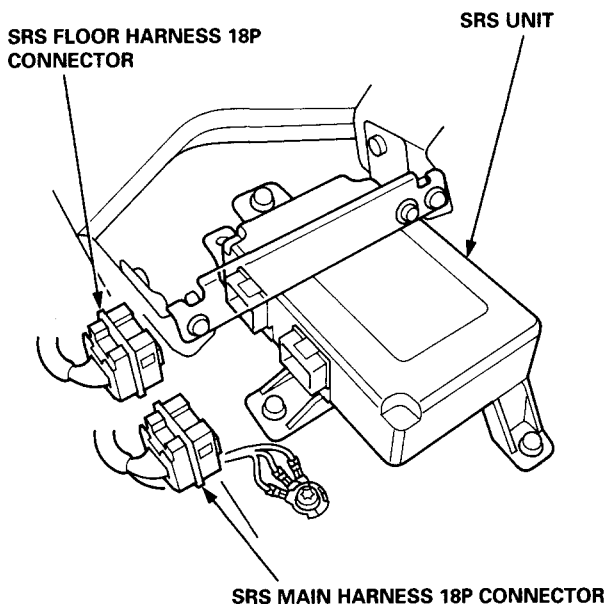


Under-dash fuse/relay box, SRS main harness 2P connector, main wire harness 12P connector, left side wire harness 18P connector and left engine compartment wire harness 16P connector:

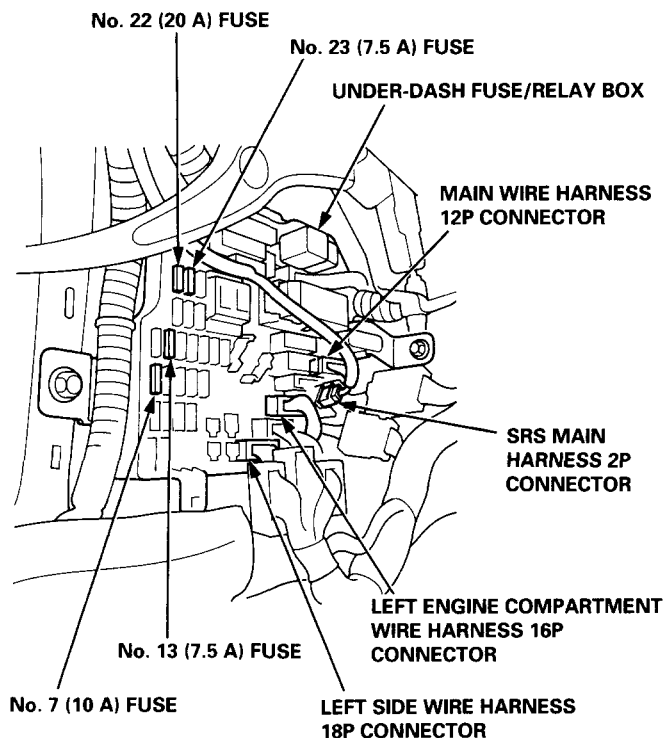

Driver's seat belt buckle switch 3P connector and left side wire harness 3P connector:

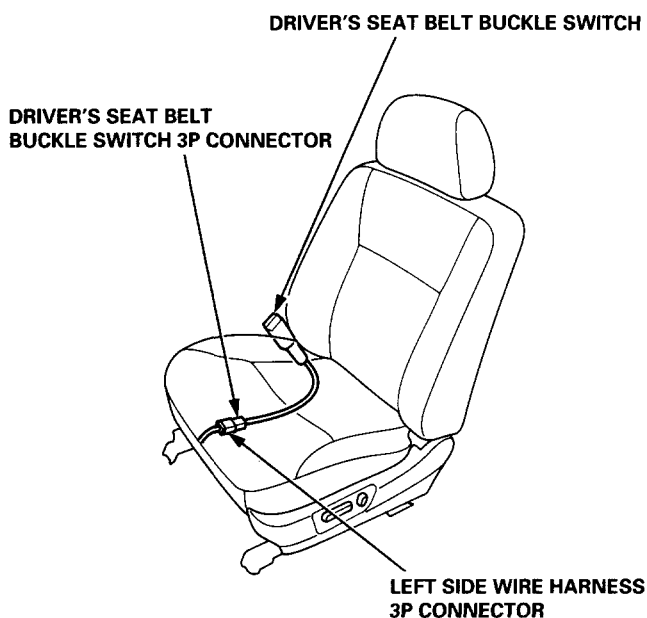


Front passenger's seat belt buckle switch 3P connector, right side wire harness 3P connector, OPDS unit wire harness 8P connector, OPDS unit wire harness 4P connector and right side wire harness 4P connector:

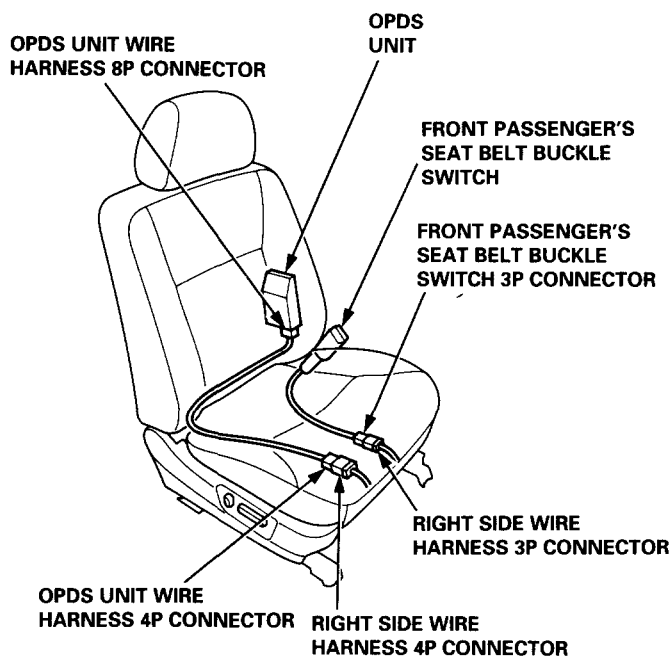




Left side wire harness 14P connector, main wire harness 14P connector, dashboard wire harness 16P connector, left side wire harness 16P connector, main wire harness 20P connector and left engine compartment wire harness 20P connector.

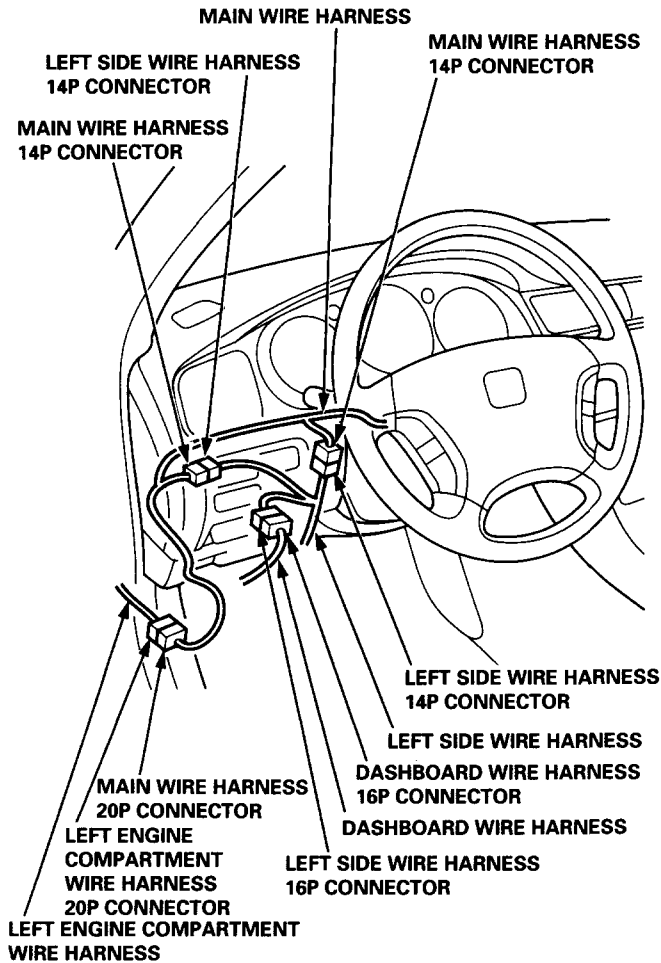


Left side wire harness 2P connector and SRS floor harness 2P connector.

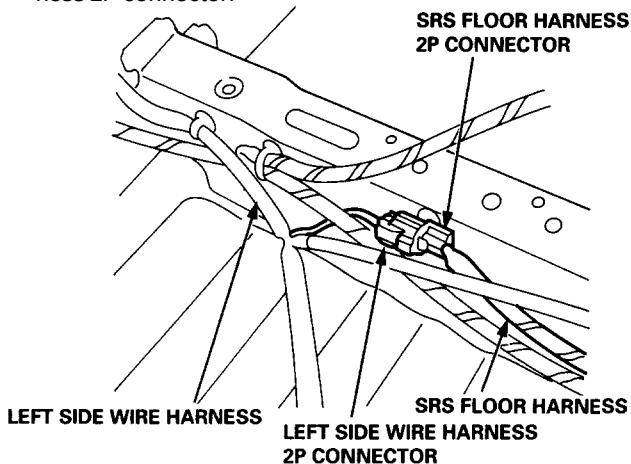

Dashboard wire harness 30P connector and dashboard wire harness 22P connector:


DASHBOARD WIRE HARNESS 22P CONNECTOR

DASHBOARD WIRE HARNESS 30P CONNECTOR

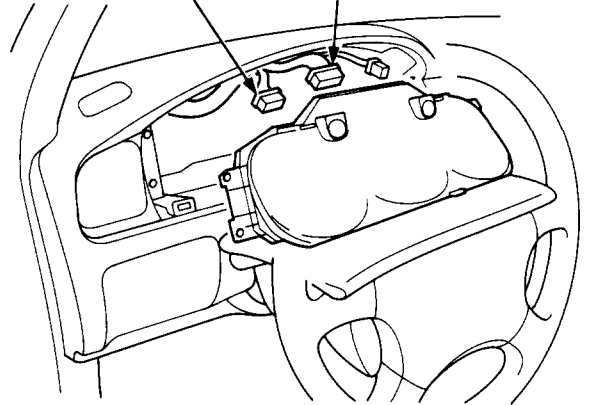

Dashboard wire harness 8P connector, main wire harness 8P connector and SRS main harness 8P connector.

SRS MAIN HARNESS 8P CONNECTOR

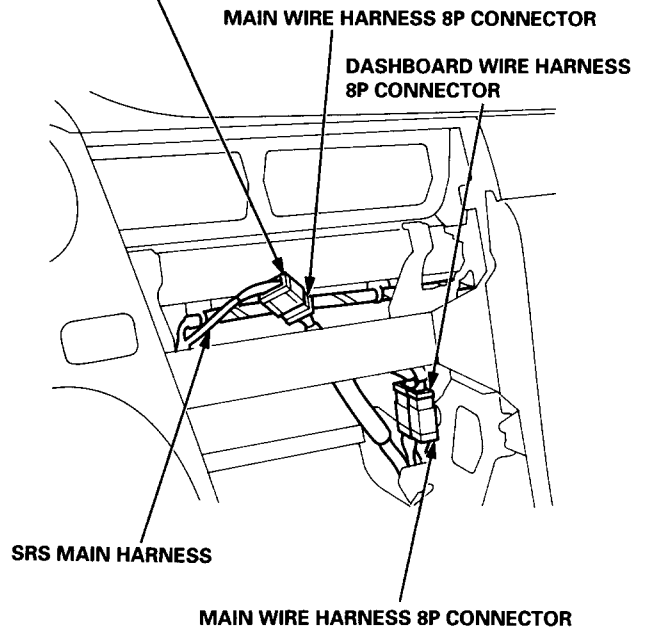


(cont'd)

Troubleshooting - '99 - 01 Models


Fuse Box and Connector Locations (cont'd)

Driver's airbag 2P connector and cable reel 2P connector:

**DRIVER'S AIRBAG
2P CONNECTOR**

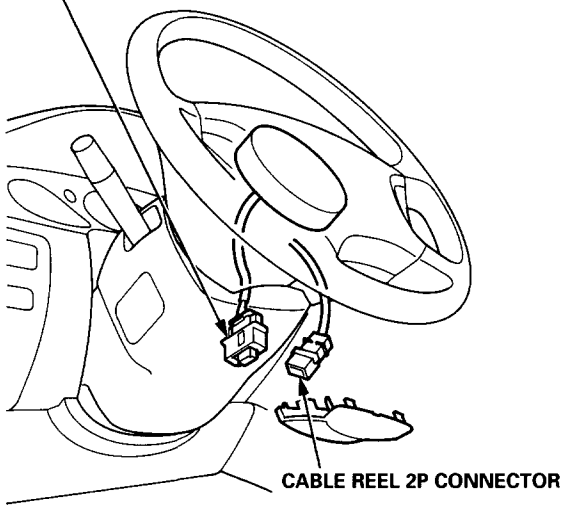



Cable reel 2P connector and SRS main harness 2P connector:

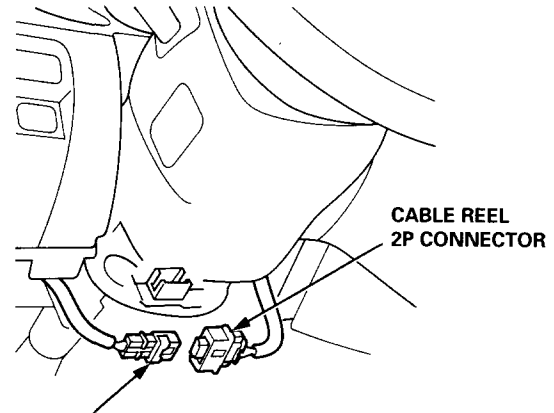

**SRS MAIN HARNESS
2P CONNECTOR**

Connecting the Special tool to the SRS main harness 2P connector:


Connecting the special tool to the cable reel 2P connector:

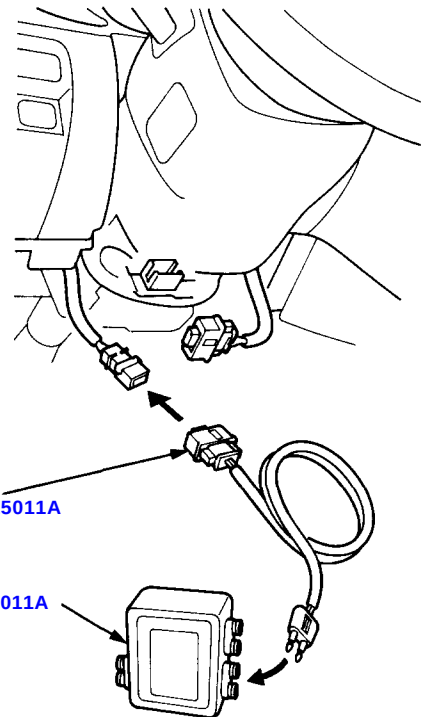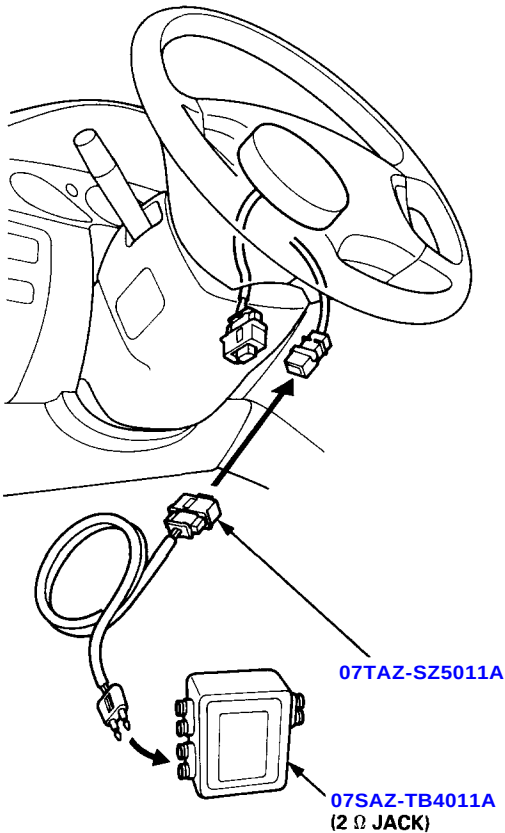




Front passenger's airbag 4P connector and SRS main harness 4P connector:

**FRONT PASSENGER'S AIRBAG
4P CONNECTOR**

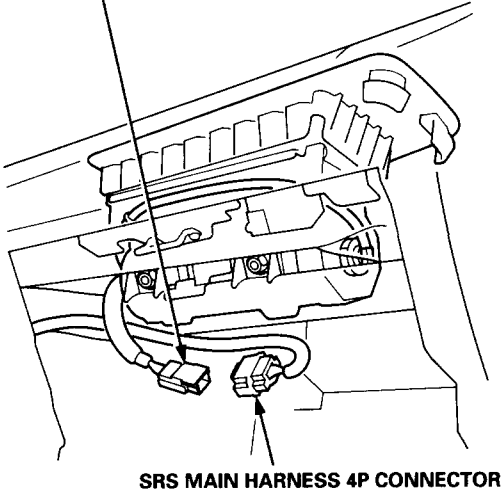


Connecting the special tool to the SRS main harness 4P connector:

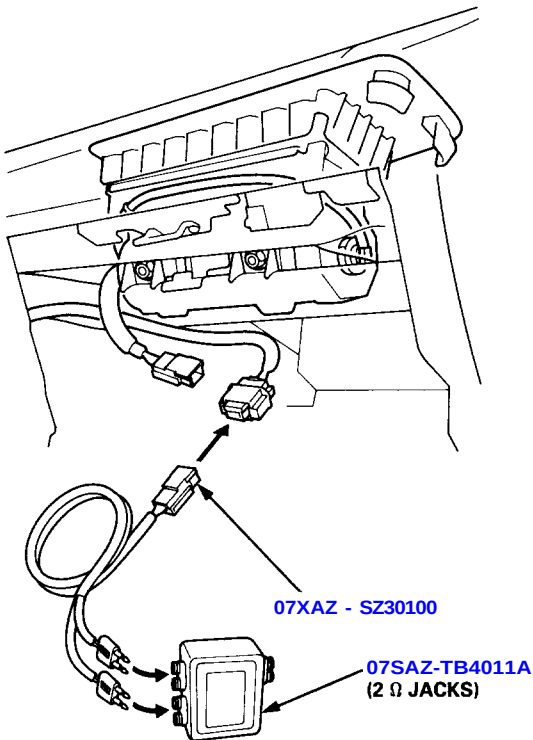

Driver's seat belt tensioner 2P connector and left side wire harness 2P connector (left side) or
Front passenger's seat belt tensioner 2P connector and right side wire harness 2P connector (right side):


NOTE: Left side is shown.

**DRIVER'S SEAT
BELT TENSIONER 2P
(FRONT PASSENGER'S
SEAT BELT TENSIONER 2P)
CONNECTOR**

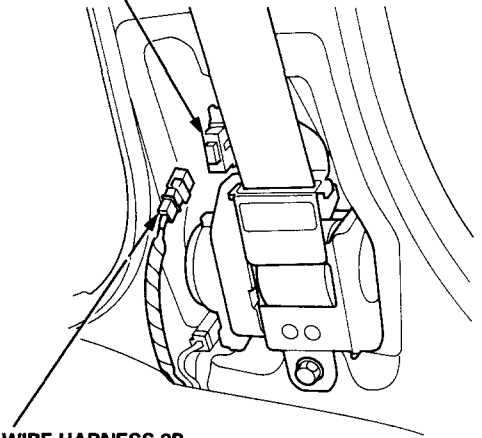

**LEFT SIDE WIRE HARNESS 2P
(RIGHT SIDE WIRE HARNESS 2P)
CONNECTOR**

Connecting the special tool to the left side wire harness 2P (or right side wire harness 2P) connector:

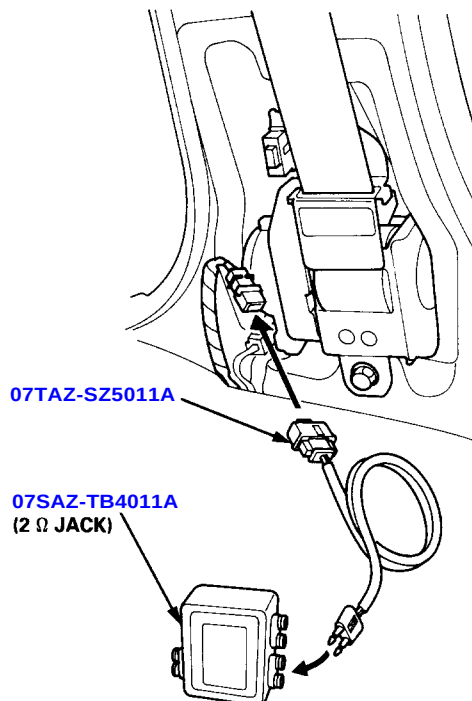



(cont'd)

Troubleshooting - '99 - 01 Models


Fuse Box and Connector Locations (cont'd)

Left side wire harness 2P connector and SRS floor harness 2P connector (left side) or
Right side wire harness 2P connector and SRS floor harness 2P connector (right side):

LEFT SIDE WIRE HARNESS

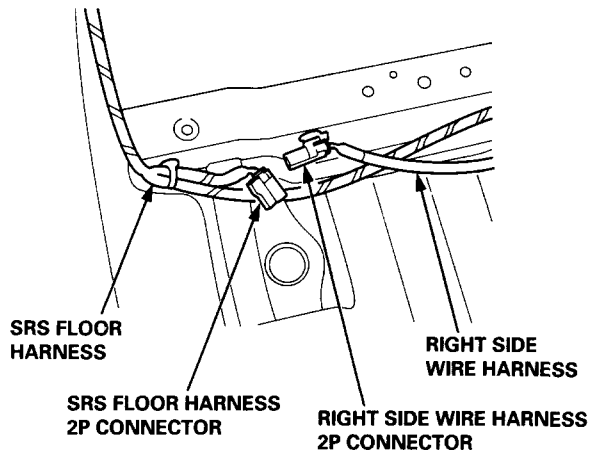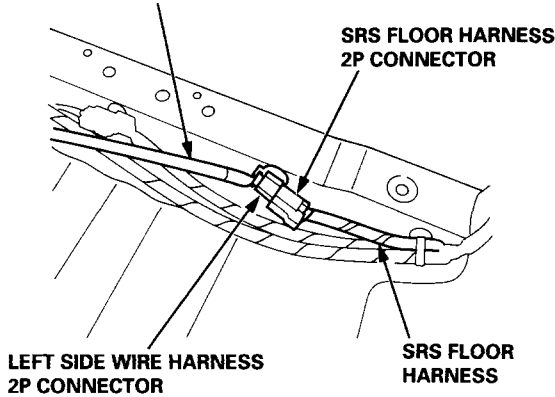


Connecting the special tool to the SRS floor harness 2P connector:

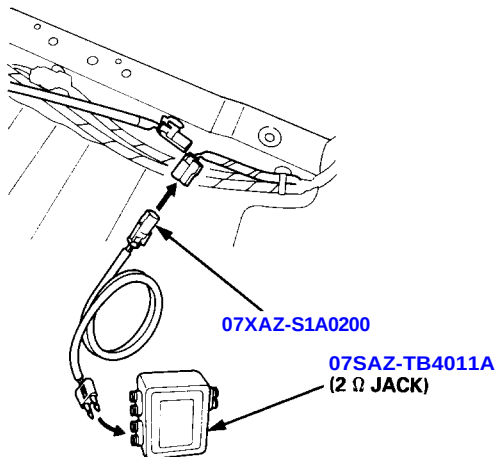


Driver's side airbag 2P connector and SRS floor harness 2P connector (left side) or
Front passenger's side airbag 2P connector and SRS floor harness 2P connector (right side):

NOTE: Left side is shown.

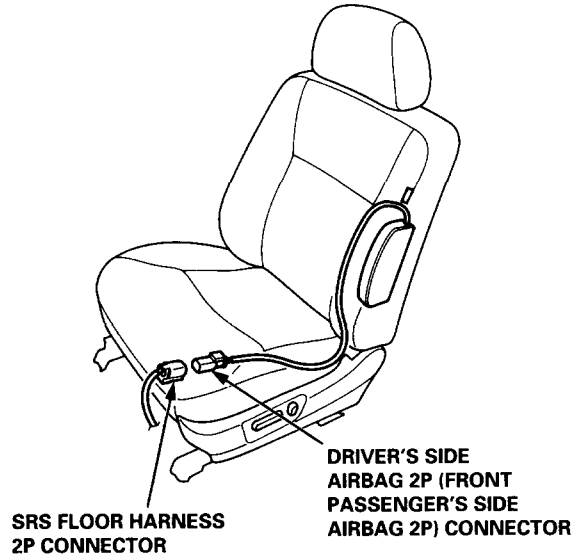


Connecting the special tool to the SRS floor harness 2P connector:

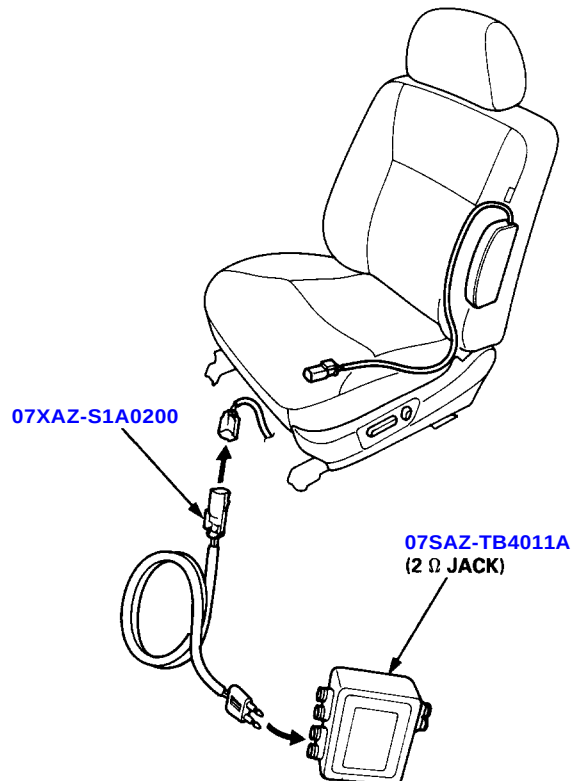




SRS floor harness 4P connector (left side) or
SRS floor harness 4P connector (right side):

NOTE: Right side is shown.

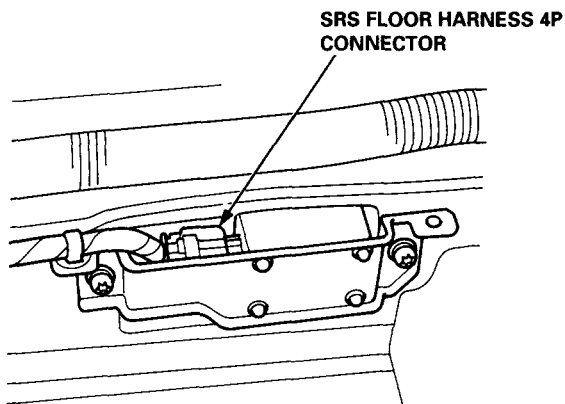

Connecting the special tool to the SRS floor harness 4P connector:

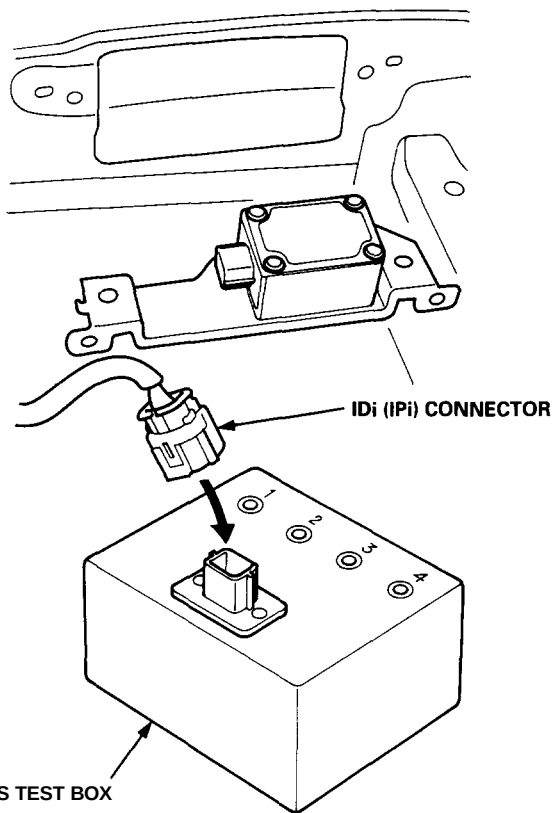

07XAZ-S1A0100

Right side wire harness 24P connector and main wire harness 24P connector:

