


Citroen Xantia (1998 – 2002) – fuse box diagram

Year of production: 1998, 1999, 2000, 2001, 2002

Passenger Compartment Fuse Box

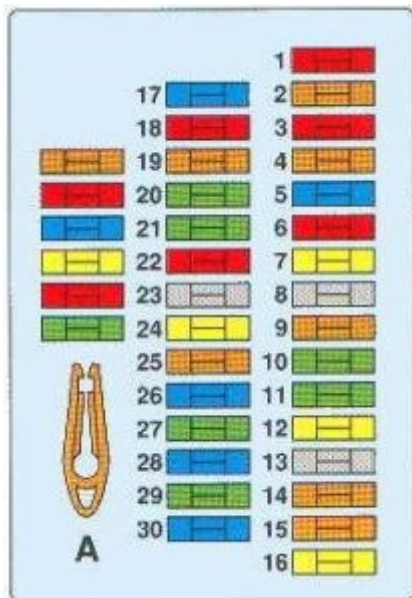


Citrone Xantia – fuse box diagram – passenger compartment

Fuse	Ampere Rating [A]	Description
F1	10	Radio and CD player (via ignition or battery direct, depending on fuse position)
F2	10	Coolant temperature warning system, diagnostic socket
F3	10	Hydractive suspension
F4	5	Left-hand sidelight, right-hand tail light
F5	10	Daytime running lights relay, heater blower relay, heated seats relay, heated rear screen switch
F6	10	ABS, cruise control
F7	20	Horn relay, towbar
F8	—	—
F9	5	Right-hand sidelight, left-hand tail light
F10	30	Rear electric windows

F11	20	Sunroof
F12	20	Rewersing lights, stop-light switch, instrument panel, air conditioning
F13	20	Heated seats
F14	20	Fuel injection ECU, air conditioning
F15	30	Instrument panel, diagnostic socket, body computer
F16	20	Cigarette lighter
F17	10	AL4 transmission ECU
F18	10	Rear foglight and warning ligh
F19	5	Sidelights
F20	40	Electric seats
F21	30	Heater blower
F22	5	Sunroof
F23	—	—
F24	20	Widscreen/tailgate wipers and washers, rain sensor
F25	10	Radio, digital clock, alarm LED, body computer, instrument panel, ambient temperature display
F26	15	Hazard warning light switch
F27	30	Electric front windows
F28	15	Map reading ligght, flasher unit, rear wiper motor, exterior mirror control, automatic transmission selector illumination
F29	30	Heated rear window, heated mirrors
F30	15	Ambient temperature display, digital clock, instrument panel, electric window motors

Engine Compartment Fuse Box

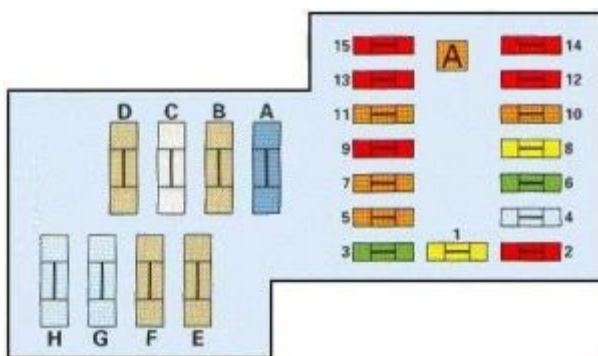

Citrone Xantia – fuse box diagram – engine

compartment

Fuse	Ampere Rating [A]	Description
F1	20	ABS
F2	40	Air injection pump
F3	30	Cooling fan
F4	—	—
F5	5	Cooling fan
F6	30	Headlight wash timer, front foglights
F7	20	Fuel injection
F8	20	Hydractive suspension
F9	10	Fuel pump relay
F10	5	Headlight washers
F11	5	Oxygen sensor relay or cruise control
F12	10	Left-hand headlight main beam
F13	10	Right-hand headlight main beam
F14	10	Left-hand headlight dipped beam
F15	10	Right-hand headlight dipped beam

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.