


Isuzu Rodeo Sport 2001 fuse box diagram

Dash fuse box

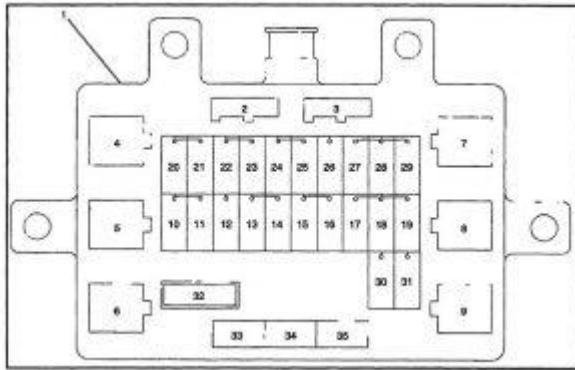

Isuzu Rodeo Sport – fuse box diagram –


dash

Number	A	Function
1		Fuse/Relay Box
2		Diode
3		Diode
4		Tail Relay
5	—	—
6		ACC Socket Relay
7		Power Window Relay
8	—	—

9		Rear Defogger Relay
10	20	Fuse ACC Socket
11	15	Fuse Audio (ACC)
12	10	Fuse Starter
13	15	Fuse Tail
14	10	Fuse Room lamp
15	15	Fuse Stop lamp
16	20	Fuse Door Lock
17	10	Fuse Mirror Defogger
18	15	Fuse Rear Defogger
19	15	Fuse Rear Defogger
20	15	Fuse Meter
21	15	Fuse ENG
22	15	Fuse IG. Coil
23	15	Fuse Back Up

24	15	Fuse ELEC. IG.
25	10	Fuse RR Wiper
26	20	Fuse FRT Wiper
27	10	Fuse Audio
28	15	Fuse Cigar Lighter
29	10	Fuse Anti-theft
30	10	Fuse SRS
31	—	—
32	30	Circuit Breaker Power Window
33	20	Spare Fuse
34	15	Spare Fuse
35	10	Spare Fuse

Engine compartment

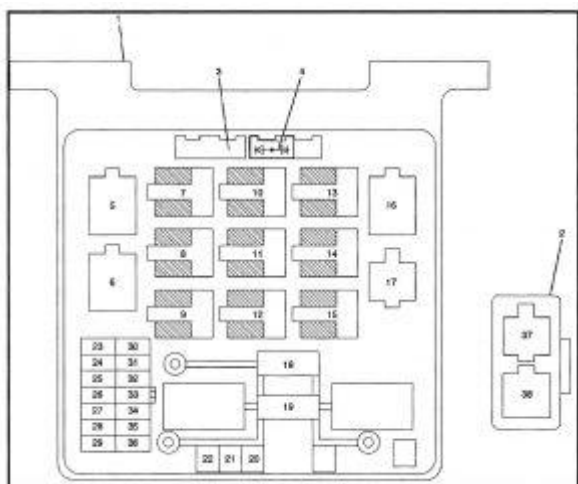

Isuzu Rodeo Sport – fuse box diagram –

engine compartment

Number	A	Function
1		Fuse/Relay Box
2		Option Box
3		Diode
4		Diode
5		Heater Relay
6		A/C Compressor Relay
7		—
8		ECM Main Relay
9		Fog Lamp Relay

10	—	—
11	—	—
12		Thermo Relay
13		Headlamp Relay
14		Starter Relay
15	—	—
16		Fuel Pump Relay
17		Electric Fan (LO) Relay
18	60	IG.1 (+B.1 60A)
19	100	Main
20	50	ABS
21	50	IG.2 (+B.2 60A)
22	40	Electric Fan
23	15	Hazard
24	10	Horn

25	10	ACG-S
26	—	—
27	15	Blower
28	15	Blower
29	10	A/C
30	10	Headlamp-LH
31	10	Headlamp-RH
32	15	Fog Lamp
33	10	O2 Sensor
34	20	Fuel Pump
35	15	ECM
36	—	—
37		Electric Fan (H1) Relay
38		Electric Fan (H1) Relay (AJT Only}