


WINDOW GLASS (ANTENNA WIRE) REPAIR


6716B-01

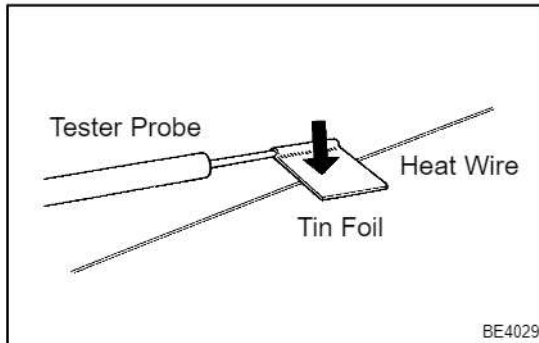


1. INSPECT WINDOW GLASS (ANTENNA WIRE)

NOTICE:

When cleaning the glass, use a soft, dry cloth, and wipe the glass in the direction of the wire. Take care not to damage the wires. Do not use detergents or glass cleaners with abrasive ingredients. When measuring voltage, wind a piece of tin foil around the top of the negative probe and press the foil against the wire with your finger, as shown in the illustration.

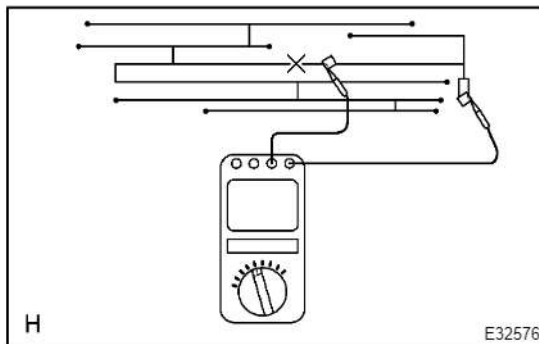


- (a) Inspect the continuity at the center of each antenna wire as shown in the illustration.

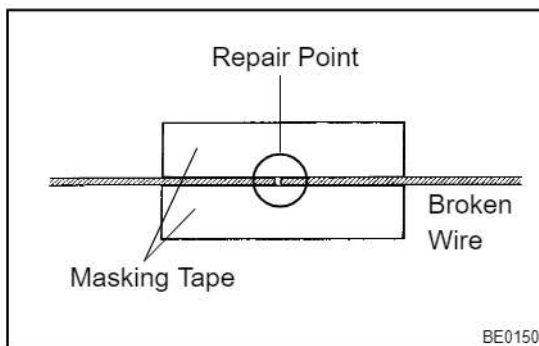



2. REPAIR WINDOW GLASS (ANTENNA WIRE)

- (a) Clean the broken wire tips with a grease, wax and silicone remover.
- (b) Place the masking tape along both sides of the wire to be repaired.
- (c) Thoroughly mix the repair agent (Dupont paste No. 4817).

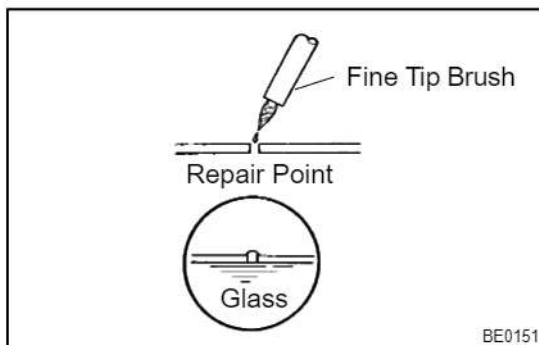


- (d) Using a fine tip brush, apply a small amount to the wire.
- (e) After a few minutes, remove the masking tape.
- (f) Do not repair the defogger wire for at least 24 hours.


COMPONENTS

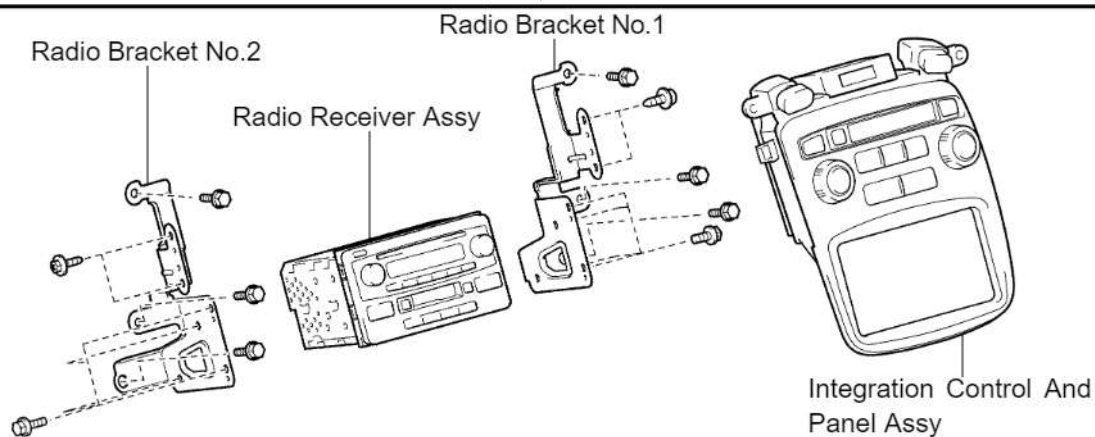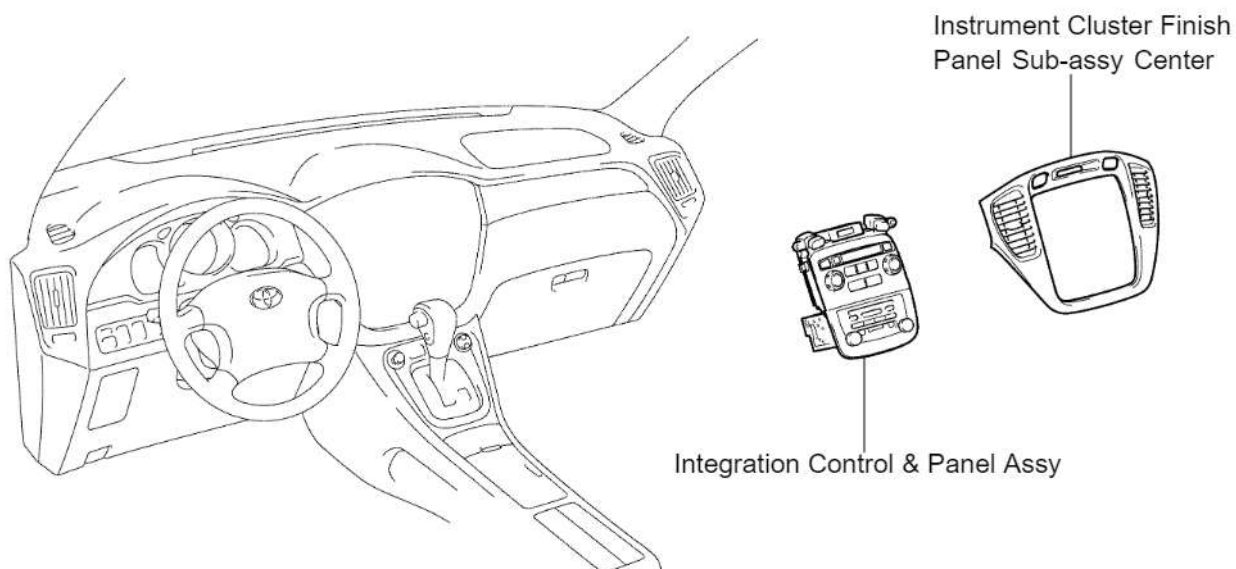


w/ EMV Navigation System:


Multi-Display
(CRT Display) Display

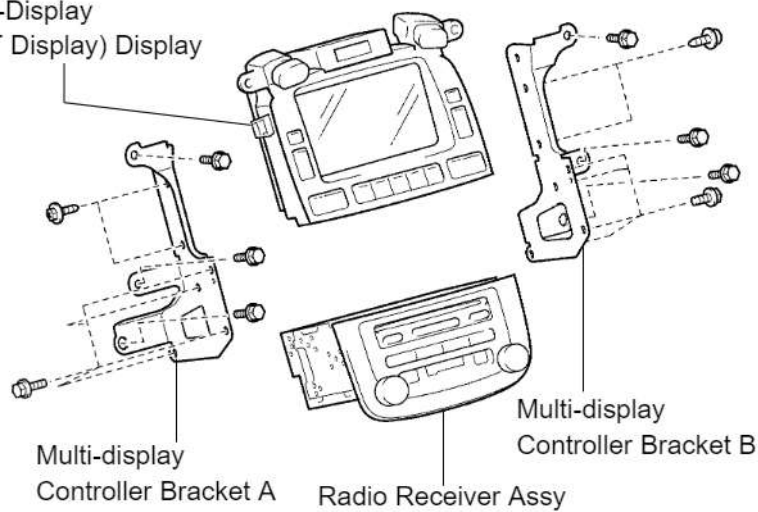

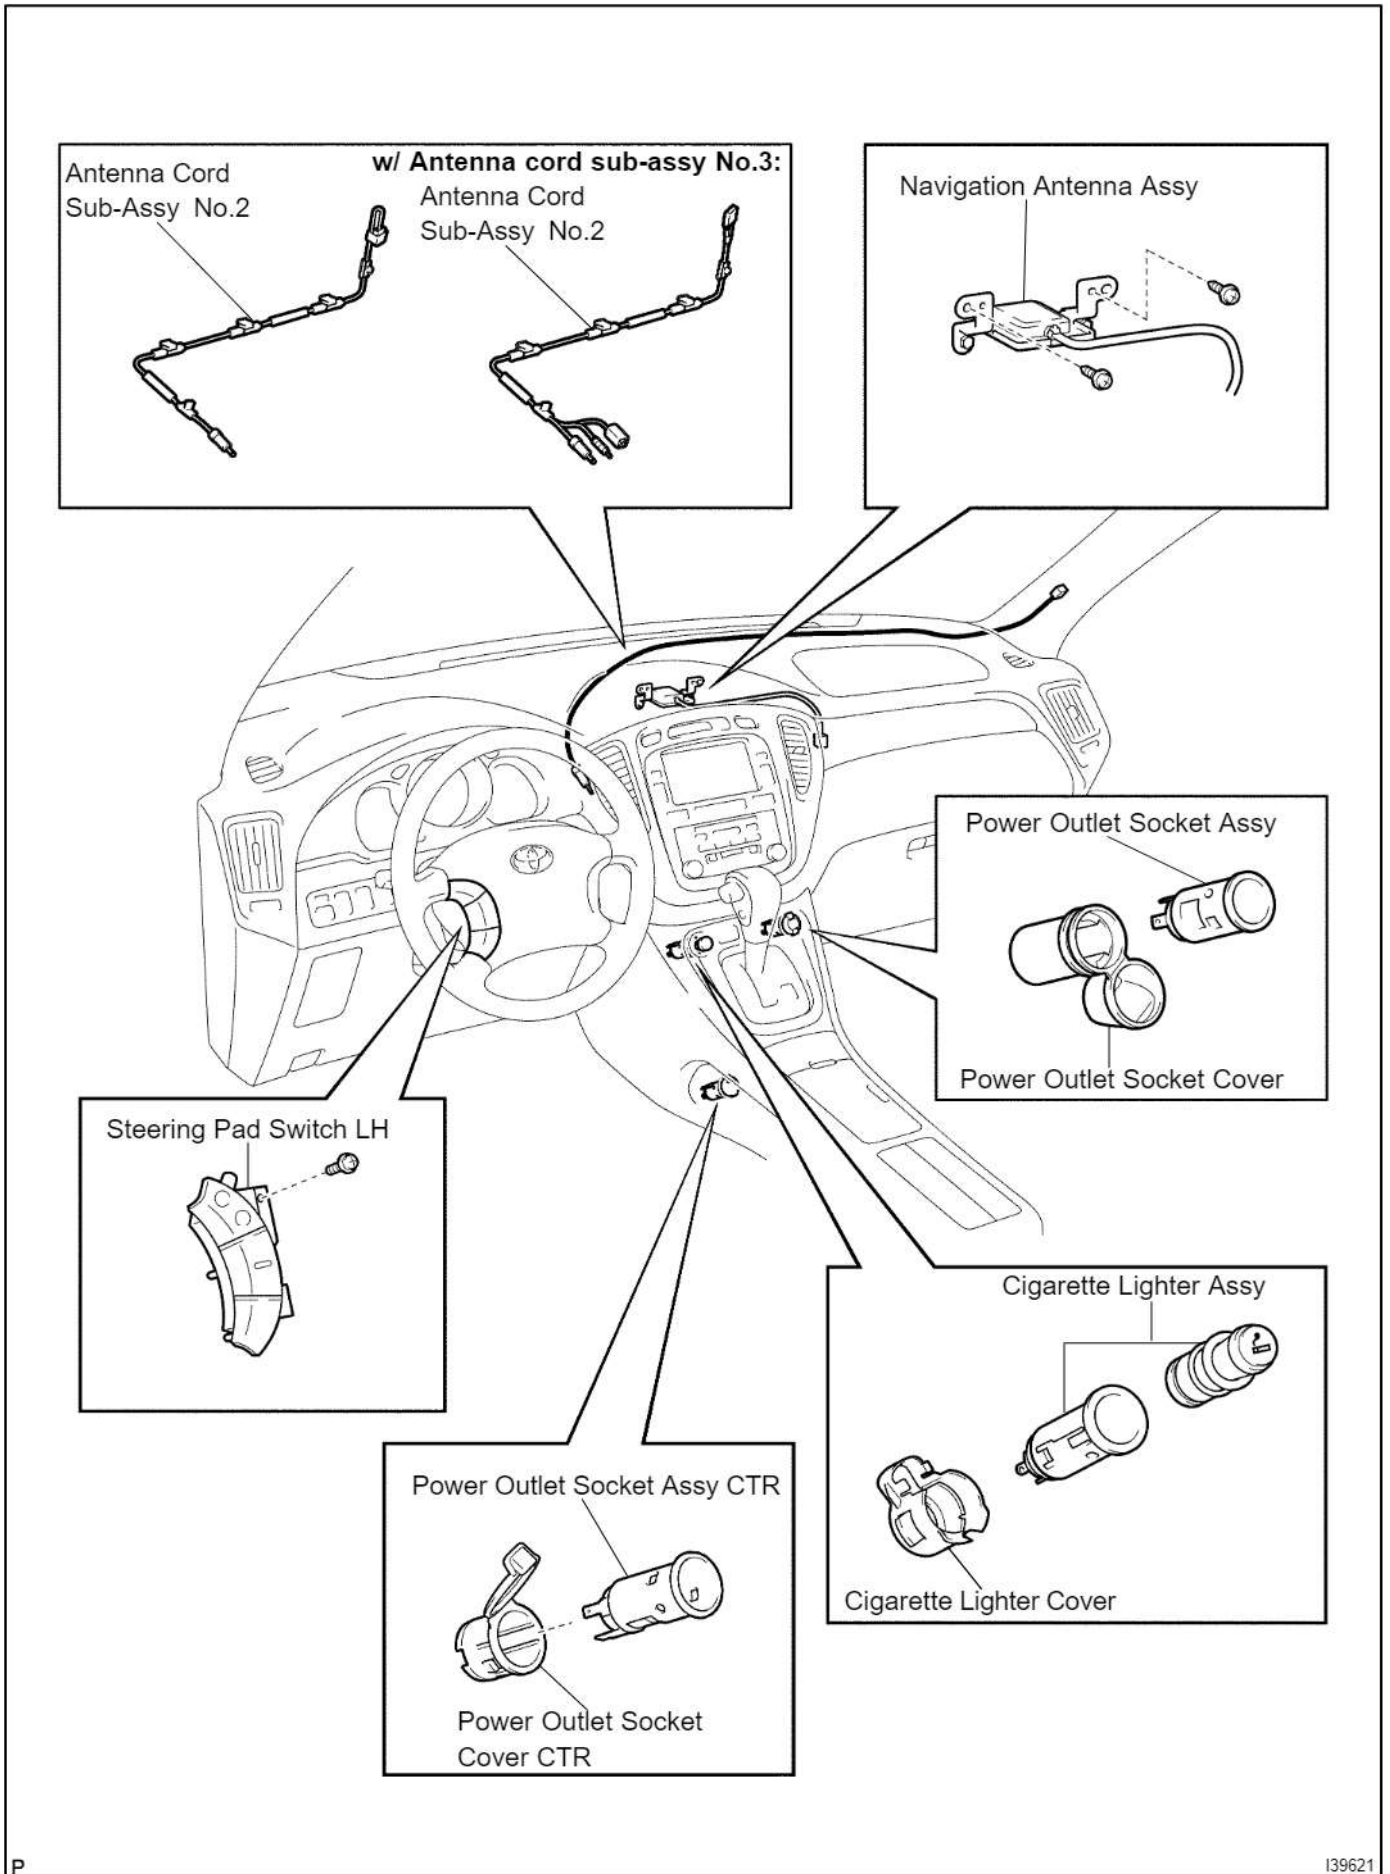

139621

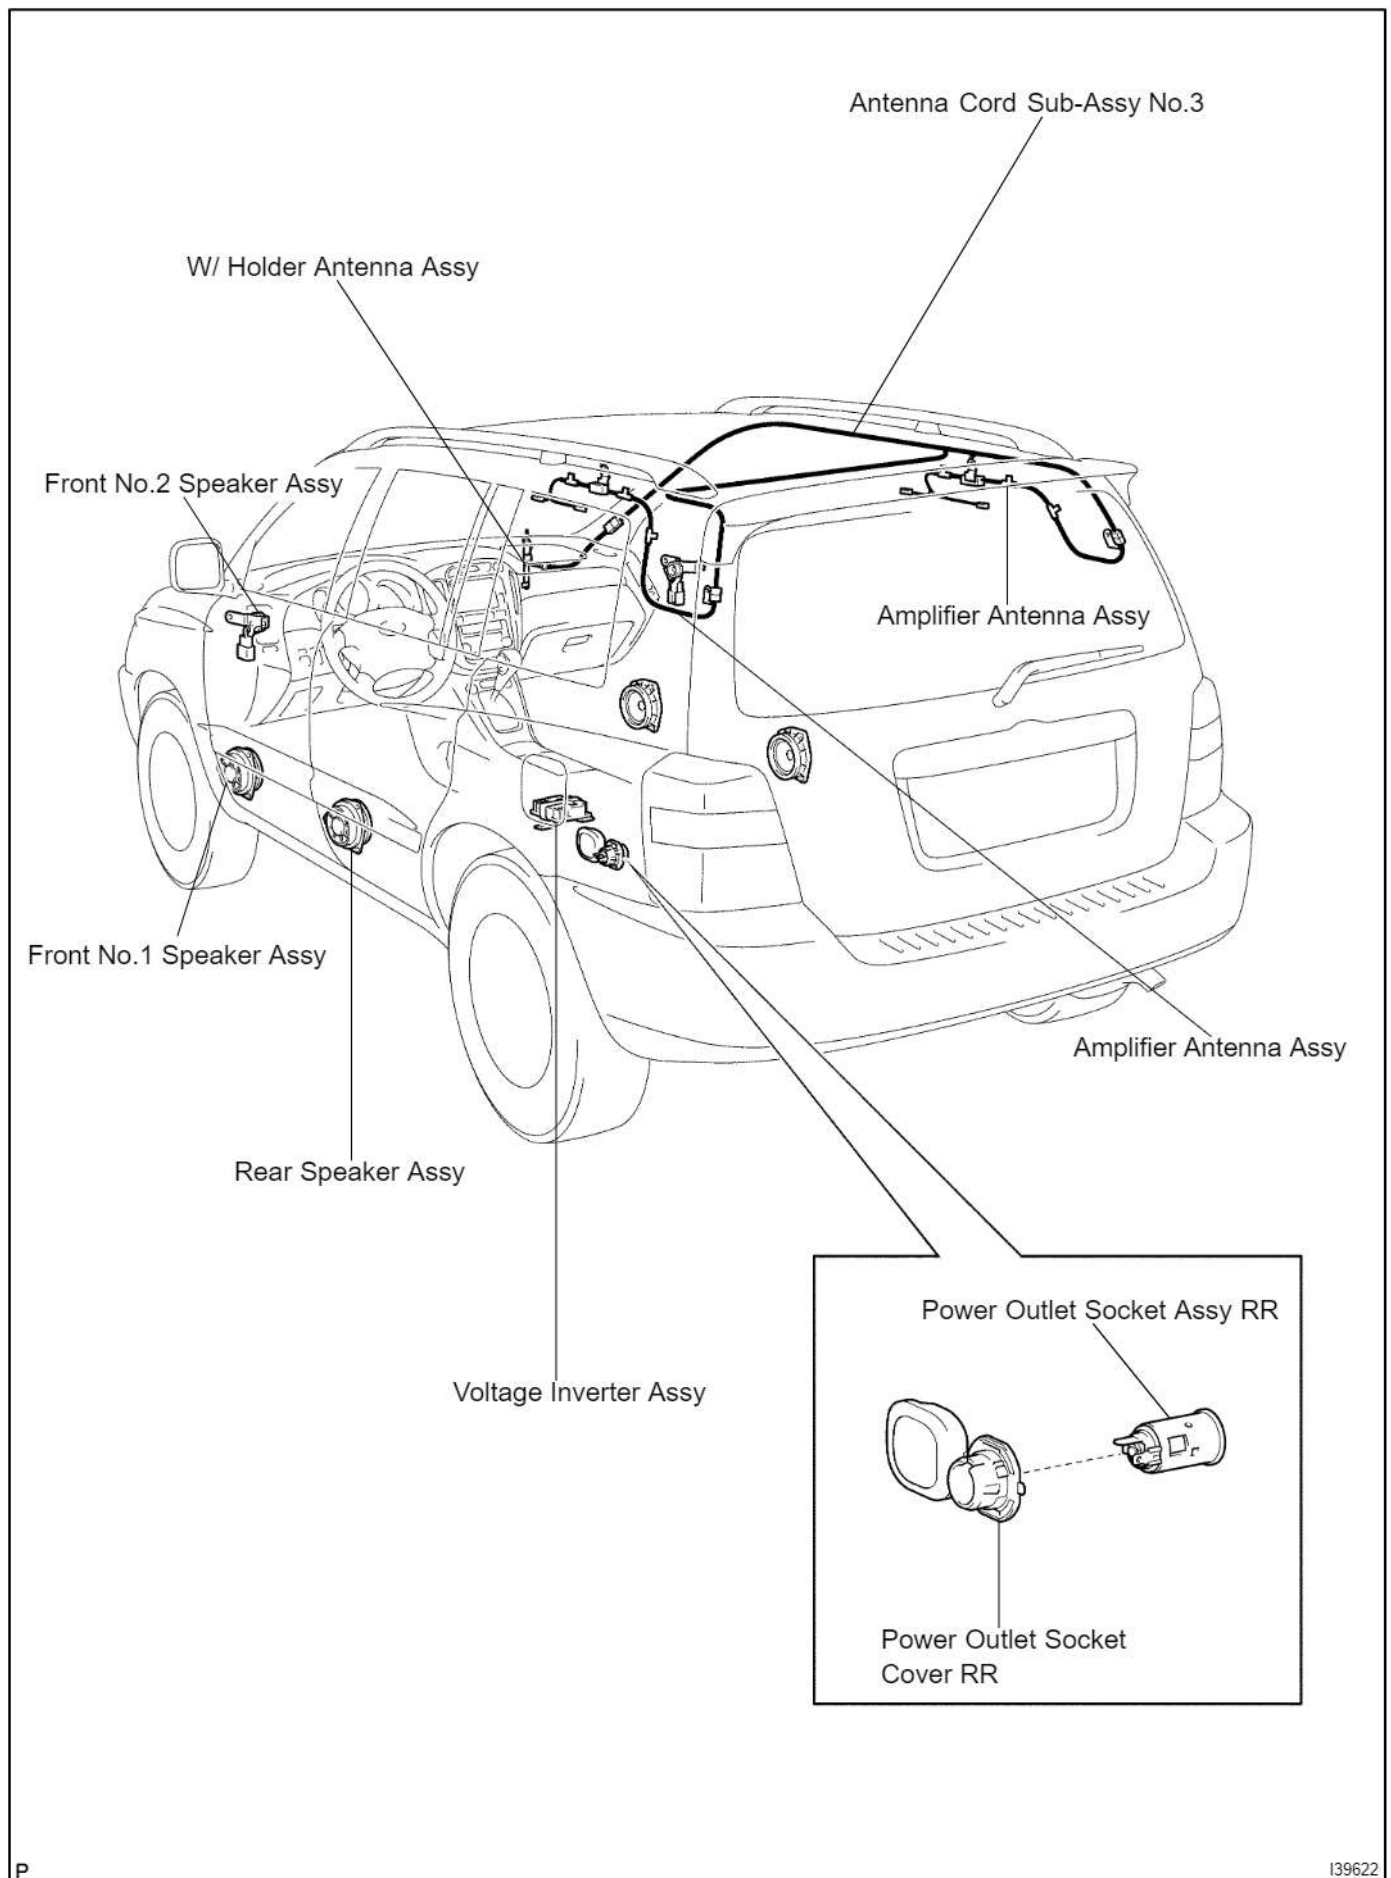

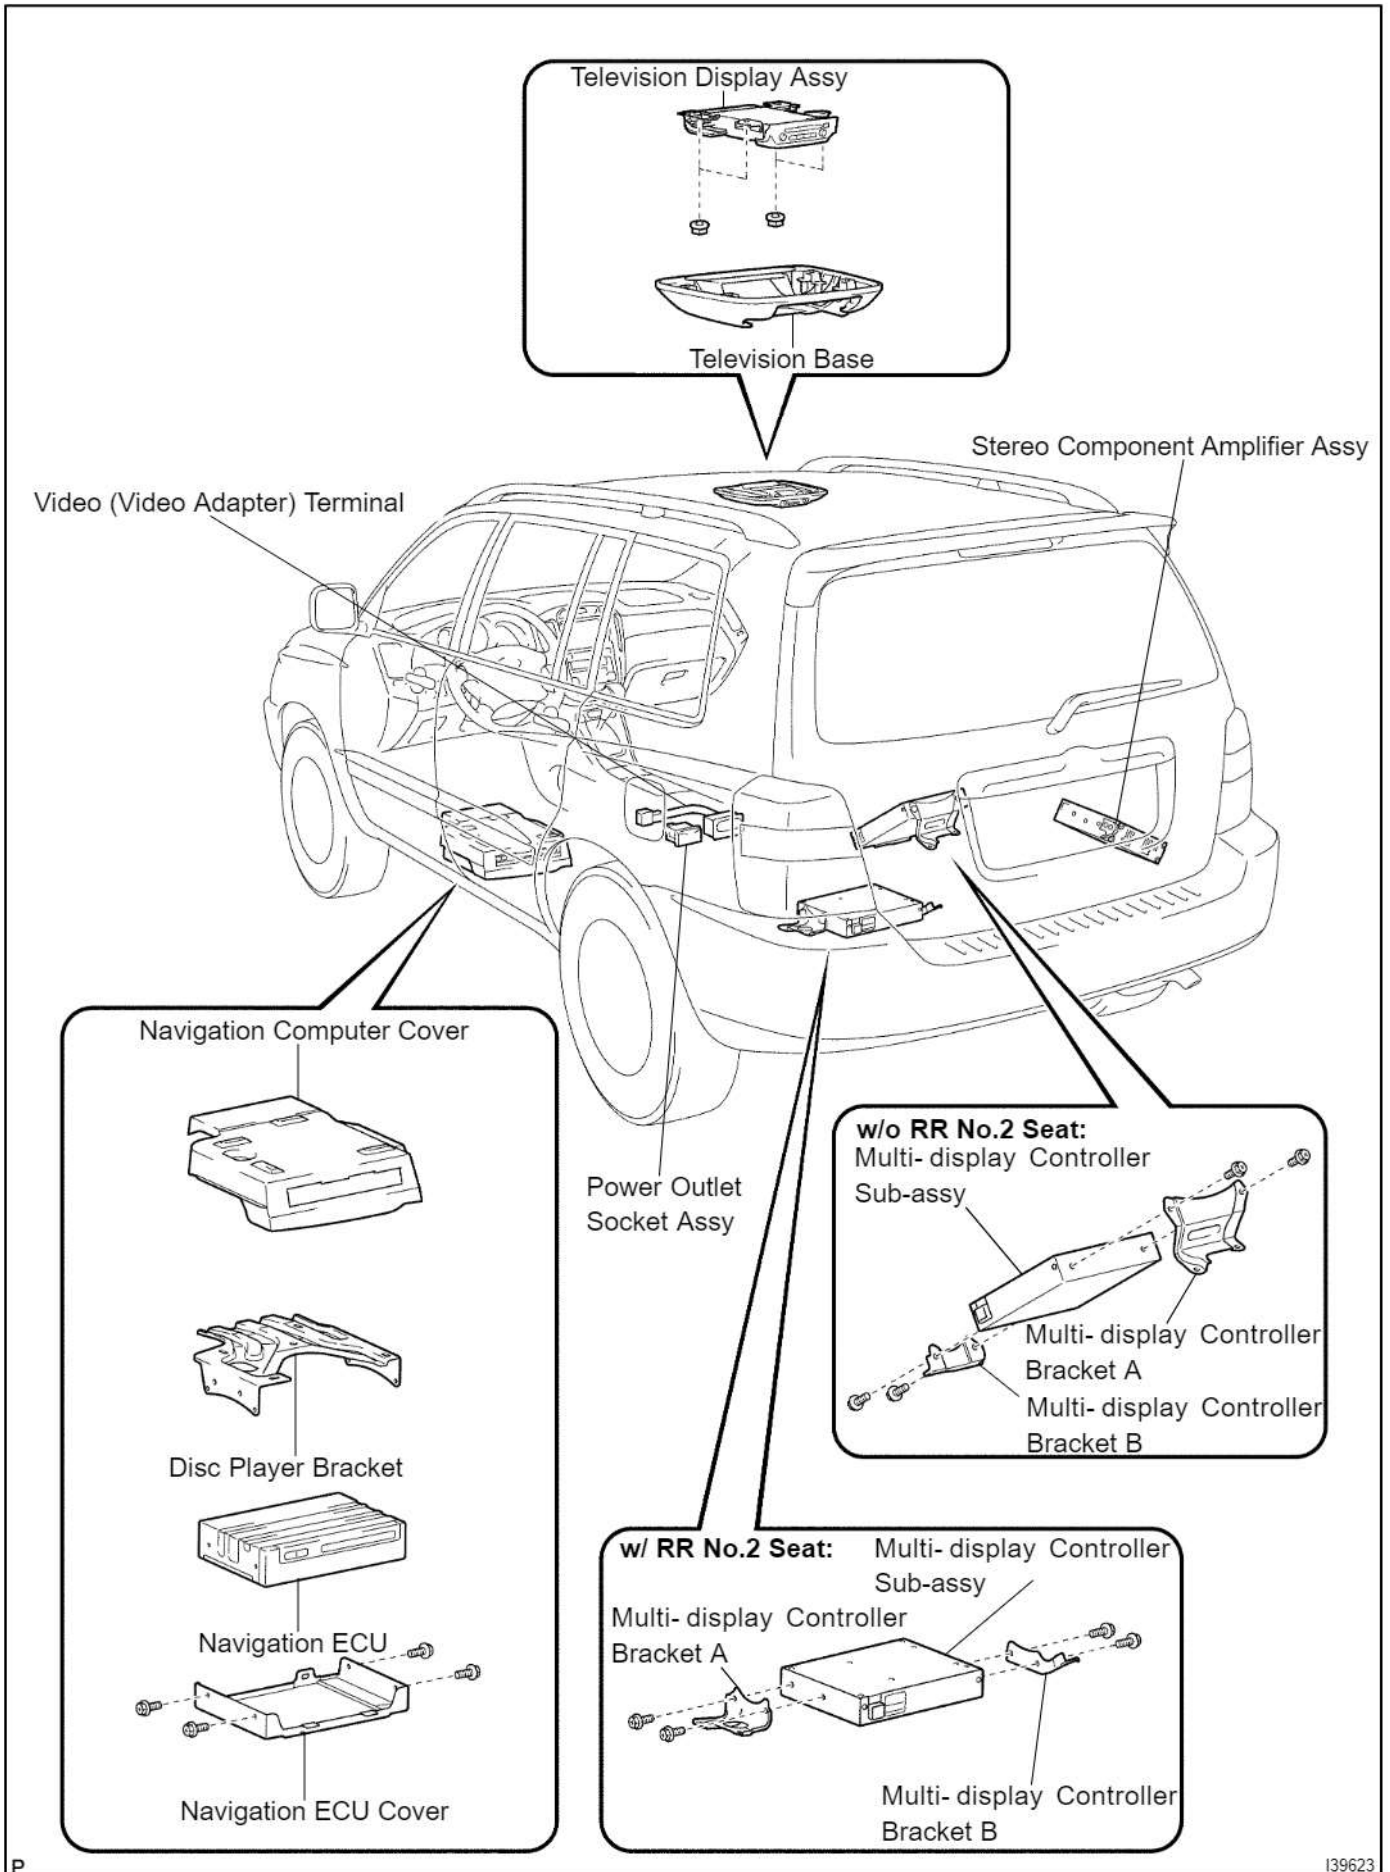

P

139623

AUDIO & VISUAL SYSTEM

6715Q-01

PRECAUTION

1. OBSERVE HANDLING AND OPERATIONAL PRECAUTIONS

- (a) Explain to the customer that when the negative terminal is disconnected from the battery, the AM/FM channel presets in the radio receiver are cleared. If necessary, make a note of the recorded channel information before the negative terminal is disconnected, then reset the information after the negative terminal is reconnected.
- (b) The removal/installation of the radio receiver should be performed after all cassette tapes and audio CDs are ejected from the radio receiver.

HINT:

If a cassette tape or audio CD cannot be ejected due to malfunction of the radio receiver, do not attempt to remove it forcefully. Bring the vehicle to the repair plant.

- (c) Fasten the earth bolt securely when the antenna cord is removed or installed.

HINT:

Failure to fasten the earth bolt securely causes noise when receiving radio waves.


- (d) Do not touch the cone paper of the speaker.

W/HOLDER ANTENNA ASSY REPLACEMENT

6702K-04


HINT:

- COMPONENTS: See page 76-21
 - Installation is in the reverse order of removal.
1. REMOVE GLOVE COMPARTMENT DOOR ASSY (SEE PAGE 71-10)
 2. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER NO.2 (SEE PAGE 71-10)
 3. REMOVE FRONT PILLAR GARNISH RH (SEE PAGE 71-10)
 4. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSY LH (SEE PAGE 76-2)

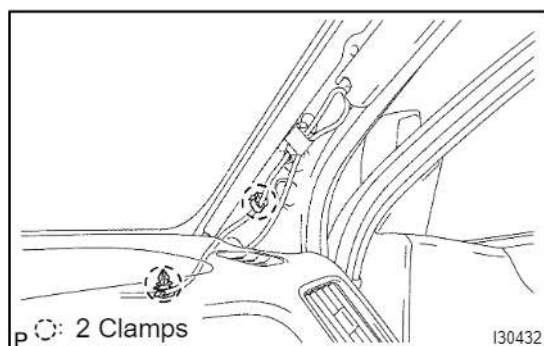


5. REMOVE W/HOLDER ANTENNA ASSY

- (a) Disconnect the connector, and remove the bolt.
- (b) Remove the 2 clamps.

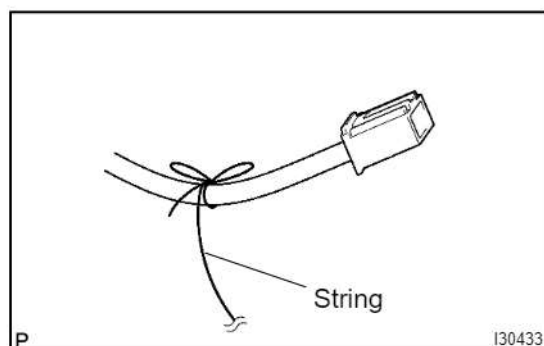

- (c) Tie the string at the tip of the cable of the w/holder antenna assembly.
- (d) Remove the antenna nut and ornament antenna.

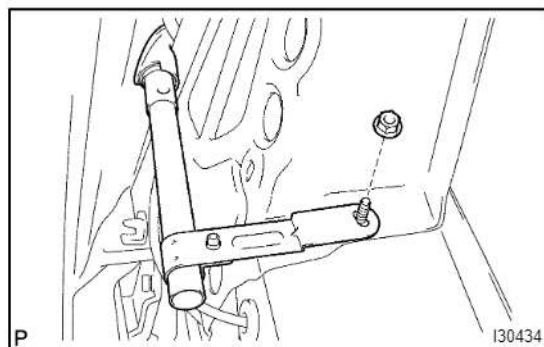

- (e) Remove the nut and w/holder antenna assembly.

6. INSTALL W/HOLDER ANTENNA ASSY

- (a) Install the w/holder antenna assy with the nut.
- (b) Install the antenna nut and ornament antenna.
- (c) Use the string to put the cable of the w/holder antenna assy.
- (d) Install the 2 clamps.
- (e) Connect the connector, install the bolt.

AMPLIFIER ANTENNA ASSY REPLACEMENT

6716C-01


HINT:

- COMPONENTS: See page 76-21
- Installation is in the reverse order of removal.

1. REMOVE ROOF HEADLINING ASSY (SEE PAGE 76-21)


HINT:

Refer to the procedures up to "REMOVE ROOF HEAD LINING ASSY".

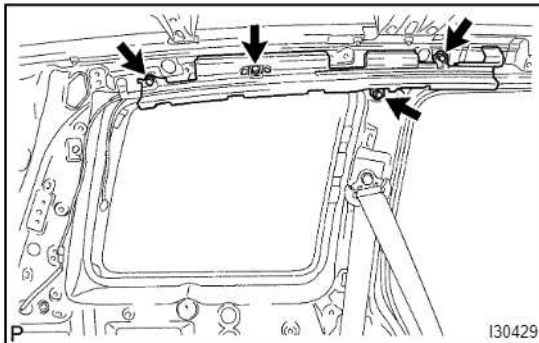

2. REMOVE ROOF SIDE RAIL BRACKET LH

- (a) Remove the 4 bolts and roof side rail bracket LH.

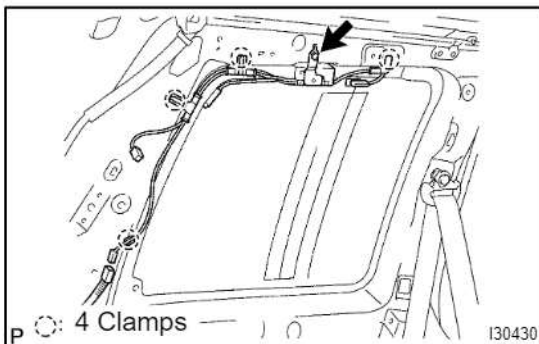

3. REMOVE AMPLIFIER ANTENNA ASSY

- (a) Disconnect the 2 connectors.
(b) Remove the 4 clamps, bolt and amplifier antenna assy.

4. INSTALL ROOF HEADLINING ASSY (SEE PAGE 76-21)

HINT:

Refer to the procedures from "INSTALL ROOF HEAD LINING ASSY".

ANTENNA CORD SUB-ASSY NO.3 REPLACEMENT

6715X-01

HINT:

- COMPONENTS: See page 76-21
- Installation is in the reverse order of removal.

1. REMOVE ROOF HEADLINING ASSY (SEE PAGE 76-21)

HINT:

Refer to the procedures up to "REMOVE ROOF HEAD LINING ASSY".

2. REMOVE ANTENNA CORD SUB-ASSY NO.3


- (a) Remove the antenna cord sub assy No. 3 from the roof headlining.

3. INSTALL ANTENNA CORD SUB-ASSY NO.3

- (a) Tape the antenna cord sub-assy No. 3 at the position of the roof headlining shown in the illustration.

NOTICE:

The antenna cord sub assy should come to the center of the tape (100 mm x 25 mm) when taped.
Try not to touch the adhesive side of the tape when taping.

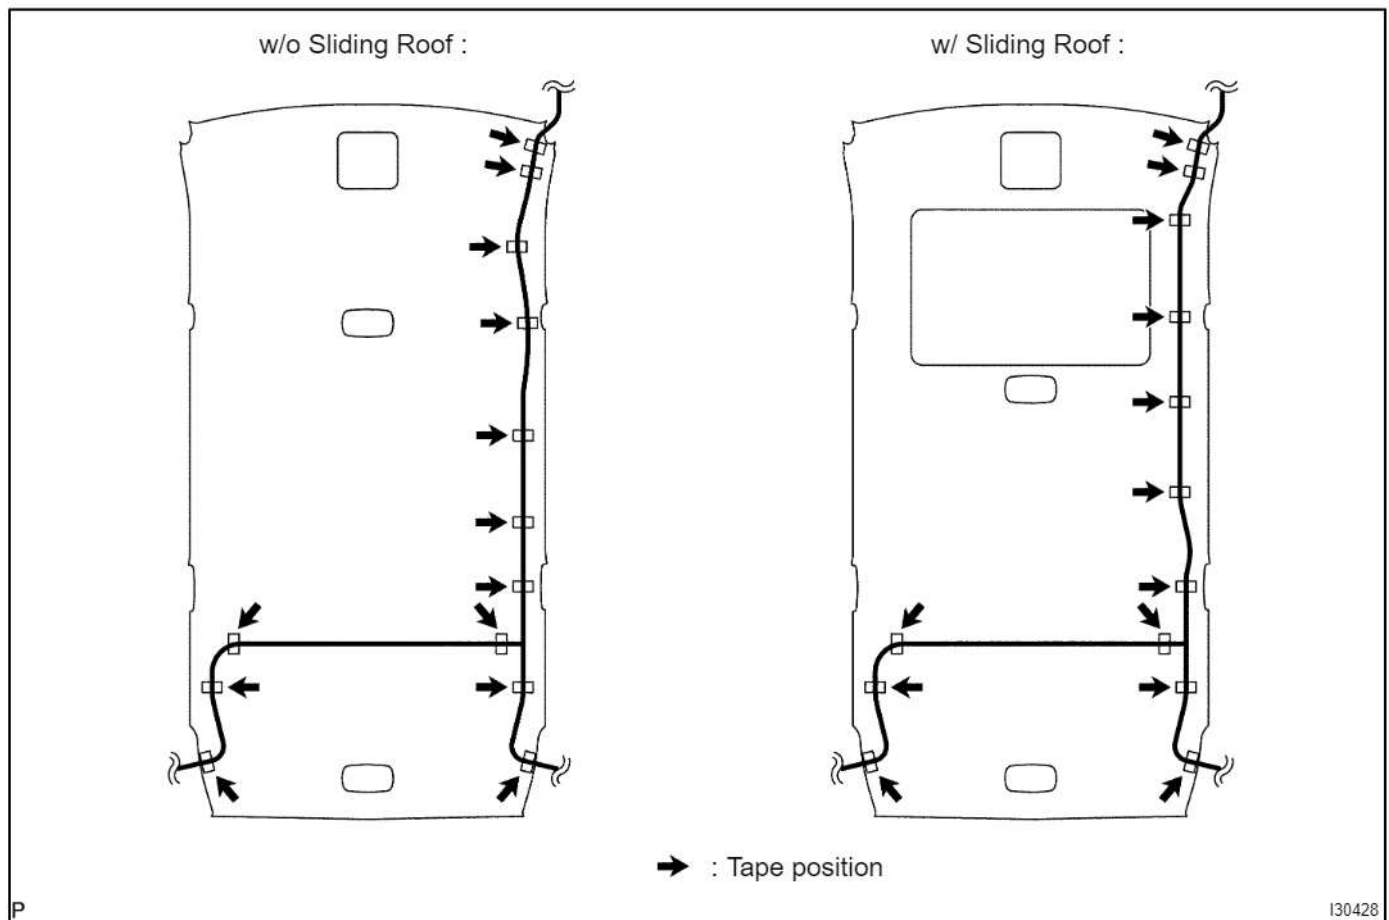

4. INSTALL ROOF HEADLINING ASSY (SEE PAGE 76-21)

HINT:

Refer to the procedures from "INSTALL ROOF HEAD LINING ASSY".

ANTENNA CORD SUB-ASSY NO.2 REPLACEMENT

67019-03

HINT:

- COMPONENTS: See page 67-2
- Installation is in the reverse order of removal.


1. REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY W/PASSENGER AIR BAG ASSY (SEE PAGE 71-10)

HINT:

Refer to the procedures up to "REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY W/ PASSENGER AIRBAG ASSY".

2. REMOVE ANTENNA CORD SUB-ASSY NO.2

- (a) Remove the 4 clamps and antenna cord sub-assy.

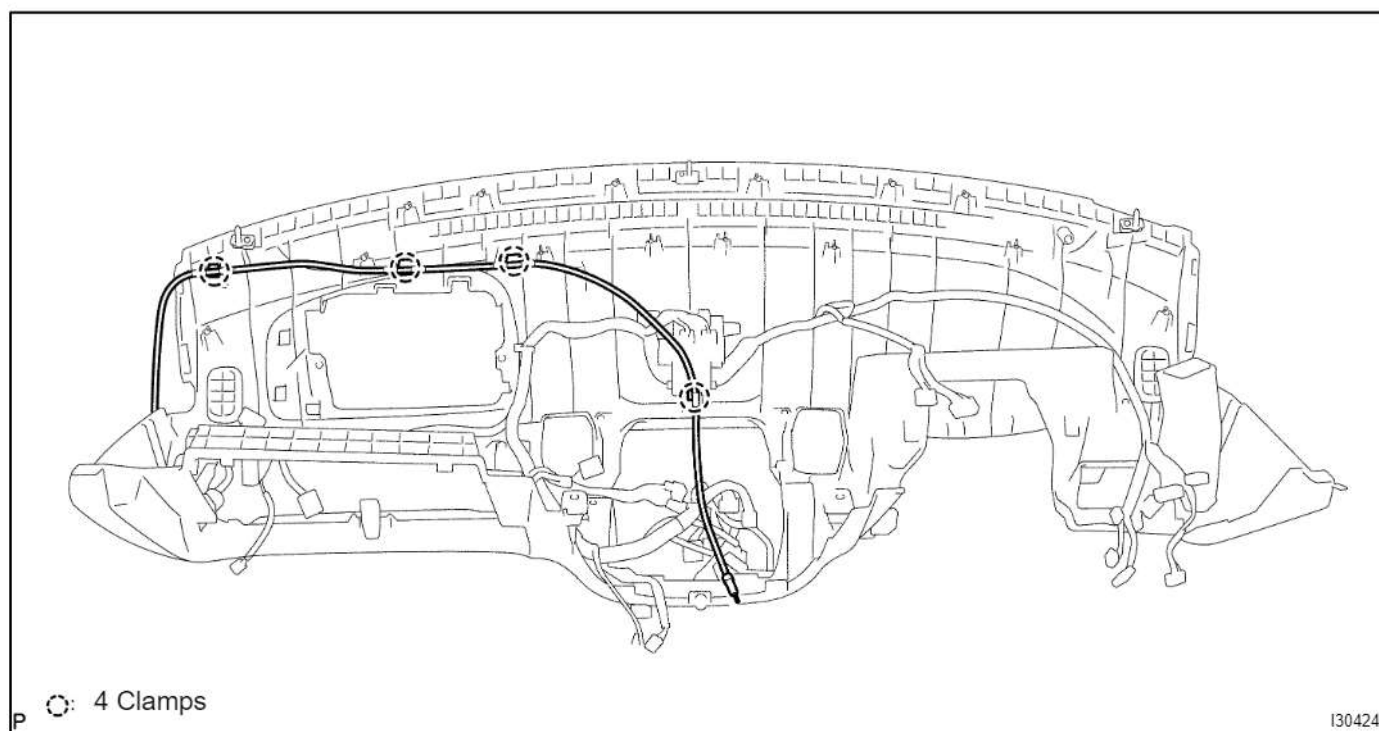

3. INSTALL INSTRUMENT PANEL SAFETY PAD SUB-ASSY W/PASSENGER AIR BAG ASSY (SEE PAGE 71-10)

HINT:


Refer to the procedures from "INSTALL INSTRUMENT PANEL SAFETY PAD SUB-ASSY W/ PASSENGER AIRBAG ASSY".

POWER OUTLET SOCKET ASSY REPLACEMENT

6716A-01


HINT:

- COMPONENTS: See page 67-2
 - Installation is in the reverse order of removal.
1. REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSY CENTER
 2. REMOVE FRONT SEAT ARMREST ASSY CENTER
 3. REMOVE CONSOLE BOX ASSY

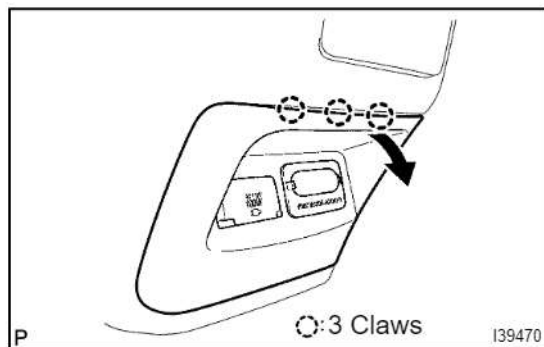

4. REMOVE POWER OUTLET SOCKET ASSY

- (a) Remove the power outlet socket assy together with the console box rear cover as shown in the illustration.

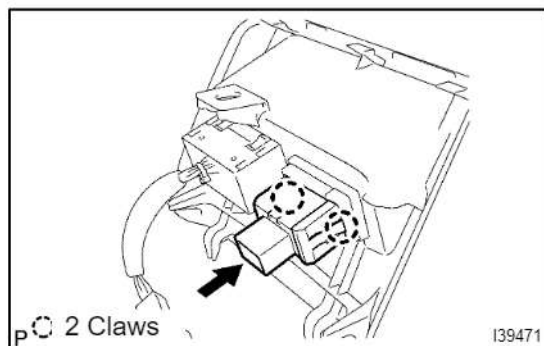


- (b) Disconnect the connector.
- (c) Release the 2 claw fittings and remove the power outlet socket assy.

VOLTAGE INVERTER ASSY REPLACEMENT

67162-01

HINT:

- COMPONENTS: See page [67-2](#)
 - Installation is in the reverse order of removal.
1. **REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSY CENTER (SEE PAGE [71-10](#))**
 2. **REMOVE FRONT SEAT ARMREST ASSY CENTER (SEE PAGE [71-10](#))**
 3. **REMOVE CONSOLE BOX ASSY (SEE PAGE [71-10](#))**

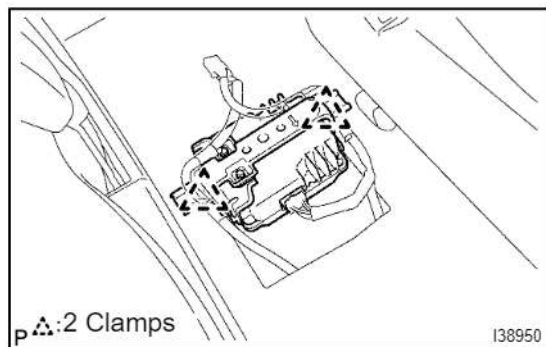


4. **REMOVE VOLTAGE INVERTER ASSY**
 - (a) Disconnect the connector.
 - (b) Remove the 2 clamps and the voltage inverter assy.

MULTI-DISPLAY CONTROLLER SUB-ASSY REPLACEMENT

67163-01


HINT:

- COMPONENTS: See page 67-2
 - Installation is in the reverse order of removal.
1. REMOVE REAR SEAT ASSY RH (SEE PAGE 72-35)
 2. REMOVE REAR SEAT ASSY LH (SEE PAGE 72-28)
 3. REMOVE REAR DOOR SCUFF PLATE RH (SEE PAGE 76-21)
 4. REMOVE REAR DOOR SCUFF PLATE LH (SEE PAGE 76-21)
 5. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH (SEE PAGE 76-21)
 6. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH (SEE PAGE 76-21)
 7. REMOVE TONNEAU COVER ASSY (SEE PAGE 76-21)
 8. REMOVE DECK BOARD SUB-ASSY (SEE PAGE 76-21)
 9. REMOVE DECK BOARD SUB-ASSY NO.2 (SEE PAGE 76-21)
 10. REMOVE DECK BOARD SUB-ASSY NO.3 (SEE PAGE 76-21)
 11. REMOVE DECK SIDE TRIM BOX RH (SEE PAGE 76-21)
 12. REMOVE DECK SIDE TRIM BOX LH (SEE PAGE 76-21)
 13. REMOVE REAR FLOOR FINISH PLATE (SEE PAGE 76-21)
 14. REMOVE DECK TRIM SIDE PANEL ASSY RH (SEE PAGE 76-21)
 15. REMOVE DECK TRIM SIDE PANEL ASSY LH (SEE PAGE 76-21)

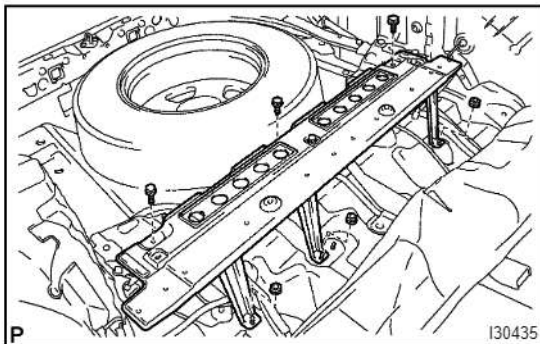


16. REMOVE REAR SEAT SUB FLOOR PANEL ASSY (W/O RR NO.2 SEAT)

- (a) Remove the 3 bolts, 3 nuts and rear seat sub floor panel.

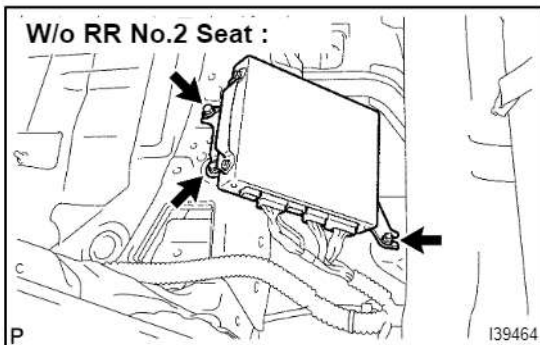


17. REMOVE MULTI-DISPLAY CONTROLLER W/BACKET



- (a) Disconnect the connectors.
- (b) W/o RR No.2 Seat:
Remove the 2 bolts and nut and the multi-display controller w/bracket.

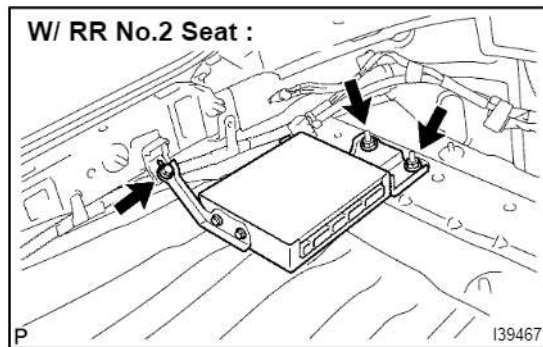


- (c) W/ RR No.2 Seat:
Remove the 2 nuts and bolt and the multi-display controller w/bracket.

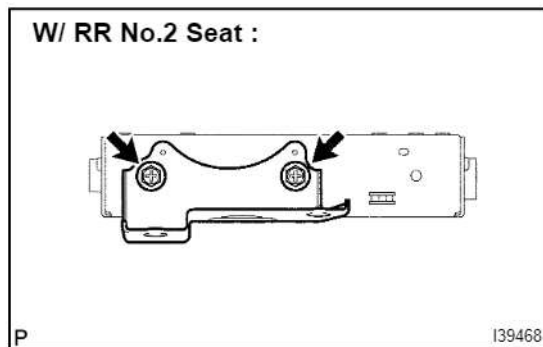

- 18. REMOVE MULTI-DISPLAY CONTROLLER BRACKET A**
(a) Remove the 2 screws and the multi-display controller bracket A.

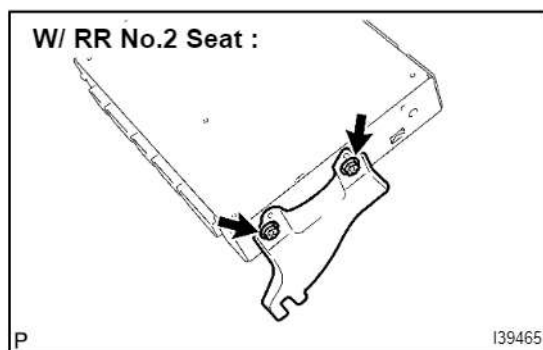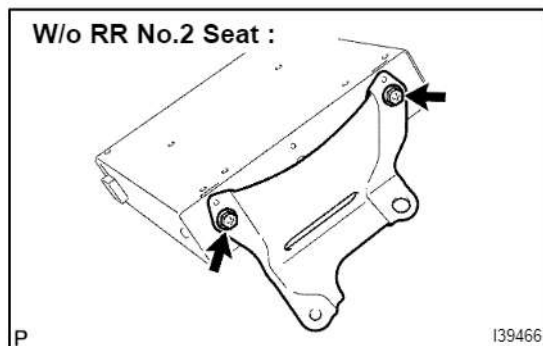

- 19. REMOVE MULTI-DISPLAY CONTROLLER BRACKET B**
(a) Remove the 2 screws and the multi-display controller bracket B.

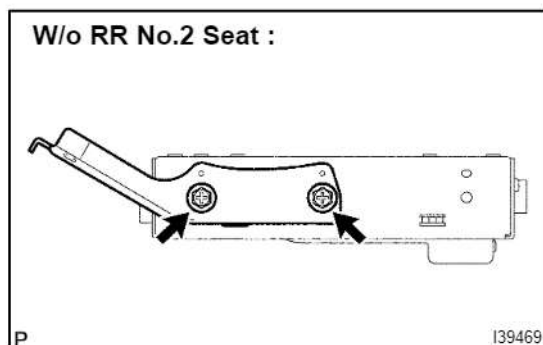


20. REMOVE MULTI-DISPLAY CONTROLLER SUB-ASSY

TELEVISION DISPLAY ASSY REPLACEMENT


67164-01

HINT:

- COMPONENTS: See page 67-2
- Installation is in the reverse order of removal.

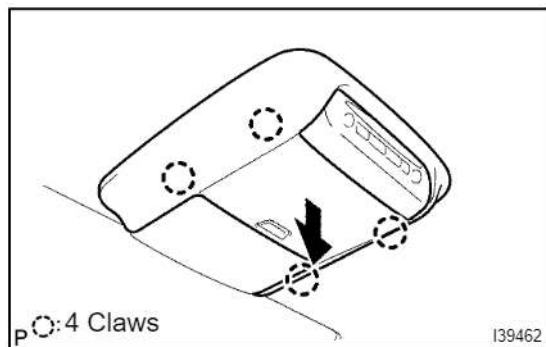**1. REMOVE TELEVISION BASE**

- (a) Release the 4 claws and remove the television base.

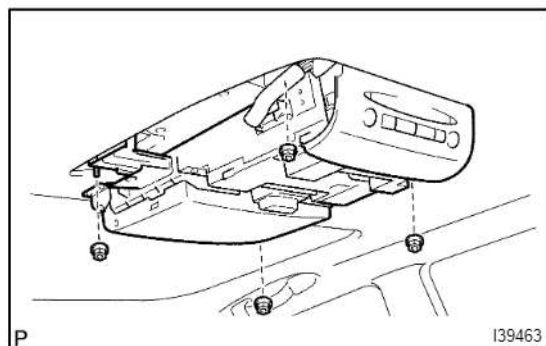**2. REMOVE TELEVISION DISPLAY ASSY**


- (a) Disconnect the connector and remove the 4 nuts and the television display assy.

VIDEO(VIDEO ADAPTER) TERMINAL REPLACEMENT

67165-01


HINT:

- COMPONENTS: See page 67-2
- Installation is in the reverse order of removal.

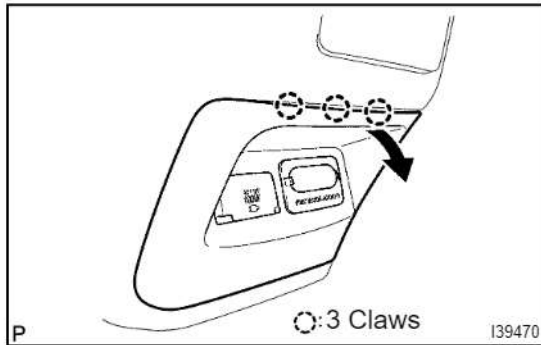

1. REMOVE VIDEO(VIDEO ADAPTER) TERMINAL

- (a) Remove the video (video adapter) terminal together with the console box rear cover as shown in the illustration.

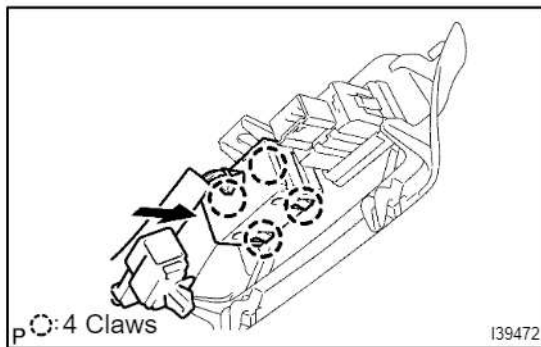

- (b) Disconnect the connector.
(c) Release the 4 claw fittings and remove the video (video adapter) terminal.


STEERING PAD SWITCH LH

REPLACEMENT

67166-01


HINT:

- COMPONENTS: See page 67-2
 - Installation is in the reverse order of removal.
1. **PRECAUTION (SEE PAGE 60-1)**
 2. **SEPARATE BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)**
 3. **REMOVE STEERING WHEEL COVER LOWER NO.2 (SEE PAGE 50-8)**
 4. **REMOVE STEERING WHEEL COVER LOWER NO.3 (SEE PAGE 50-8)**
 5. **REMOVE HORN BUTTON ASSY (SEE PAGE 50-8)**

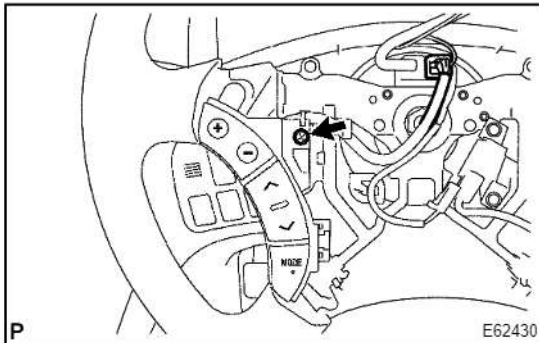

6. REMOVE STEERING PAD SWITCH LH

- (a) Disconnect the connector.
- (b) Disconnect the connector of cruise control main switch.
- (c) Remove the screw.

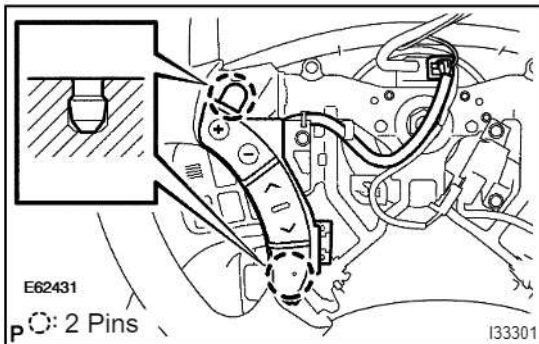

- (d) Release the 2 pin fittings and remove the steering pad switch LH.

7. **INSTALL HORN BUTTON ASSY (SEE PAGE 60-1 1)**
8. **CONNECT BATTERY NEGATIVE TERMINAL**
9. **INSPECT HORN BUTTON ASSY (SEE PAGE 50-8)**
10. **INSPECT SRS WARNING LIGHT (SEE PAGE 05-1207)**


RADIO RECEIVER ASSY REPLACEMENT

6715R-01

HINT:


- COMPONENTS: See page 67-2
- Installation is in the reverse order of removal.

1. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSY CENTER (SEE PAGE 71-10)

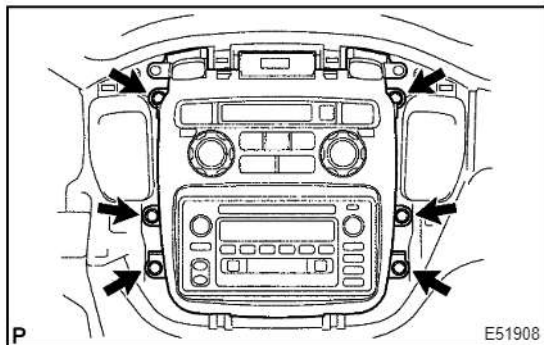


2. REMOVE INTEGRATION CONTROL & PANEL ASSY

- Remove the 6 bolts.
- Disconnect the connectors and remove the integration control & panel assy.

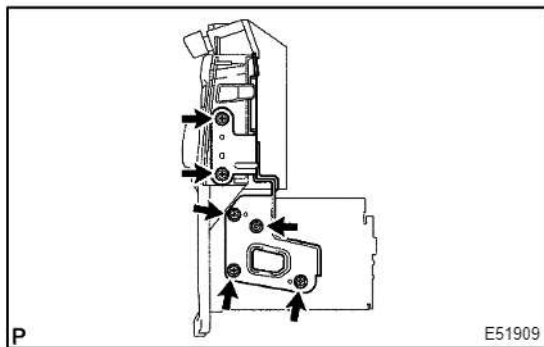


3. REMOVE RADIO BRACKET NO.1 (W/O EMV & NAVIGATION SYSTEM)

- Remove the 4 bolts, 2 screws and radio bracket No. 1.

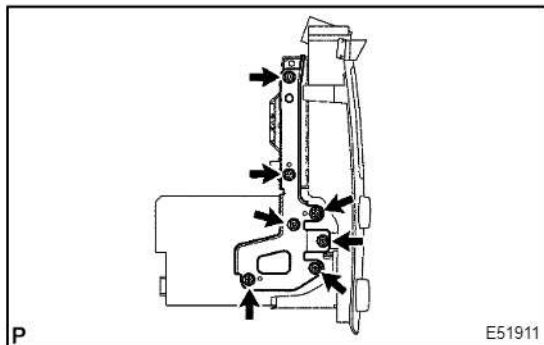


4. REMOVE MULTI-DISPLAY CONTROLLER BRACKET A (W/ EMV & NAVIGATION SYSTEM)

- Remove the 7 screws and multi-display controller bracket A.

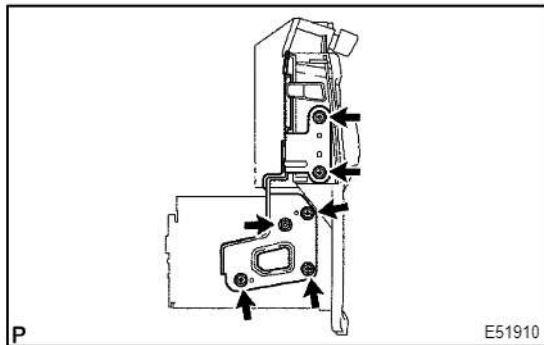

5. REMOVE RADIO BRACKET NO.2 (W/O EMV & NAVIGATION SYSTEM)

- Remove the 4 bolts, 2 screws and radio bracket No. 2.

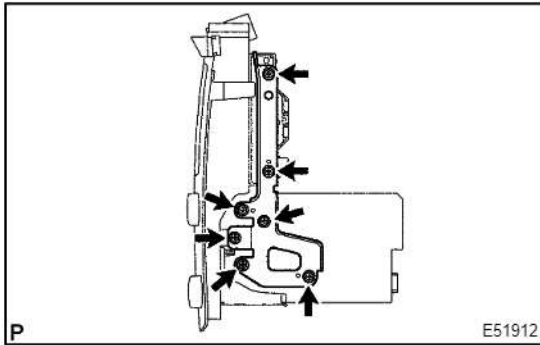

- 6. REMOVE MULTI-DISPLAY CONTROLLER BRACKET B (W/ EMV & NAVIGATION SYSTEM)**
- (a) Remove the 7 screws and multi-display controller bracket B.

7. REMOVE RADIO RECEIVER ASSY


MULTI-DISPLAY (CRT DISPLAY) DISPLAY REPLACEMENT

67155-01

HINT:


- COMPONENTS: See page [67-2](#)
- Installation is in the reverse order of removal.

1. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSY CENTER (SEE PAGE [71-10](#))

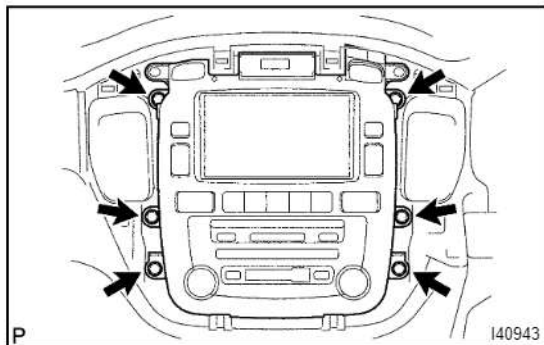


2. REMOVE INTEGRATION CONTROL & PANEL ASSY

- Remove the 6 bolts.
- Disconnect the connectors and remove the integration control & panel assy.

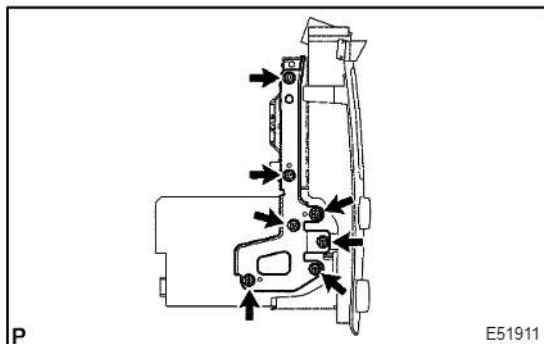

3. REMOVE MULTI-DISPLAY CONTROLLER BRACKET A

- Remove the 7 screws and multi-display controller bracket A.

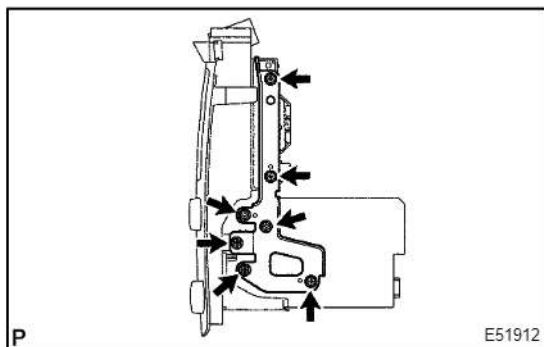

4. REMOVE MULTI-DISPLAY CONTROLLER BRACKET B

- Remove the 7 screws and multi-display controller bracket B.

5. REMOVE MULTI-DISPLAY (CRT DISPLAY) DISPLAY

6. INSTALL MULTI-DISPLAY (CRT DISPLAY) DISPLAY

HINT:

Perform the screen noise automatic adjustment when screen noise occurs (see page [05-1803](#)).


NAVIGATION ECU REPLACEMENT

6715T-01

HINT:


- COMPONENTS: See page 67-2
- Installation is in the reverse order of removal.

1. **REMOVE FRONT SEAT ASSEMBLY LH**
POWER SEAT (SEE PAGE 72-1 1)
MANUAL SEAT (SEE PAGE 72-19)

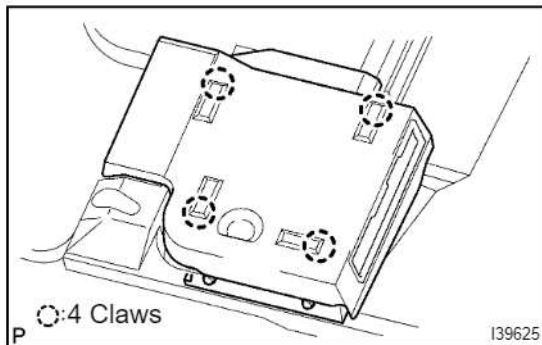


2. **REMOVE NAVIGATION ECU COVER**

- (a) Remove the 4 claws and the navigation ECU cover.

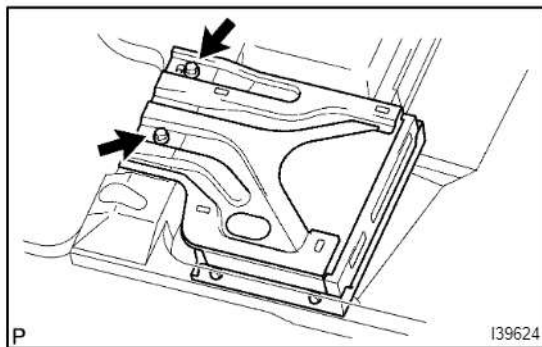

3. **REMOVE NAVIGATION ECU W/BRACKET**

- (a) Disconnect the connector.
- (b) Remove the 2 bolts and the navigation ECU w/ bracket.

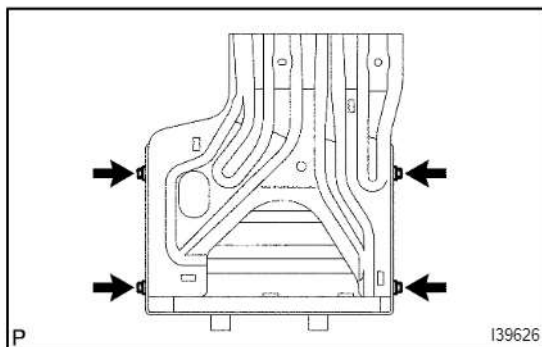

4. **REMOVE DISC PLAYER BRACKET**

- (a) Remove the 4 screws and the disc player bracket.

5. **REMOVE NAVIGATION ECU**

6. **INSTALL NAVIGATION ECU**

HINT:

Perform the screen noise automatic adjustment when screen noise occurs (see page 05-1803).


7. **INSTALL FRONT SEAT ASSEMBLY LH**
POWER SEAT (SEE PAGE 72-1 1)
MANUAL SEAT (SEE PAGE 72-19)

FRONT NO.1 SPEAKER ASSY REPLACEMENT

6715U-01


HINT:

- COMPONENTS: See page 67-2
 - Installation is in the reverse order of removal.
1. REMOVE MULTIPLEX NETWORK MASTER SWITCH ASSY (SEE PAGE 75-6)
 2. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (SEE PAGE 75-6)
 3. REMOVE DOOR PULL HANDLE (SEE PAGE 75-6)
 4. REMOVE FRONT DOOR TRIM BOARD SUB-ASSY LH (SEE PAGE 75-6)
 5. REMOVE FRONT DOOR INSIDE HANDLE SUB-ASSY LH (SEE PAGE 75-6)

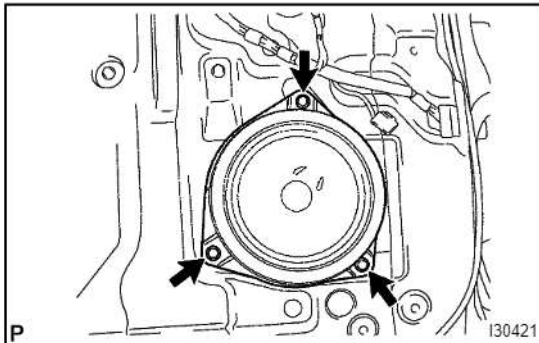

6. REMOVE FRONT NO.1 SPEAKER ASSY

- (a) Disconnect the connector.
- (b) Remove the 3 screws and front No. 1 speaker assy.

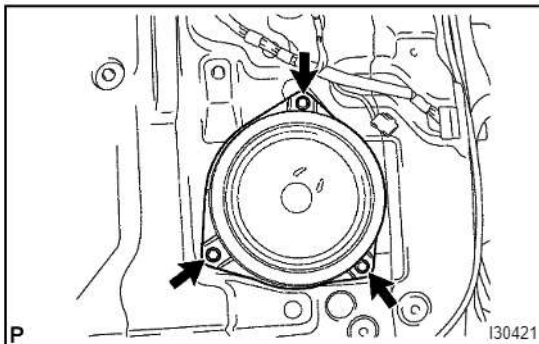

7. INSTALL FRONT NO.1 SPEAKER ASSY


- (a) Install the front No.1 speaker assy with the 3 screws.
- (b) Connect the connector.

FRONT NO.2 SPEAKER ASSY REPLACEMENT

6715V-01

HINT:

- COMPONENTS: See page 67-2
 - Installation is in the reverse order of removal.
1. REMOVE MULTIPLEX NETWORK MASTER SWITCH ASSY (SEE PAGE 75-6)
 2. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (SEE PAGE 75-6)
 3. REMOVE DOOR PULL HANDLE (SEE PAGE 75-6)
 4. REMOVE FRONT DOOR TRIM BOARD SUB-ASSY LH (SEE PAGE 75-6)
 5. REMOVE FRONT DOOR INSIDE HANDLE SUB-ASSY LH (SEE PAGE 75-6)

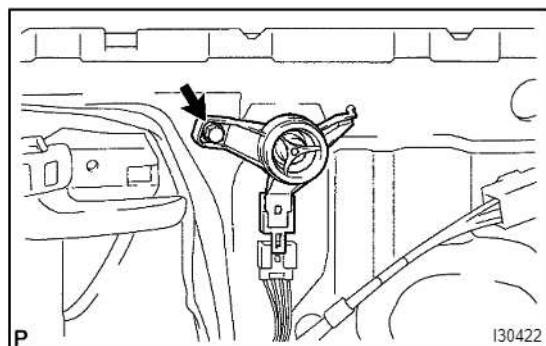

6. REMOVE FRONT NO.2 SPEAKER ASSY


- (a) Disconnect the connector.
- (b) Remove the screw and front No. 2 speaker assy.

REAR SPEAKER ASSY REPLACEMENT

6715W-01


HINT:

- COMPONENTS: See page 75-13
 - Installation is in the reverse order of removal.
1. REMOVE DOOR PULL HANDLE (SEE PAGE 75-13)
 2. REMOVE REAR DOOR TRIM BOARD SUB-ASSY LH (SEE PAGE 75-13)
 3. REMOVE REAR DOOR INSIDE HANDLE SUB-ASSY LH (SEE PAGE 75-13)
 4. REMOVE REAR DOOR SERVICE HOLE COVER LH (SEE PAGE 75-13)

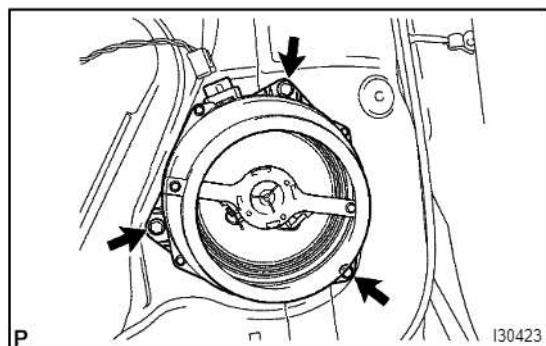

5. REMOVE REAR SPEAKER ASSY

- (a) Disconnect the connector.
- (b) Remove the 3 screws and rear speaker assy.

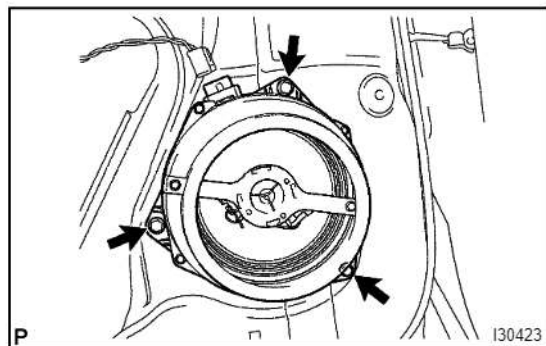

6. INSTALL REAR SPEAKER ASSY

- (a) Install the rear speaker assy with the 3 screws.
- (b) Connect the connector.

AMPLIFIER ANTENNA ASSY REPLACEMENT

6715Y-01


HINT:

- COMPONENTS: See page 76-21
- Installation is in the reverse order of removal.

1. REMOVE ROOF HEADLINING ASSY (SEE PAGE 76-21)


HINT:

Refer to the procedures up to "REMOVE ROOF HEAD LINING ASSY".

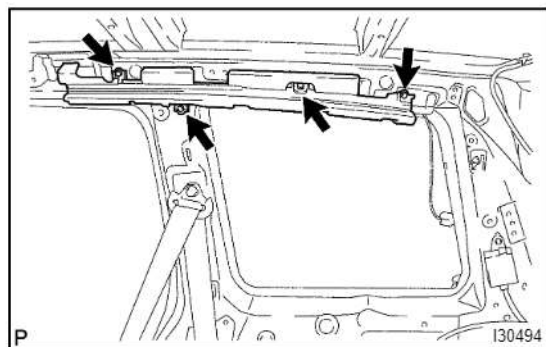

2. REMOVE ROOF SIDE RAIL BRACKET RH

- (a) Remove the 4 bolts and roof side rail bracket RH.

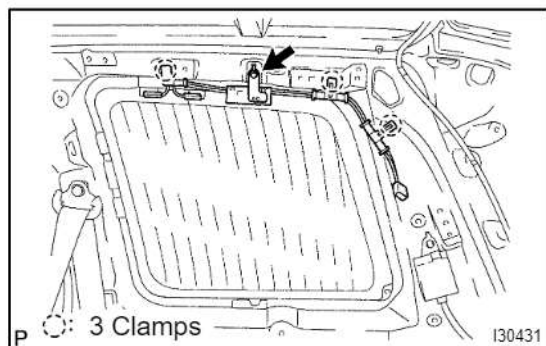

3. REMOVE AMPLIFIER ANTENNA ASSY

- (a) Disconnect the 2 connectors.
(b) Remove the 3 clamps, bolt and amplifier antenna assy.

4. INSTALL ROOF HEADLINING ASSY (SEE PAGE 76-21)

HINT:


Refer to the procedures from "INSTALL ROOF HEAD LINING ASSY".

STEREO COMPONENT AMPLIFIER ASSY REPLACEMENT

67160-01

HINT:

- COMPONENTS: See page 67-2
 - Installation is in the reverse order of removal.
1. REMOVE TONNEAU COVER ASSY (SEE PAGE 76-21)
 2. REMOVE DECK BOARD SUB-ASSY NO.2 (SEE PAGE 76-21)
 3. REMOVE DECK BOARD SUB-ASSY NO.3 (SEE PAGE 76-21)
 4. REMOVE DECK FLOOR BOX REAR (SEE PAGE 76-21)
 5. REMOVE DECK FLOOR BOX FRONT (SEE PAGE 76-21)
 6. REMOVE REAR FLOOR FINISH PLATE (SEE PAGE 76-21)
 7. REMOVE DECK SIDE TRIM BOX RH (SEE PAGE 76-21)
 8. REMOVE DECK TRIM SIDE PANEL ASSY RH (SEE PAGE 76-21)

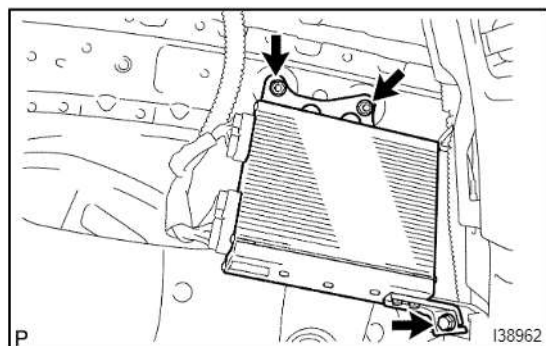

9. REMOVE STEREO COMPONENT AMPLIFIER ASSY
 - (a) Remove the 2 nuts and bolt.
 - (b) Disconnect the connectors, then remove the stereo component amplifier assy.

NAVIGATION ANTENNA ASSY REPLACEMENT

6715Z-01


HINT:

- COMPONENTS: See page 67-2
- Installation is in the reverse order of removal.

1. REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY W/PASSENGER AIR BAG ASSY (SEE PAGE 71-10)

HINT:

Refer to the procedures up to "REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY W/ PASSENGER AIRBAG ASSY".

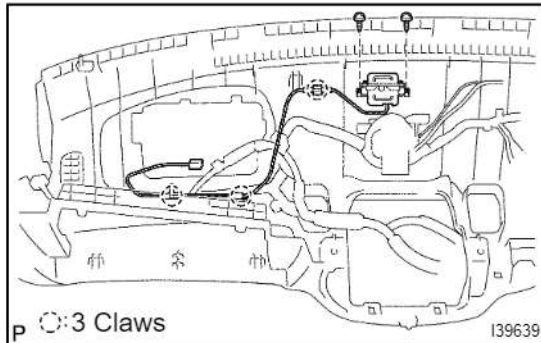

2. REMOVE NAVIGATION ANTENNA ASSY

- (a) Release the 3 clamps and remove the 2 screws and the navigation antenna assy.

3. INSTALL INSTRUMENT PANEL SAFETY PAD SUB-ASSY W/PASSENGER AIR BAG ASSY (SEE PAGE 71-10)

HINT:


Refer to the procedures from "INSTALL INSTRUMENT PANEL SAFETY PAD SUB-ASSY W/ PASSENGER AIRBAG ASSY".

NETWORK GATEWAY ECU REPLACEMENT

67161-01

HINT:

- COMPONENTS: See page [67-2](#)
 - Installation is in the reverse order of removal.
1. **REMOVE GLOVE COMPARTMENT DOOR ASSY (SEE PAGE [71-10](#))**
 2. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER NO.2 (SEE PAGE [71-10](#))**

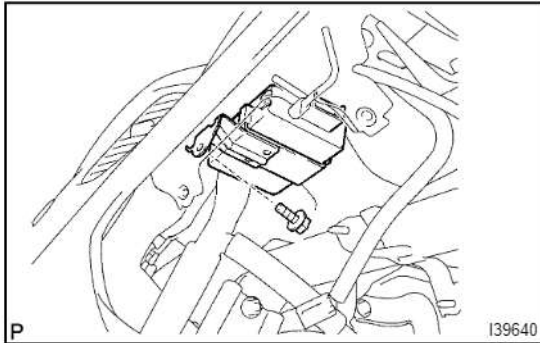


3. **REMOVE NETWORK GATEWAY ECU**
 - (a) Disconnect the connector.
 - (b) Remove the bolt and the network gateway ECU.

POWER OUTLET SOCKET ASSY CTR REPLACEMENT

67168-01

HINT:

- COMPONENTS: See page [67-2](#)
- Installation is in the reverse order of removal.

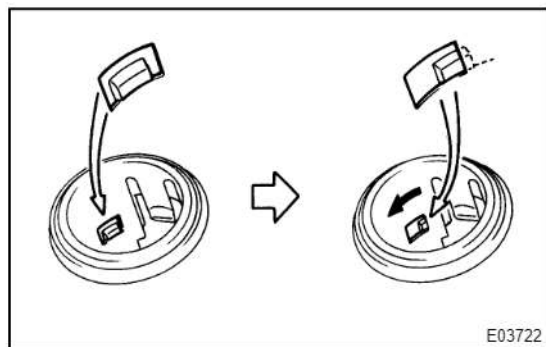**1. REMOVE POWER OUTLET SOCKET ASSY CTR**

- (a) Turn the socket in the circumference direction as shown in the illustration, disengage the claw between the socket and the power point socket cover, and push out the socket to the room side.

2. INSTALL POWER OUTLET SOCKET ASSY CTR

- (a) Align the socket with the notch on the power point socket cover CTR and install the power socket assy CTR by pushing it in as hard as possible.


POWER POINT SOCKET ASSY RR

REPLACEMENT

67169-01

HINT:

- COMPONENTS: See page 67-2
- Installation is in the reverse order of removal.

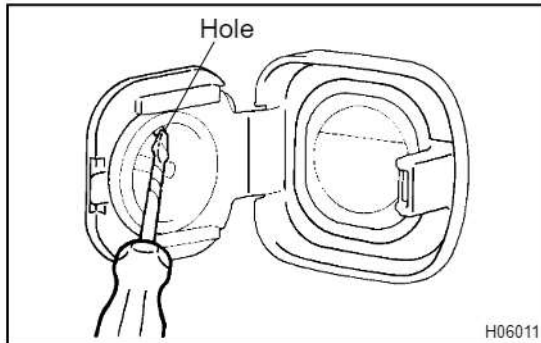


1. REMOVE POWER POINT SOCKET ASSY RR

- Using a screwdriver, disengage the claw on the power point socket cover from the hole in the power point socket, then pull out the power point socket approx. 10 mm (0.39 in.).

HINT:

Tape the screwdriver tip before use.

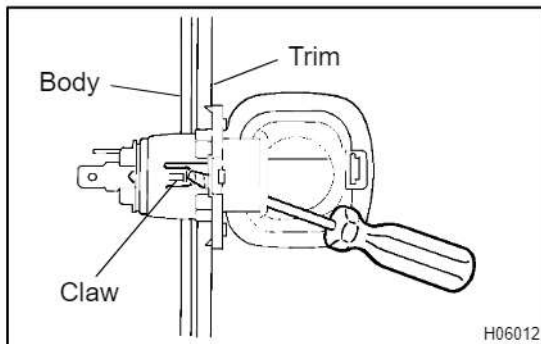


- Using a screwdriver, disengage the claw on the power point socket cover from the body and remove the power point socket and cover as a unit.

HINT:

Tape the screwdriver tip before use.

- Disconnect the connector.
- Disassemble the power point socket from the socket cover.

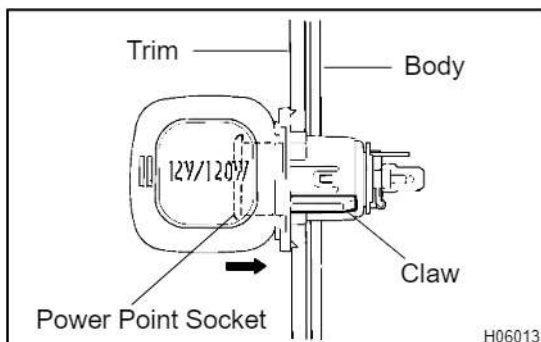

2. INSTALL POWER POINT SOCKET ASSY RR


- Assemble the power point socket to the power point socket cover at the position 10 mm (0.39 in.) away from full lock position and ensure that they are temporarily locked.
- Align the cut-out on the body with the claw on the power point socket cover and install the power point socket and cover to the body.
- After installing them, push in the power point socket approx. 10 mm (0.39 in.) to lock it.

CIGARETTE LIGHTER ASSY REPLACEMENT

67167-01


HINT:

- COMPONENTS: See page 67-2
 - Installation is in the reverse order of removal.
- 1. REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSY CENTER (SEE PAGE 71-10)**

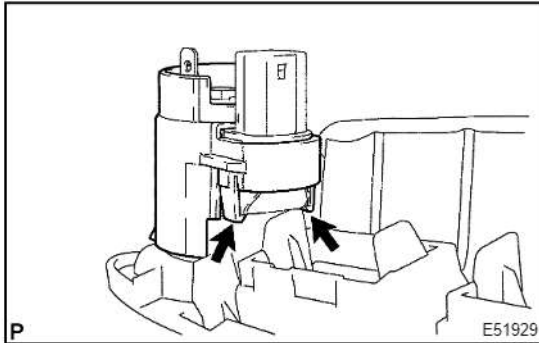

2. REMOVE CIGARETTE LIGHTER ASSY

- (a) Remove the cigarette lighter cover.

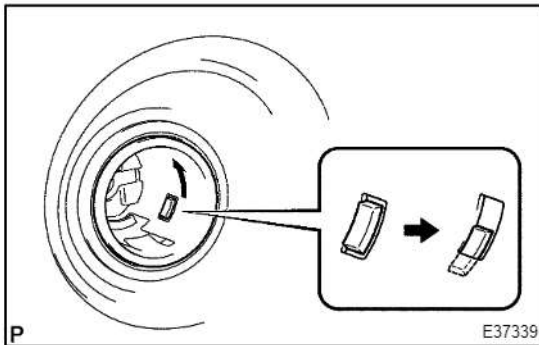

- (b) Disengage the meshing of the cigarette lighter and the cigarette lighter indicator lens by rotating the cigarette lighter assy.
- (c) Pull out the cigarette lighter assy.

3. INSTALL CIGARETTE LIGHTER ASSY

- (a) Aligning the socket with the cutout of the socket cover, fully push it to install.