


Isuzu Hombre 1997 fuse box diagram


Fuse box diagram

Front View

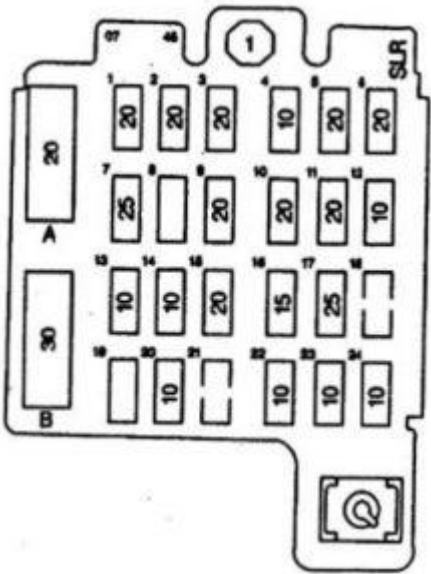

Isuzu Hombre – fuse box diagram – front view

Rear View

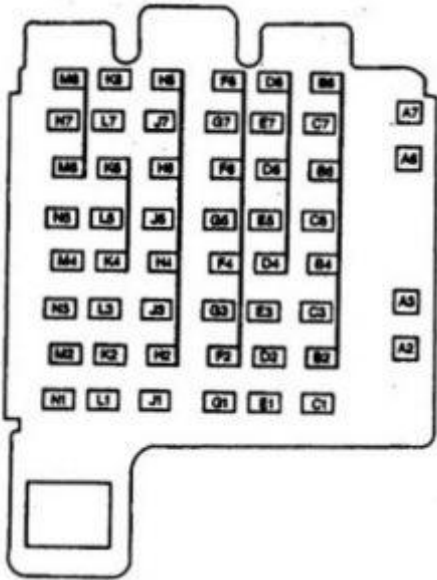

Isuzu Hombre – fuse box diagram – rear view

Fuse/Circuit Breaker	Rating	Function

ECM BAT Fuse 9	20	• Fuel Pump Relay • Fuel Pump Switch And Engine Oil Pressure Gauge Sensor (4.3 L Engine) • Powertrain Control Module (2.2 L Engine) • Vehicle Control Module (4.3 L Engine)
ECM IGN Fuse 10	20	• Crankshaft Position Sensor (4.3 L Engine) • Electronic Ignition Control Module (Electronic Spark Control) (4.3 L Engine) • Electronic Ignition Control Module (W/O Coil) (4.3 L Engine) • Fuel Injector #1 (2.2 L Engine) • Fuel Injector #1 (4.3 L Engine) • Fuel Injector #2 (2.2 L Engine) • Fuel Injector #1 (4.3 L Engine) • Fuel Injector #3 (2.2 L Engine) • Fuel Injector #3 (4.3 L Engine) • Fuel Injector #4 (2.2 L Engine) • Fuel Injector #4 (4.3 L Engine) • Fuel Injector #5 (4.3 L Engine) • Fuel Injector #6 (4.3 L Engine) • Powertrain Control Module (2.2 L Engine) • Vehicle Control Module (4.3 L Engine)
RADIO Fuse 11	20	• Inside Rear View Mirror • Map/Dome Lamp Relay • Radio
BRAKE Fuse 12	10	• Cruise Control Module • Cruise Control Switch (Multi-Function Switch) • Electronic Brake Control Module • TCC/Brake And Cruise Control Release- Switch
RADIO BATT Fuse 13	10	Radio

A/C COMP Fuse 14	10	A/C Compressor Relay
DRL Fuse 15	20	• Daytime Running Lamps Relay
TURN B/U Fuse 16	15	• Backup Lamp Switch (Manual Transmission) • Transmission Range Switch (Park/Neutral Position And Range Switch (Park/Neutral Position And Backup Lamp Switch) • Turn Signal Lamp Flasher
WIPER Fuse 17	25	• Washer Control Switch (Multi-Function Switch) • Windshield Wiper Pulse Control Module • Wiper Control Switch (Multi-Function Switch)
Fuse 18	—	—
Fuse 19	—	—
CRANK Fuse 20	10	• Clutch Pedal Position And Cruise Control Shutoff/Switch • Supplemental Restraint Diagnostic Energy Reserve Module • Transmission Range Switch (Park/Neutral Position And Backup Lamp Switch)
Fuse 21	—	—
AIR BAG Fuse 22	10	• Supplemental Restraint Arming Sensor • Supplemental Restraint Diagnostic Energy reserve Module

ILLUM Fuse 23	10	• Automatic Transmission Position Indicator Lamp • Heater And A/C Controller • Heater Controller • Instrument cluster • Radio • Seat Belts And Ignition Key And Lamps Alarm
TRANS Fuse 24	10	• Automatic Transmission • Instrument Cluster • Park Pawl Actuator (Brake Transmission Shift Interlock Solenoid)
PWR ACCY Circuit Breaker A	20	• Door Lock And Side Win<low Switch, LH • Door Lock And Side Window Switch, RH • Door Lock Relay • Power Sear Acruaror Assembly, LH • Remote Control Door Lock Receiver
PWR WOO Circuit Breaker B	30	• Door Lock And Side Window Switch, LH • Door Lock And Side Window Switch, RH • Side Window Lockoutl Switch
STOP HAZ Fuse 1	20	• Hazard Lamp Flasher • Sear Bells And Ignition Key And Lamps Alarm • TCC Brake And Cruise Control Release Switch

CTSY Fuse 2	20	• Cargo Lamp • Cigareue lighter • Console Counesy Lamp, LF • Console Counesy Lamp, RF • Dome Lamp • Horn Relay • I/P Comparment Lamp • Inside Rear View Mirror • Interior Lamps Control Module • Outside Remote Control Rear View Mirror Switch • Sunshade Mirror lamp, IH • Sunshade Mirror lamp, RH
PK LPS Fuse 3	20	• Headlamp Switch • Underhood Lamp
GAUGES Fuse 4	10	• A/C Compressor Relay • Daytime Running Lamps Control Module • Daytime Running Lamps Relay • Fuel Level Buffer Module • Supplemental Restraint Diagnostic Energy Reserve Module • Instrument Cluster • Interior Lamps Control Module • Seat Belts And Ignition Key And Lamps Alarm

ENG-I Fuse 5	20	• Canshaft Position Sensor (4.3l Engine) • Evaporative Emission Canister Purge Solenoid Valve • Evaporative Emission Canister Vent Solenoid Valve • Exhaust Gas Recirculation Valve (4.3l Engine) • Heated Oxygen Sensor R11 Front (4.3l Engine) • Heated Oxygen Sensor Post Converter (2.2l Engine) • Heated Oxygen Sensor Post Converter (4.3l Engine) • Heated Oxygen Sensor Pre-Converter (4.3l Engine) • Heated Oxygen Sensor R11 Front (4.3l Engine) • Mass Air Flow Sensor (4.3l Engine) • Vehicle Control Module (4.3l engine)
HTR A/C Fuse 6	20	• Air Temperature Valve Electric Actuator • Heater And A/C Controller • Heater Controller
PWR AUX Fuse 7	25	• Auxiliary Power Outlet LH • Auxiliary Power Outlet RH • Data Link Connector
Fuse 8	—	—